



# ALTAIR

Altair<sup>®</sup> FluxMotor<sup>®</sup> 2022.2

Motor Catalog

General user information

## Contents

<b>1</b>	<b>Motor catalog overview</b>	<b>4</b>
<b>1.1</b>	<b>Main areas of Motor Catalog</b>	<b>4</b>
1.1.1	Overview	4
1.1.2	CATALOG area of the Motor Catalog application	5
1.1.3	MOTORS area of the Motor Catalog application	5
<b>1.2</b>	<b>How to get into Motor Catalog?</b>	<b>7</b>
<b>2</b>	<b>Management of catalogs</b>	<b>8</b>
<b>2.1</b>	<b>Overview</b>	<b>8</b>
2.1.1	Main areas	8
2.1.2	Direct access to main functions	9
2.1.3	Expanding the menu in Motor Catalog	10
<b>2.2</b>	<b>Reference commands</b>	<b>11</b>
2.2.1	Create a new catalog	11
2.2.2	Load a catalog	12
2.2.2.1	Introduction	12
2.2.2.2	How to load a catalog?	12
2.2.3	Unload or Delete a catalog	13
2.2.3.1	Introduction	13
2.2.3.2	How to Unload or Delete a catalog?	13
2.2.4	Set catalog as favorite	14
2.2.4.1	Introduction	14
2.2.4.2	How to set a catalog as favorite?	14
<b>2.3</b>	<b>General Data information</b>	<b>15</b>
<b>2.4</b>	<b>Attachments</b>	<b>16</b>
2.4.1	Introduction	16
2.4.2	How to create an attachment?	16
2.4.3	Management of attachments	17
<b>3</b>	<b>Management of motors</b>	<b>18</b>
<b>3.1</b>	<b>Overview</b>	<b>18</b>
3.1.1	Main areas	18
<b>3.2</b>	<b>Reference commands</b>	<b>19</b>
3.2.1	Edit a motor	19
3.2.1.1	Motor from the reference catalogs	19
3.2.1.2	Motor from User's catalogs	19
3.2.2	Create a New motor	20
3.2.3	Duplicate	22
3.2.4	Import a motor from another catalog	24
3.2.5	Delete motor from a catalog	26
<b>3.3</b>	<b>Compare motors</b>	<b>27</b>
3.3.1	Overview	27
3.3.2	Content management	28
3.3.3	Compare	29
<b>3.4</b>	<b>Attachments</b>	<b>30</b>
3.4.1	Introduction	30
3.4.2	How to create an attachment?	30

3.4.3	Management of attachments	31
<b>4</b>	<b>External links</b>	<b>32</b>
<b>4.1</b>	<b>Browse</b>	<b>32</b>
4.1.1	Overview	32
4.1.2	Contents of folders	33
4.1.2.1	Overview	33
4.1.2.2	Folder organization	34

# 1 MOTOR CATALOG OVERVIEW

## 1.1 Main areas of Motor Catalog

### 1.1.1 Overview

Motor Catalog is a dedicated application to allow an effective management of machines.

 

Reference catalogs are available:

- For instance, catalogs in which a few motors for automotive applications are stored. All these motors are characterized by general data and performance.
- There are also catalog like “Gallery” of motors characterized by their general data.


Motor Catalog consists of two main areas:

- The CATALOG area to manage the catalogs
- The MOTORS area to visualize and manage all the motors stored in the selected catalogs


To reach one of these areas, just click on the corresponding button.

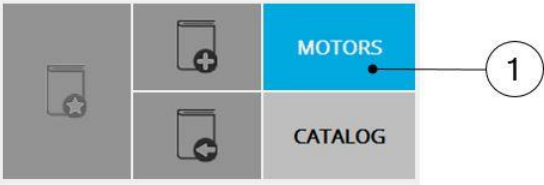	1	Get into the MOTORS area.
	2	Get into the CATALOG area.


### 1.1.2 CATALOG area of the Motor Catalog application

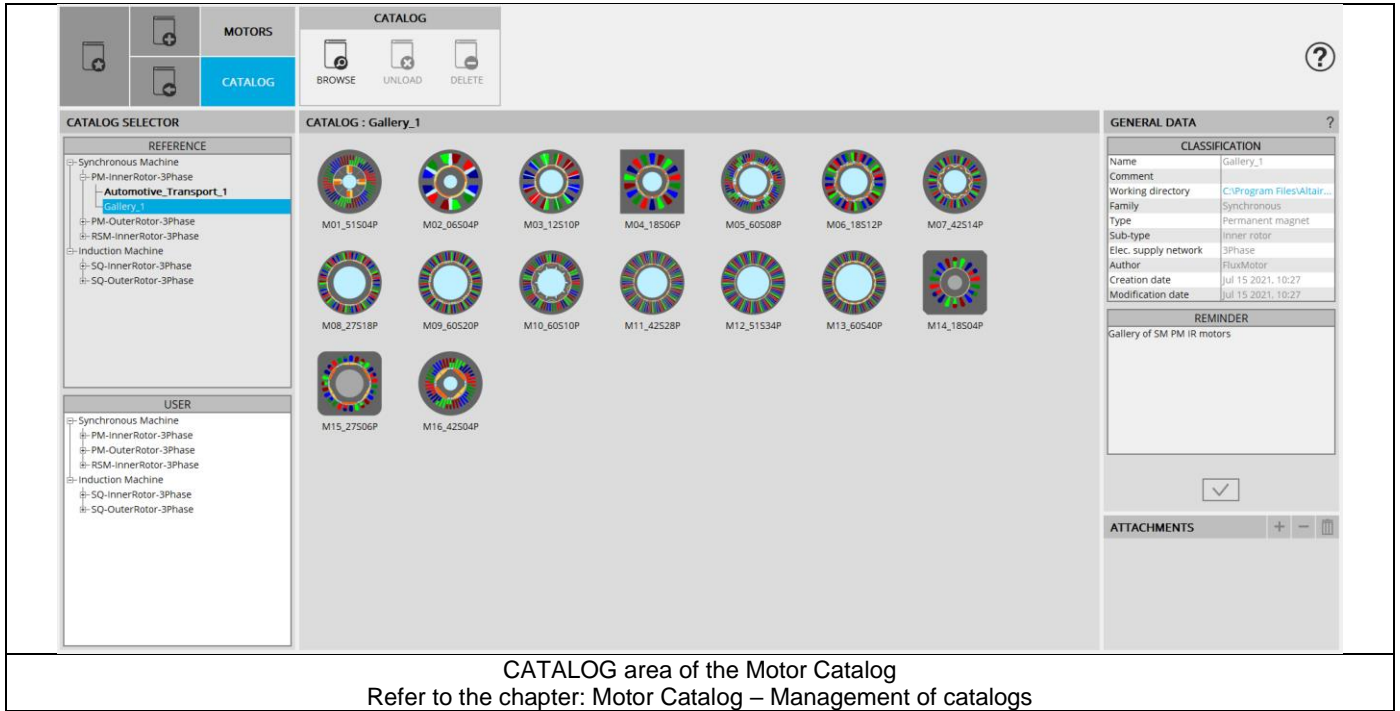 



### 1.1.3 MOTORS area of the Motor Catalog application

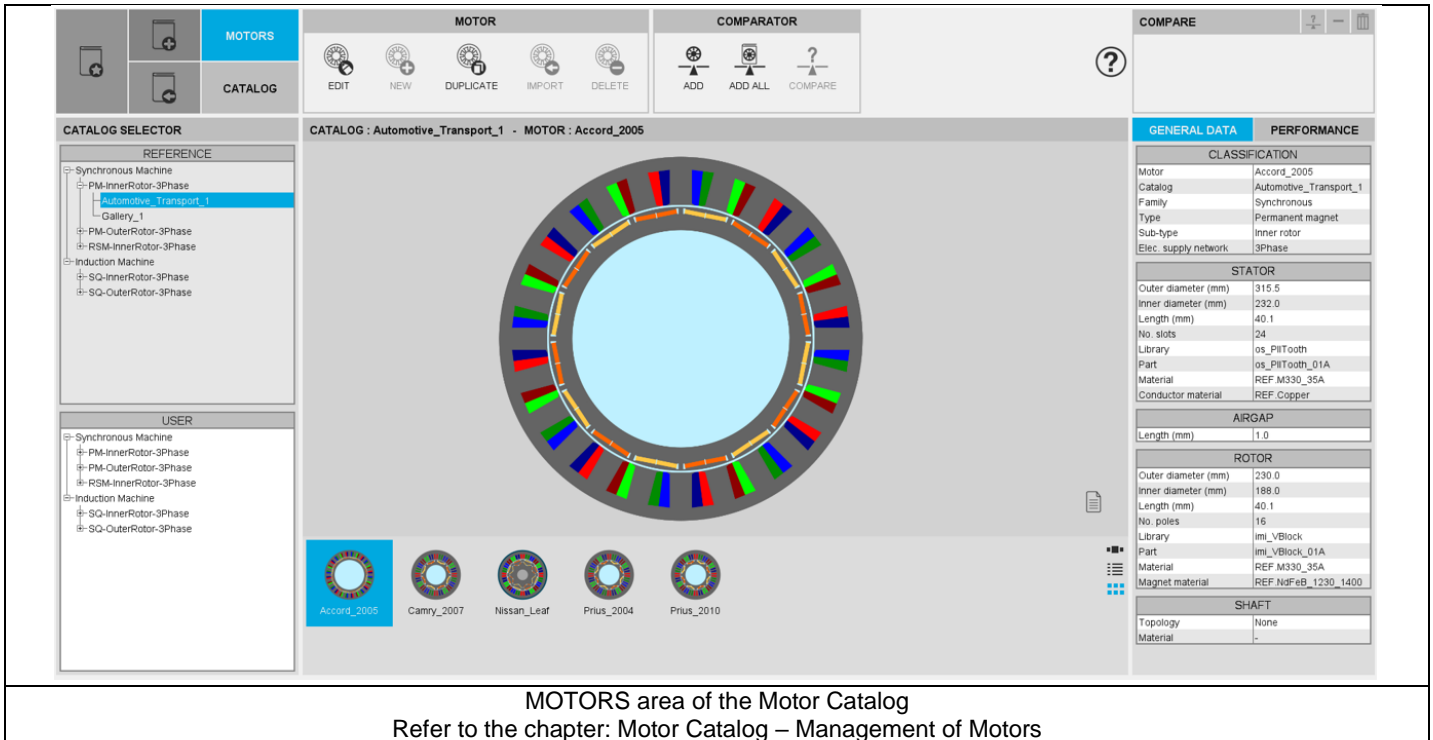 

 Note: Three different ways are proposed to display and visualize the motors. They are illustrated below:

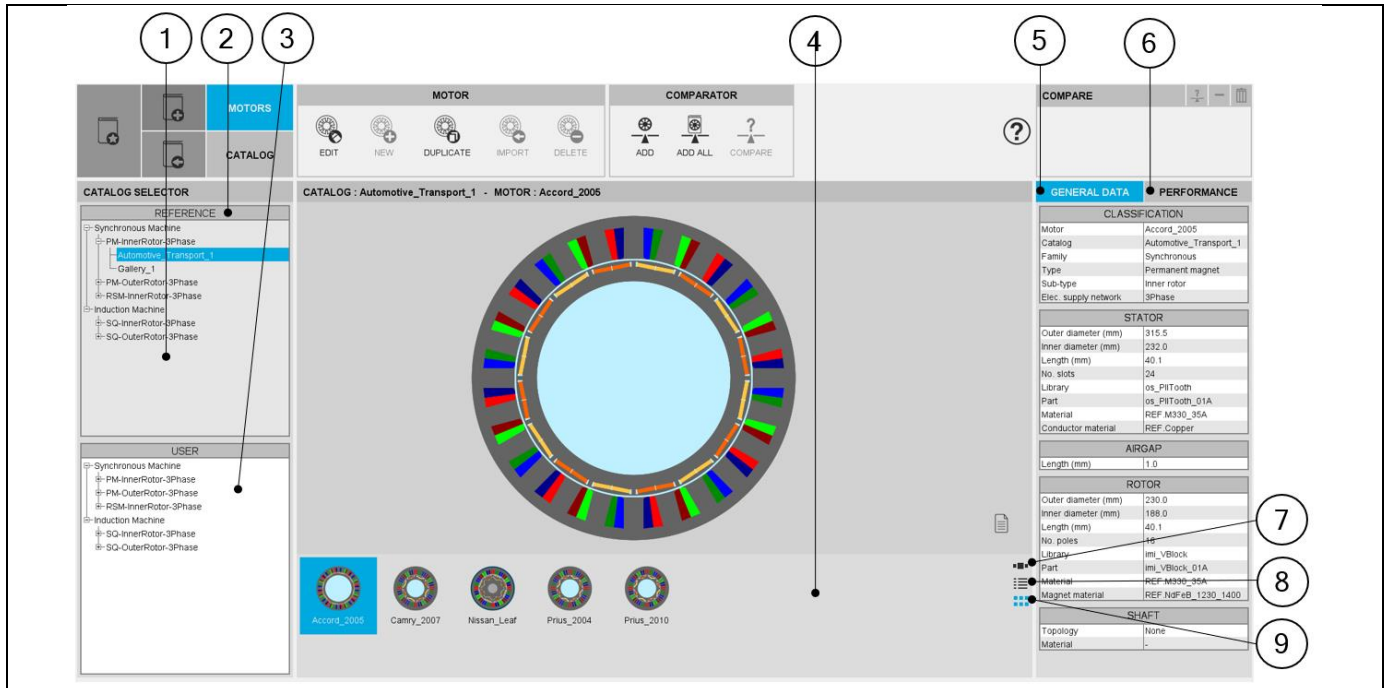


How to visualize motors?

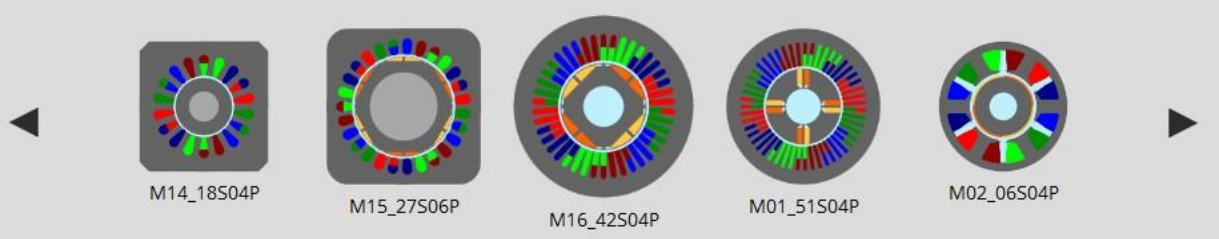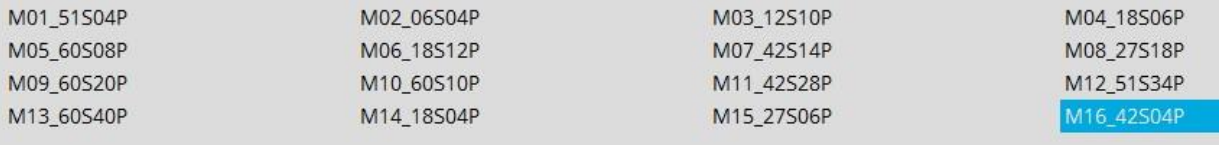  1	Selections of catalog for motors are displayed.
2	Reference catalogs available with FluxMotor®.
3	User's catalogs.
4	All the motors of the selected catalog are displayed in this area. Three ways are proposed to display and visualize the motors.
5	General data of the selected motor is displayed.
6	Performance of the selected motor is displayed. Note: Performance are displayed only if the datasheet test has been performed. See information on the Motor Factory user guide (TEST environment).
7	Button to display thumbnails as a slide show: 
8	Button to display thumbnails as a list: 
9	Button to display thumbnails as a matrix view of pictures is illustrated in our example.

## 1.2 How to get into Motor Catalog?

 Access to Motor Catalog is possible from the supervisor.  
From the supervisor, click on the button "Motor Catalog".

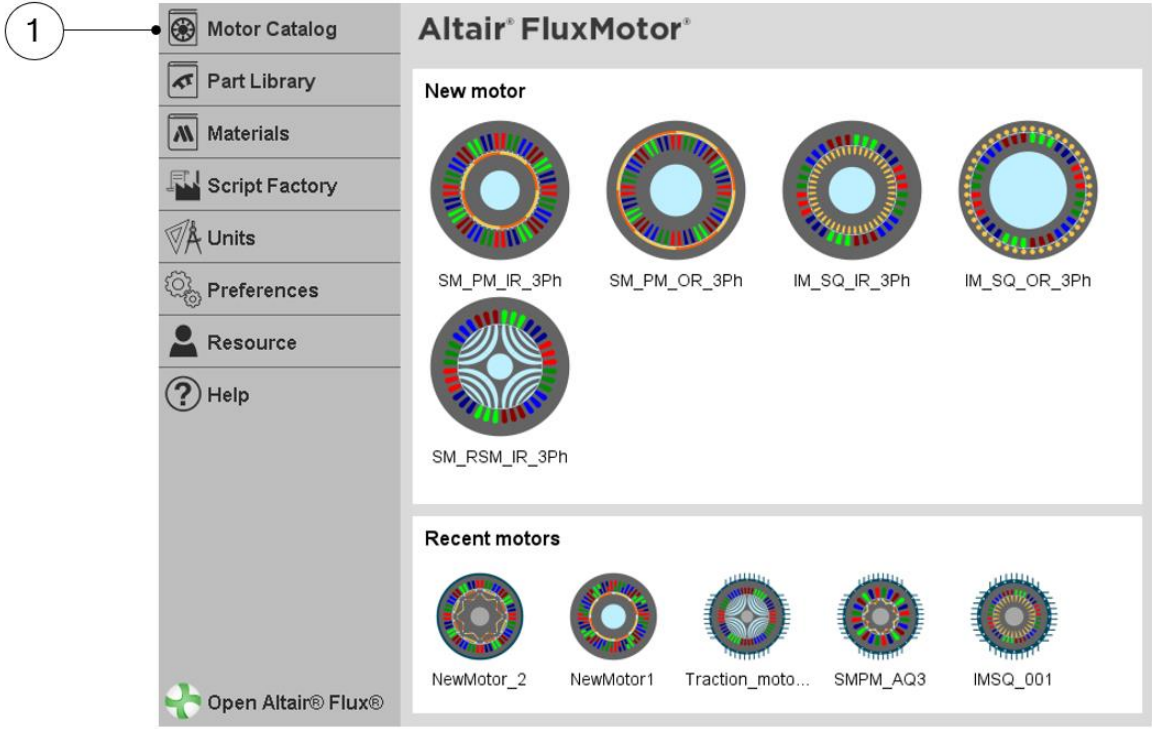

The screenshot displays the Altair FluxMotor software interface. On the left is a vertical navigation menu with the following items: Motor Catalog (highlighted with a circled '1'), Part Library, Materials, Script Factory, Units, Preferences, Resource, and Help. At the bottom of the menu is the 'Open Altair® Flux®' button. The main area is titled 'Altair® FluxMotor®' and contains two sections: 'New motor' and 'Recent motors'. The 'New motor' section shows five motor icons with labels: SM\_PM\_IR\_3Ph, SM\_PM\_OR\_3Ph, IM\_SQ\_IR\_3Ph, IM\_SQ\_OR\_3Ph, and SM\_RSM\_IR\_3Ph. The 'Recent motors' section shows five motor icons with labels: NewMotor\_2, NewMotor1, Traction\_moto..., SMPM\_AQ3, and IMSQ\_001.


1	Get into Motor Catalog from the supervisor by clicking on Motor Catalog button and directly get into the motor manager.
---	---

## 2 MANAGEMENT OF CATALOGS
 
### 2.1 Overview

#### 2.1.1 Main areas

Here are the main zones that compose “CATALOG” environment of the Motor Catalog.

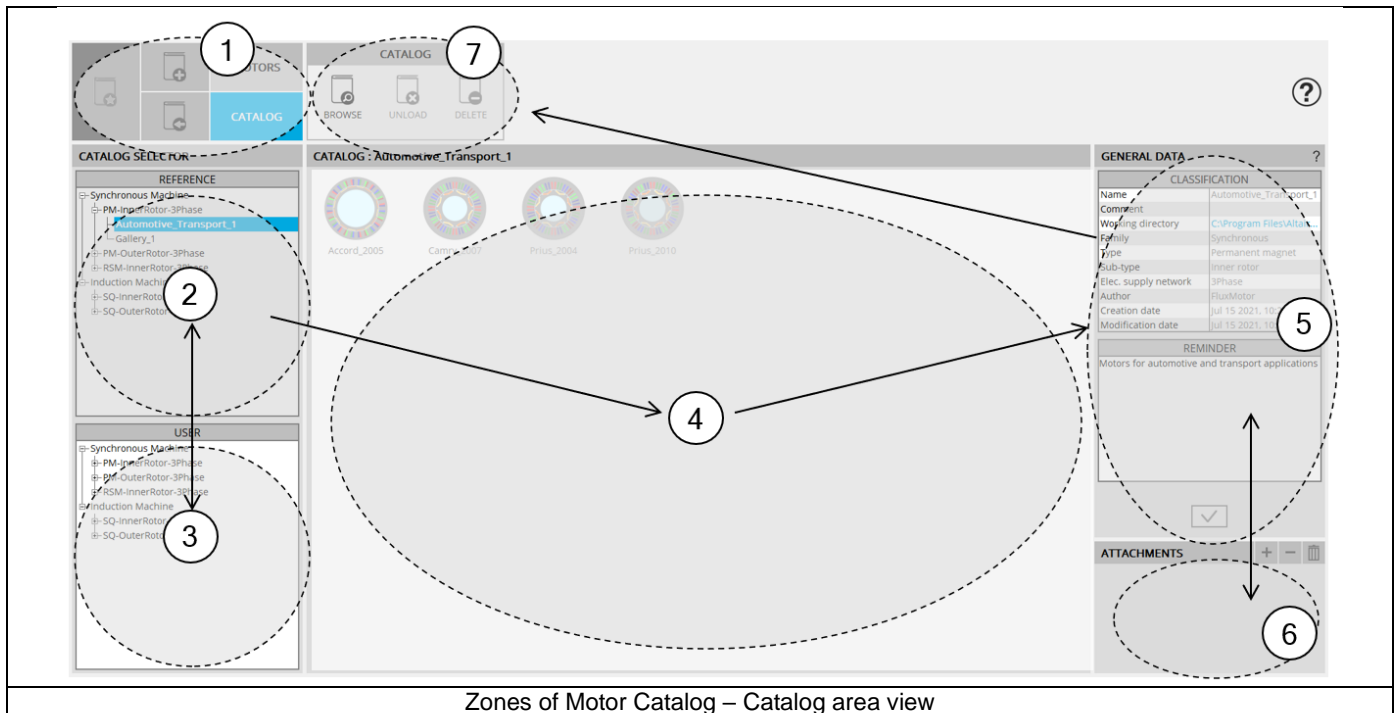


Zone 1	<p>Motor Catalog has two main environments: CATALOG and MOTORS. When CATALOG is selected = Blue color Catalog environment of Motor Catalog is displayed. Moreover, three main functions are available from the top of this panel:</p> <ul style="list-style-type: none"> <li>• Create a new catalog,</li> <li>• Load a catalog</li> <li>• Set catalog as favorite</li> </ul>
Zone 2	<p>Reference catalogs are available. <b>Selections of catalogs must be done in this field.</b> Motors of these catalogs are read only. However, they can be copied and moved into user's catalogs.</p>
Zone 3	<p>User's catalogs. <b>Selections of catalogs must be done in this field.</b> The users can create new catalogs. See the process in the chapter “Reference commands”.</p>
Zone 4	<p>Visualization of all the motors (thumbnails) are stored in the selected catalog.</p>
Zone 5	<p>Information relative to the selected catalog. “Reminder” is an area in which a memo can be written if needed. Note: The working folder is accessible for all the catalogs.</p>
Zone 6	<p>It is possible to attach documents to the selected catalog (pictures, pdf files etc.).</p>
Zone 7	<p>Catalogs can be managed from this area:            UNLOAD catalog means to cut the link between the catalog files and the CATALOG environment.            DELETE catalog means destroy the links and all the associated files and folders.            BROWSE allows reaching directly the folder in which stored data of the selected catalog are available.</p>



## 2.1.2 Direct access to main functions

 All the functions listed below are described in the section dedicated to reference commands.


Note: These commands are available in CATALOG environment as well as in MOTORS environment.

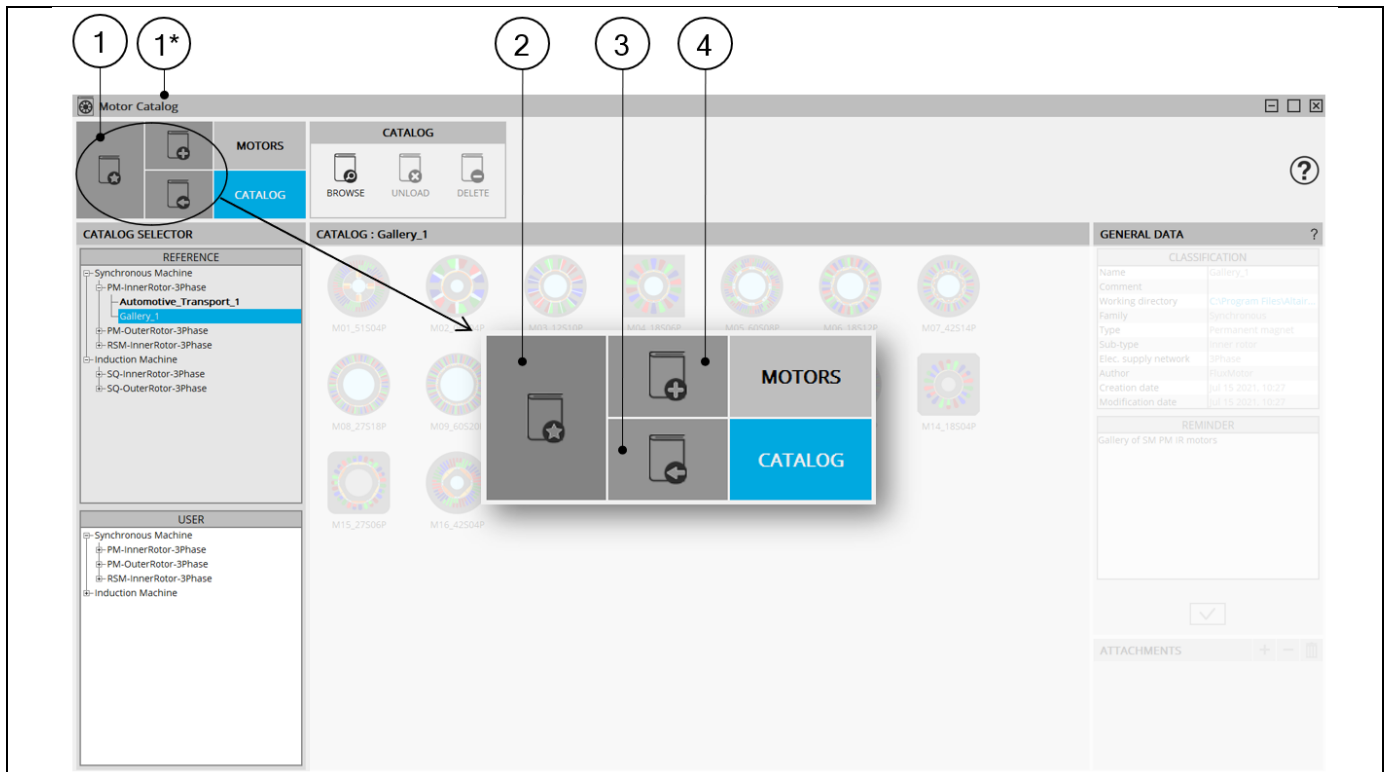

1	<p>Click on one of the three main buttons to use some main system functions.</p> <ul style="list-style-type: none"> <li>• Book with a star = Set catalog as favorite</li> <li>• Book with sign + = Create a new catalog</li> <li>• Book with arrow = Load a catalog</li> </ul> <p>Note: These three functions are available in the CATALOG and MOTORS areas.</p>
1*	Clicking on this zone allows access to the main menu.
2	Set catalog as favorite. The selected catalog (bold characters) is opened. See the process in the chapter "Reference commands".
3	Load a catalog from a folder. See the process in the chapter "Reference commands".
4	Create a new catalog. See the process in the chapter "Reference commands".

### 2.1.3 Expanding the menu in Motor Catalog

 
This menu gives access to system functions related to help and exit.

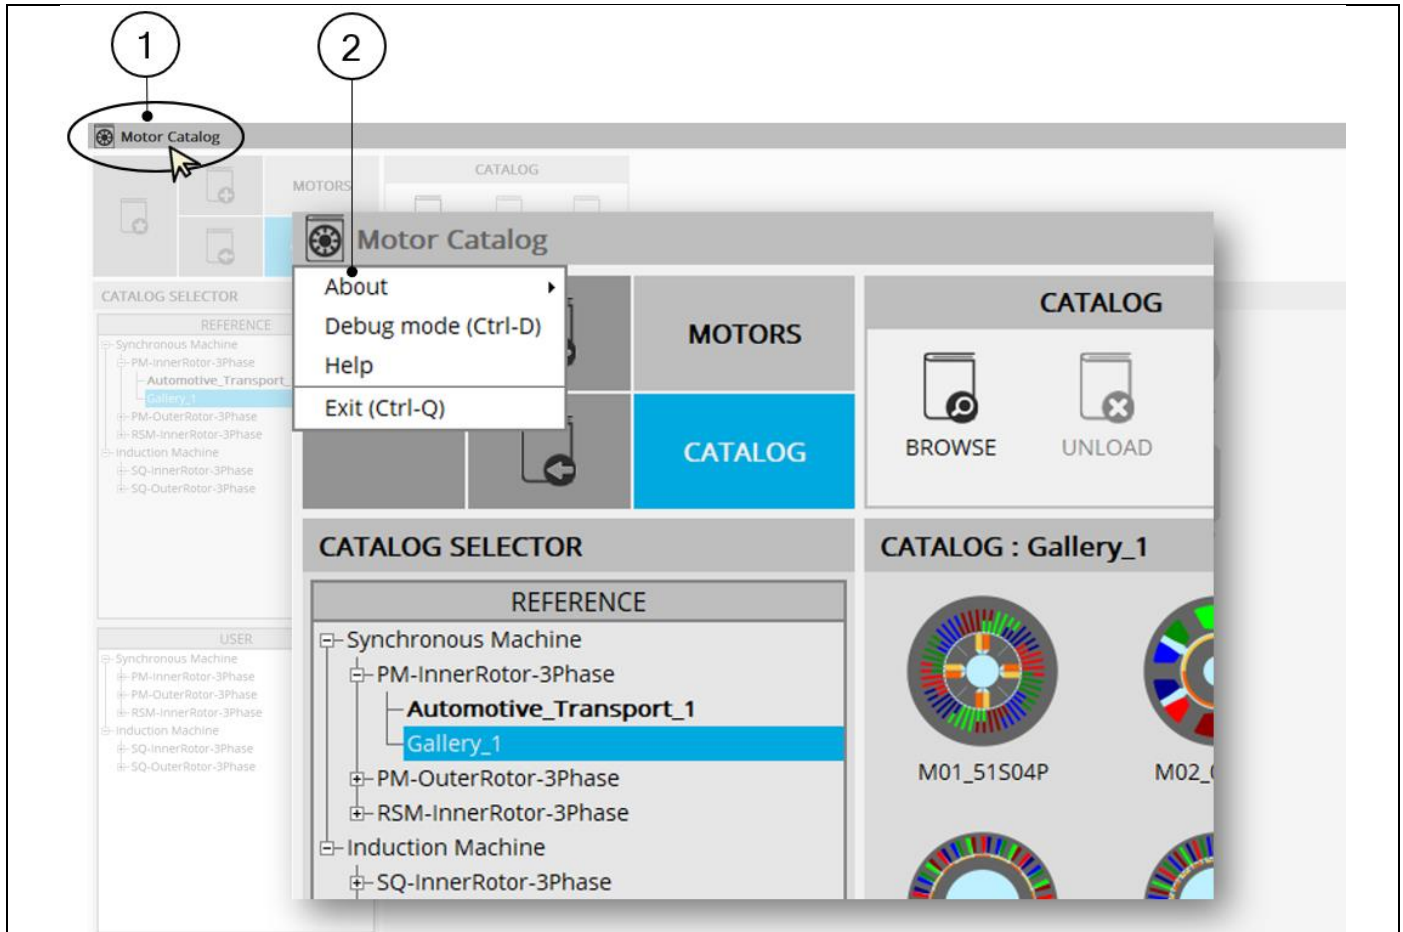

1	Expand the menu on the left top part of Motor Catalog in both areas: CATALOG or MOTORS.
2	List of actions available: <ul style="list-style-type: none"> <li>• About</li> <li>• Debug mode</li> <li>• Help to open the online help documentation directly on the chapter dealing with Motor Catalog</li> <li>• Exit for closing Motor Catalog from the top menu of Motor Catalog</li> </ul>
☒	Close Motor Catalog is also possible by using this icon on the right top part of the Motor Catalog panel.
*	Close Motor Catalog is also possible by using the shortcut CTRL-Q defined in the user preferences. For more information, refer to the chapter “user’s preferences”.

## 2.2 Reference commands
 
### 2.2.1 Create a new catalog

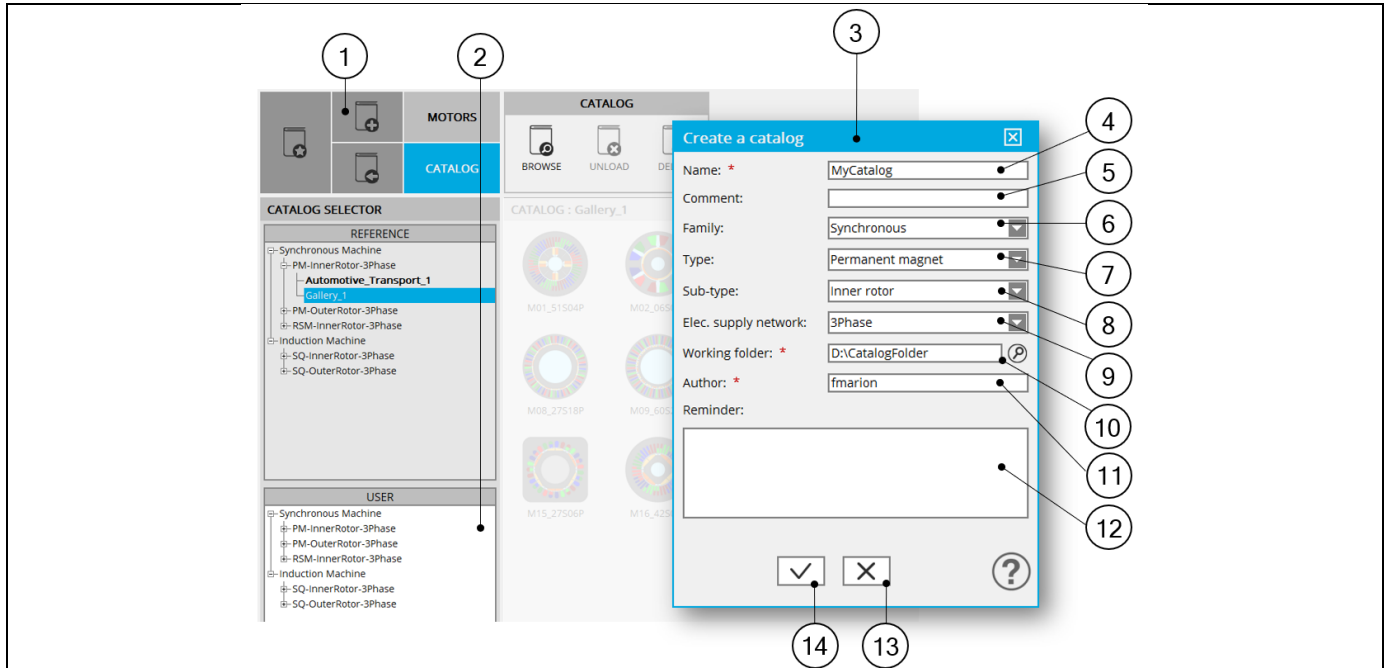

#### How to create a new catalog?

1	Click on the button "create a new catalog" (Shortcut Ctrl - C).
2	The new catalog will be stored in user's catalog.
3	Clicking on the button "Create a new catalog" opens a dedicated dialog box.
4	A catalog is defined by a name.
5	A comment can be added if needed (it will be the tooltip of the created catalog).
6	Select the family of machines to be considered (Synchronous / Induction)
7	Select the type of machine to be considered
8	Select the sub-type of machine to be considered
9	Select the electrical supply network number of phases to be considered
10	Select the folder in which you want to store the new Catalog
11	Set the author of this new catalog.
12	A reminder allows you for keeping important notes to know what was considered in the new catalog.
13	Button to apply inputs, create the new catalog and close the dialog box.
14	Button to close the dialog box and to cancel the creation of the catalog.

Note 1: Once created, the catalog corresponds to a folder ("MyCatalog" in our example) in which data are stored about the motors. The catalog folder is stored in a parent folder ("CatalogFolder" in our example).

Note 2: The "Motors" are stored in the catalog folder (folder "Motors").

 
All the data corresponding to a motor, like the associated materials, parts, are stored in a specific folder. There are also the "Attachments" (folder "Attachments") joined to the motor by the user.

## 2.2.2 Load a catalog

### 2.2.2.1 Introduction

As explained in the previous chapter, a catalog corresponds to a folder in which data are stored about the motors. Load a catalog allows to create a link between the folder corresponding to the catalog and the Motor Catalog application.

### 2.2.2.2 How to load a catalog?

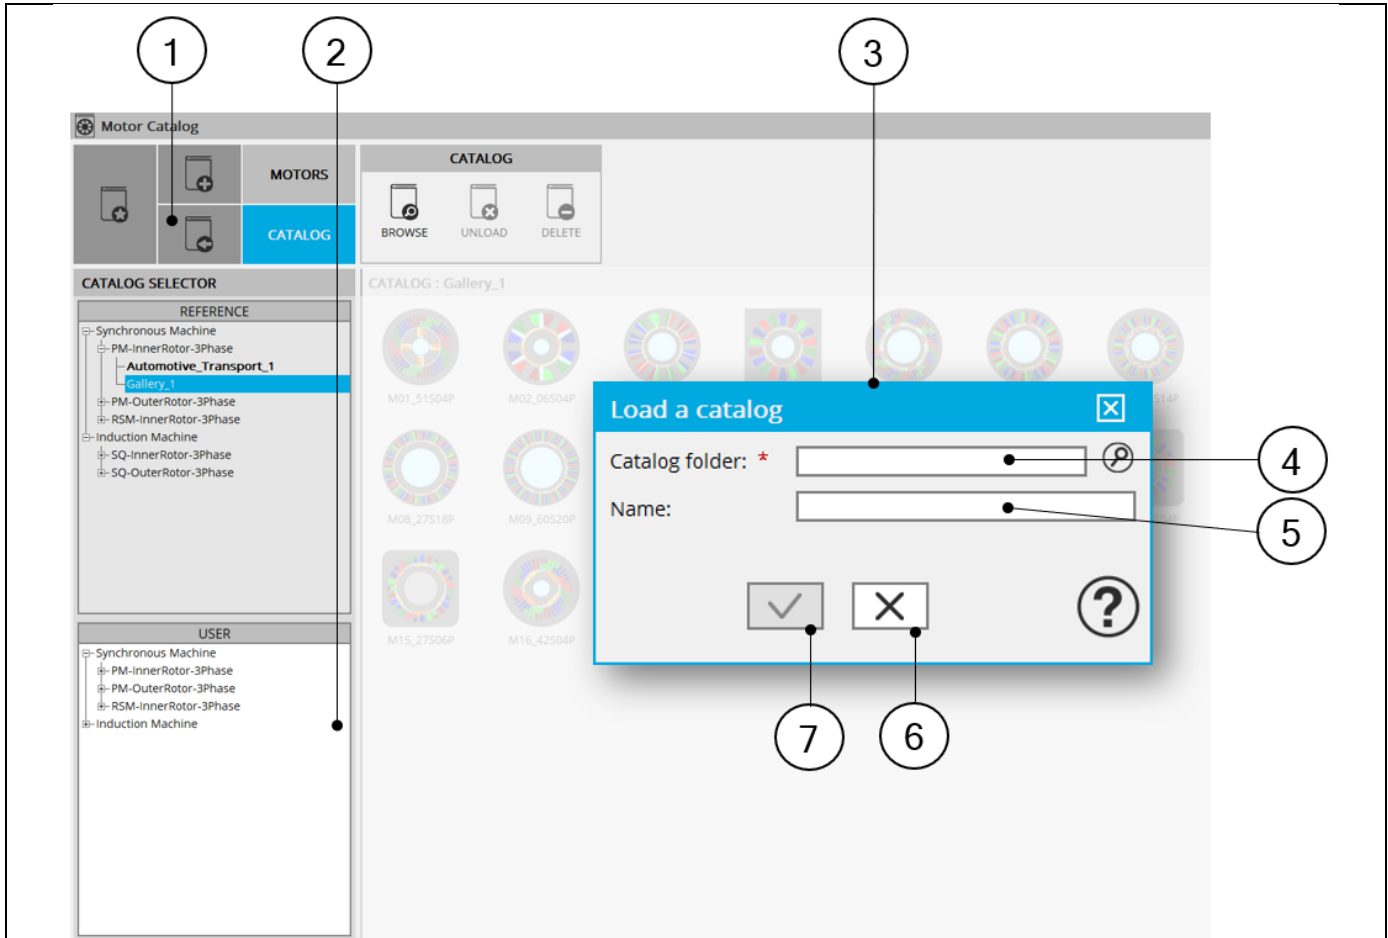

How to load a catalog?

1	Click on the button "Load a catalog".
2	The catalog is loaded in user's catalog.
3	Clicking on the button "Load a catalog" opens a dedicated dialog box.
4	The folder in which the targeted catalog is stored must be selected.
5	The name which will be assigned to the loaded catalog.
6	Button to close the dialog box and to cancel the loading of the catalog.
7	Button to apply inputs, load the new catalog and close the dialog box.


## 2.2.3 Unload or Delete a catalog
 
### 2.2.3.1 Introduction

Unload a catalog means to cut the link between the folder corresponding to the catalog and Motor Catalog application. However, the folder is not removed. It still exists after having been unloaded and it can be reloaded if needed.

Delete a catalog means to remove the folder corresponding to the catalog. In that case all its content will be deleted and can't be reloaded.

### 2.2.3.2 How to Unload or Delete a catalog?

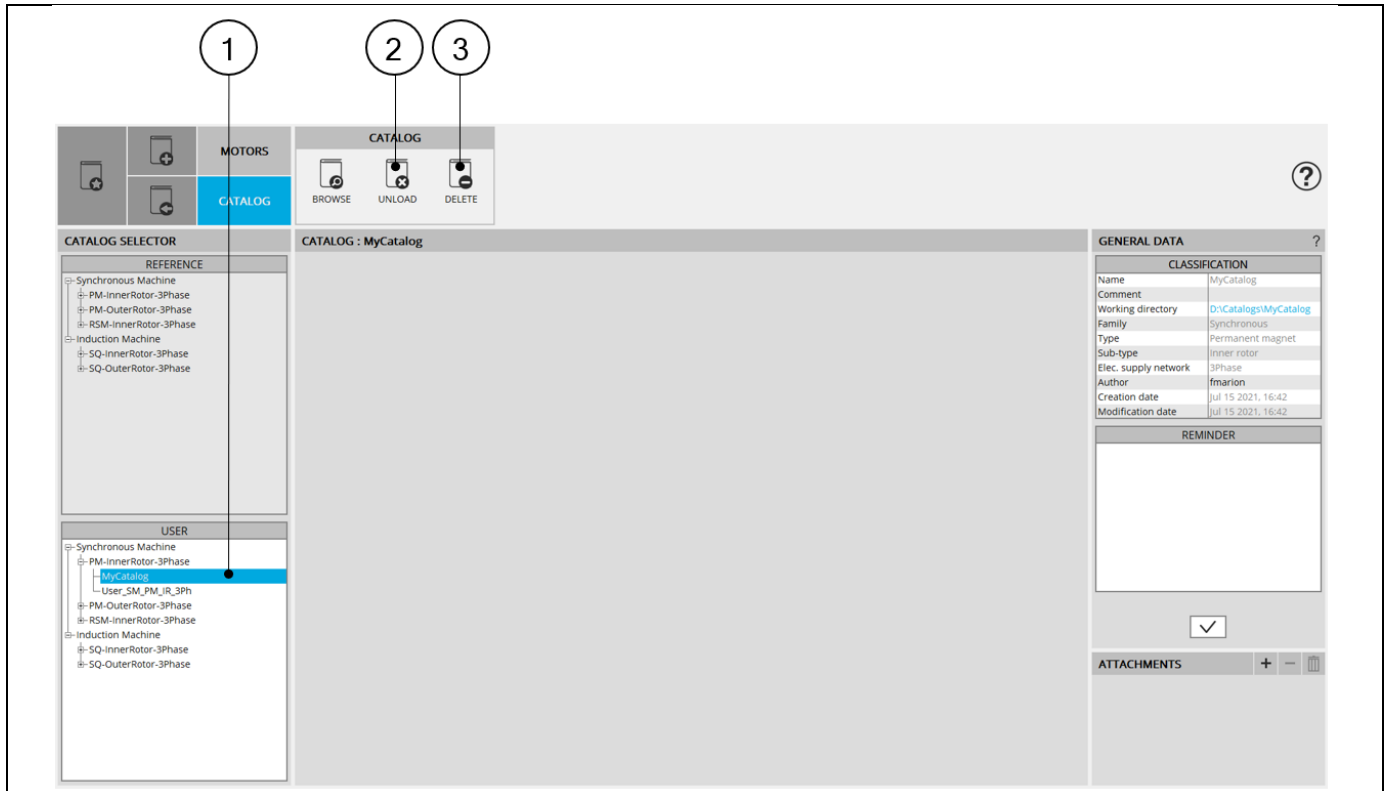

How to Unload or Delete a catalog?


1	Selection of the catalog to Unload or to Delete.
2	Button to Unload the selected catalog.
3	Button to Delete the selected catalog.

## 2.2.4 Set catalog as favorite
 
### 2.2.4.1 Introduction

Setting a catalog as favorite allows opening this catalog in first, when opening Motor Catalog.

### 2.2.4.2 How to set a catalog as favorite?

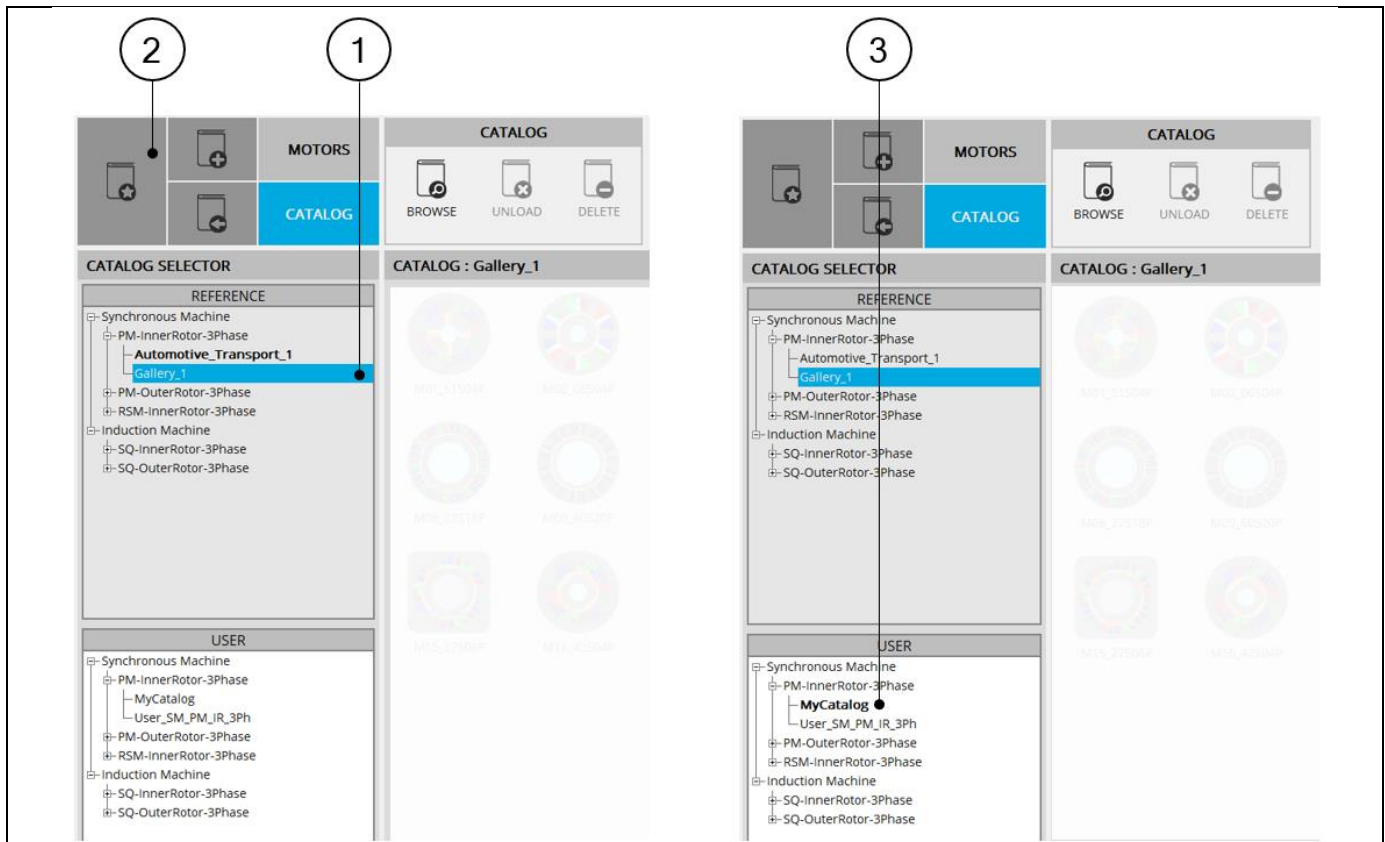

How to set catalog as favorite?

1	Selection of the catalog to set as favorite.
2	Click on the button to set the selected catalog as favorite.
3	The name of the favorite catalog is written in bold text. Note: There is one favorite catalog.

## 2.3 General Data information

General Data information allows giving some reference data for catalogs. They are described below.

The screenshot shows a 'GENERAL DATA' dialog box with a question mark icon in the top right corner. It is divided into three main sections:

- CLASSIFICATION:** A table with the following fields:
 

Name	Gallery_1
Comment	
Working directory	<a href="#">C:\Program Files\Altair...</a>
Family	Synchronous
Type	Permanent magnet
Sub-type	Inner rotor
Elec. supply network	3Phase
Author	FluxMotor
Creation date	Mar 12 2019, 20:03
Modification date	Mar 12 2019, 20:03
- REMINDER:** A text area containing the text 'Gallery of inner rotor motor samples'.
- Save Button:** A button with a checkmark icon.

Callout circles 1, 2, and 3 are positioned to the right of the dialog, with lines pointing to the 'Name' field, the 'REMINDER' text area, and the save button, respectively.

### Catalog information

1	<p>General information:</p> <ul style="list-style-type: none"> <li>Name of the catalog</li> <li>Working folder in which all the data dealing with the catalog are stored. Note: Clicking on this link allows directly reaching the corresponding folder.</li> <li>Author: Modifiable only for User's catalogs</li> <li>Creation and Modification date</li> </ul>
2	<p>Area in which it is possible to write a memo. Note: Only available for User's catalogs.</p>
3	<p>Button to save the changes in the REMINDER and/or Author fields.</p>

## 2.4 Attachments


### 2.4.1 Introduction

Documents can be attached to User's catalogs. This allows quickly reaching for additional information to describe these catalogs.

Note 1: Documents can be attached only to user's catalogs.

Note 2: Documents can be linked to catalogs as well as to motors. See chapter Management of motors.
 
### 2.4.2 How to create an attachment?

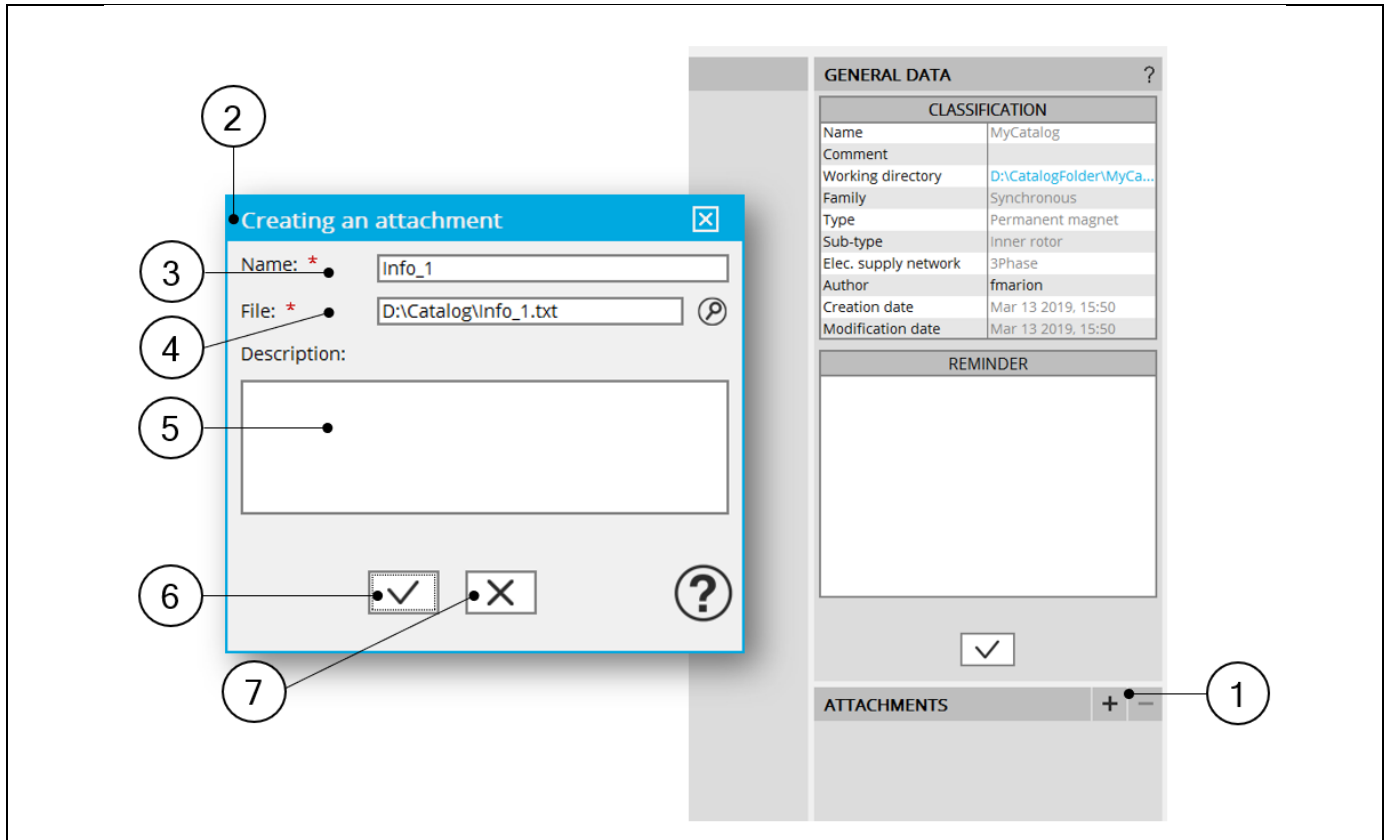


Creation of an attachment

1	Button (+) to add an attached document.
2	A dedicated dialog box allows adding a new attached document. All kind of documents can be attached (like word, excel, pdf or text files, pictures etc.).
3	Give a name to the attached document.
4	Select the folder in which is stored the document to be attached.
5	It is possible to write a reminder dealing with the attached document.
6	Button to apply inputs, create the new attachment and close the dialog box.
7	Button to cancel the creation of the attachment.



## 2.4.3 Management of attachments

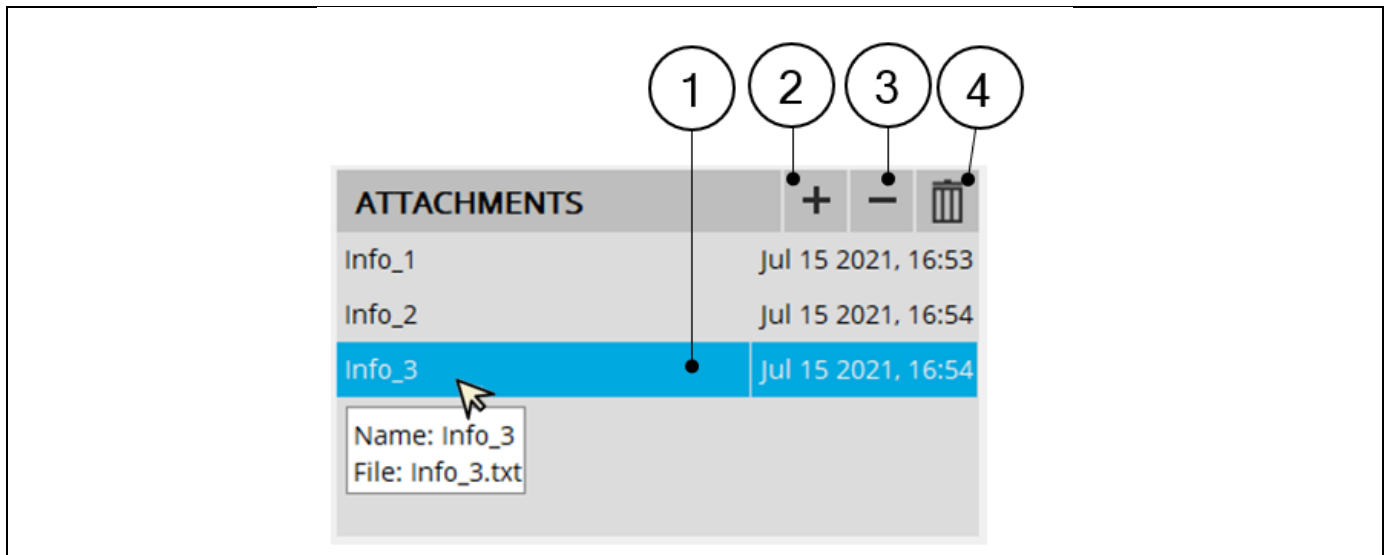 

Management of attachments


1	Selection of an attached document. Once selected, a tooltip reminds the name and the description of the selected document.
2	Button (+) to add an attachment (see the previous section).
3	Button (-) to remove one or several attachments.
4	Button for removing the selected attached file.

## 3 MANAGEMENT OF MOTORS
 
### 3.1 Overview

#### 3.1.1 Main areas

Here are the main zones that compose “MOTORS” environment of the Motor Catalog.

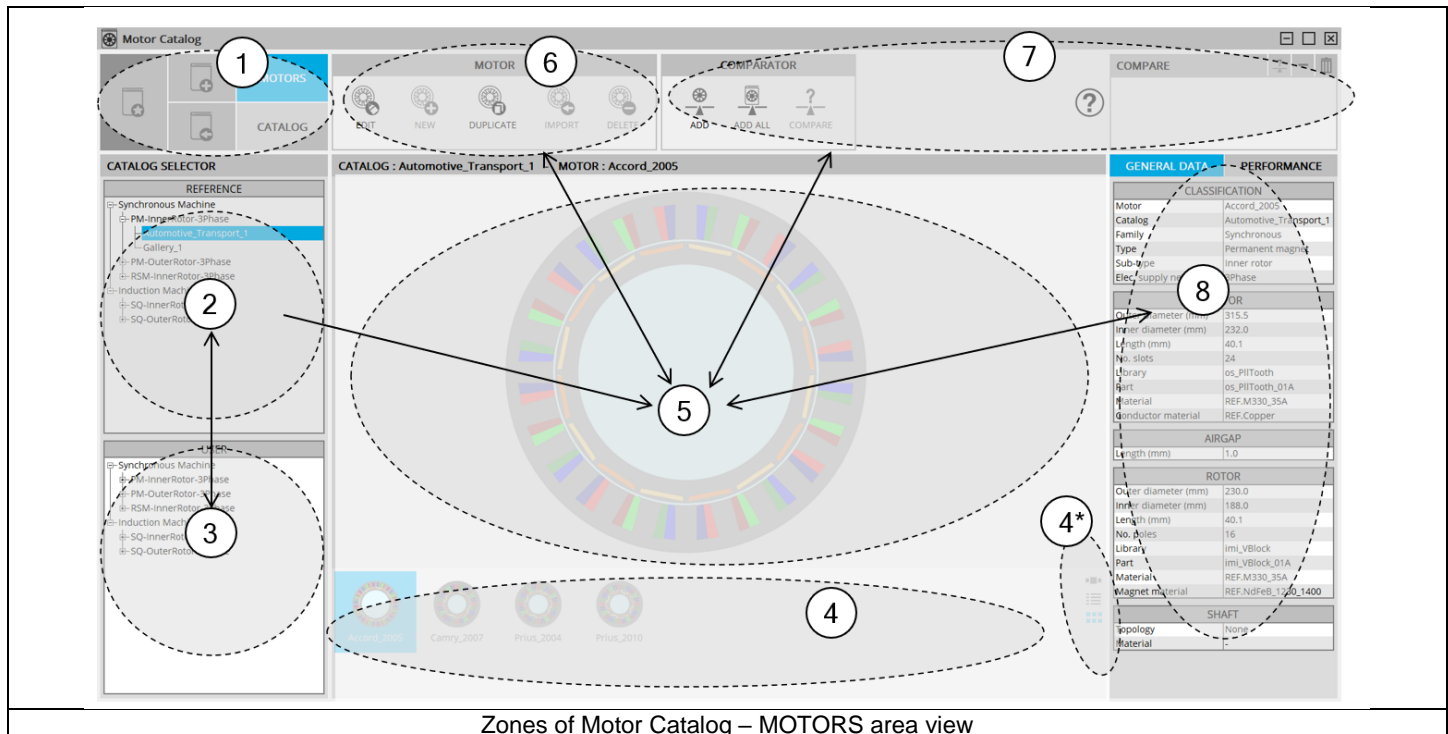

Zone 1	<p>Motor Catalog has two main environments: CATALOG and MOTORS When MOTORS is selected = Blue color MOTORS environment of Motor Catalog is displayed. Three main functions are available from the top of this panel:</p> <ul style="list-style-type: none"> <li>• Create a new catalog,</li> <li>• Load a catalog</li> <li>• Set catalog as favorite</li> </ul> <p>See the section “management of catalogs” for more information.</p>
Zone 2	<p>Reference catalogs are available. <b>Selections of catalogs must be done in this field.</b> Motors of these catalogs are read only. However, they can be copied and moved into user’s catalogs.</p>
Zone 3	<p>User’s catalogs. <b>Selections of catalogs must be done in this field.</b> The users can create new catalogs. See the process in the chapter “Reference commands”.</p>
Zone 4	<p>Visualization of all the motors (thumbnails) stored in the selected catalog. Clicking on one thumbnail allows displaying the corresponding motor on the central area (5).</p>
Zone 4*	<p>The motors can be displayed as a slide show or as a list or as a matrix view of pictures.</p>
Zone 5	<p>Visualization of the selected motor.</p>
Zone 6	<p>Tools to manage the motor: Edit, New, Duplicate, Import or Delete motor.</p>
Zone 7	<p>Tools to manage the comparison between motors – Access to the comparator.</p>
Zone 8	<p>It is possible to attach documents to the selected catalog (pictures, pdf files etc.).</p>


## 3.2 Reference commands
 
### 3.2.1 Edit a motor

#### 3.2.1.1 Motor from the reference catalogs

Edit a motor allows modifying its general data and properties by using Motor Factory.

As all the motors from reference catalogs are in read only mode, before editing such motor user must copy it in a user's catalog. A dedicated dialog box allows doing that quickly as it is shown below.

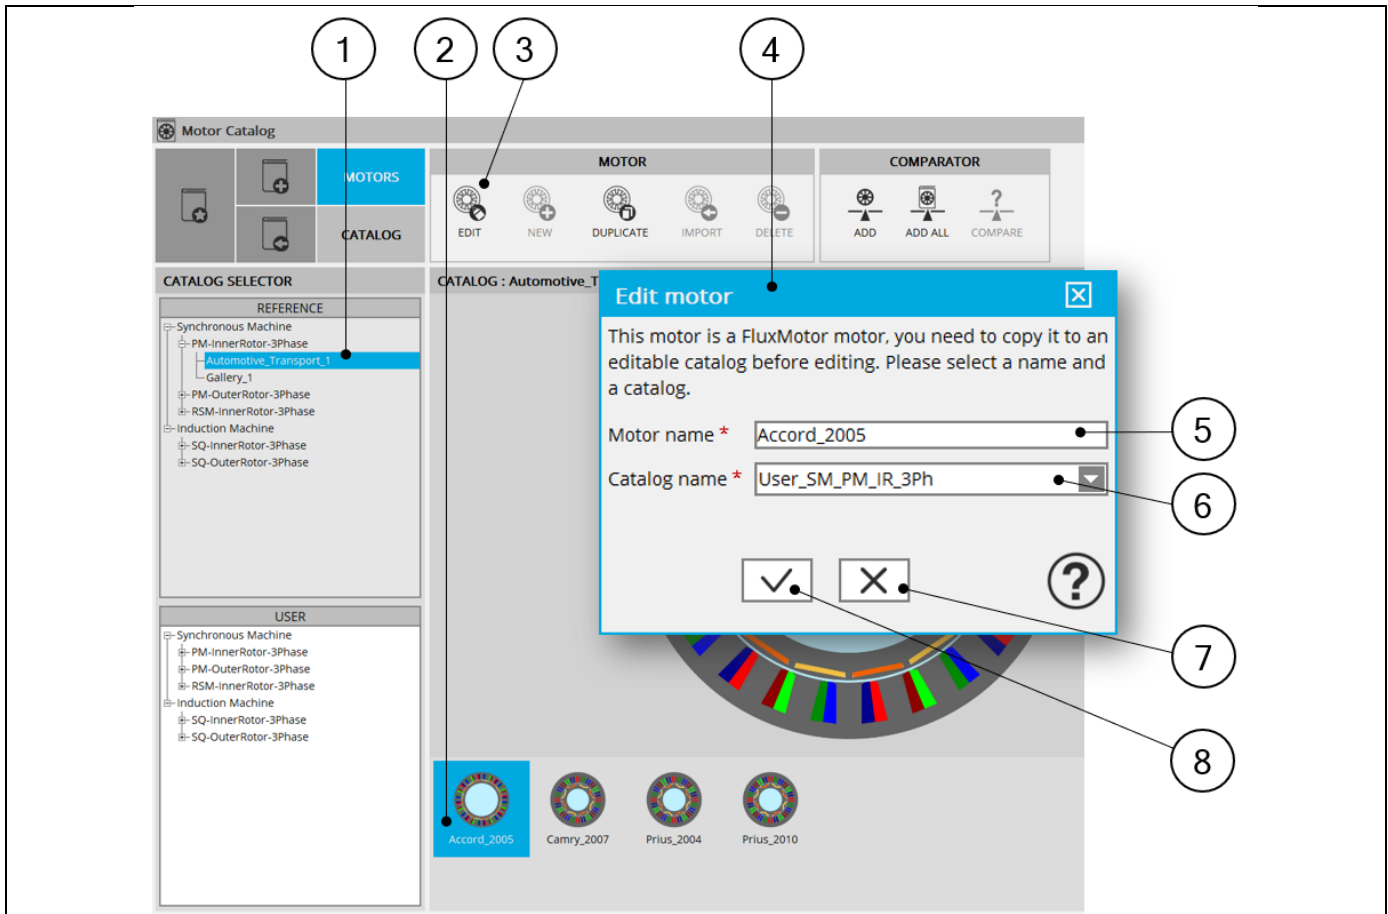

Edit a motor from reference catalogs


1	Selection of a reference catalog.
2	Selection of one motor in the selected catalog. This motor is displayed in the central area.
3	Click on the button "EDIT".
4	As a motor from reference catalog is considered, a dialog box allows copying the selected motor in a user's catalog.
5	Give a name to the motor.
6	Choose a user's catalog in which the copied motor will be stored.
7	Button to cancel the edition of the motor.
8	Button to apply inputs and edit the selected motor. Then, Motor Factory is launched allowing the reading and/or the modification of the properties of the motor.

#### 3.2.1.2 Motor from User's catalogs

 In this case, as the motor is not in a Read only mode, it allows opening the motor directly with Motor Factory application which can be used to read or/and modify its characteristics.

### 3.2.2 Create a New motor

The creation of a new motor is possible only in a user's catalog. If you select a Reference catalog, the icon "New" is disabled.

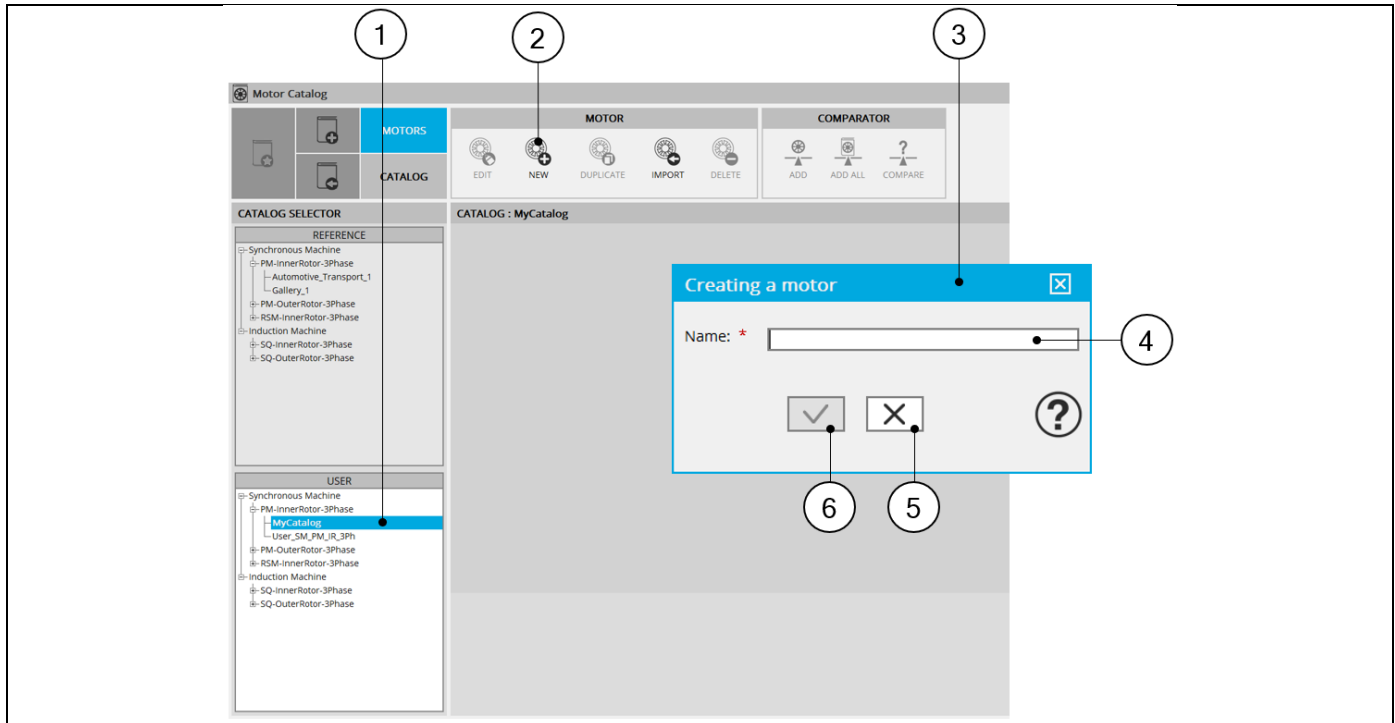

#### How to create a new motor from Motor Catalog?

1	Selection of a user's catalog in which the new motor will be stored. The selected catalog must correspond to the type of the motor to be created.
2	Click on the button "New".
3	A dialog box is automatically opened to allow the process of creation.
4	A name must be given to the new motor. It will be stored in the selected catalog. Then, Motor Factory environment is opened to design the new motor. Note: If the new motor is not saved in Motor Factory, its name doesn't appear in Motor Catalog.
5	Cancel the creation of a new motor from Motor Catalog.
6	Button to apply inputs and create the new motor. Then, Motor Factory is launched which allows to read and/or the modification of the characteristics of the motor. Note: The new motor "NewMotor1" previously created will be stored in the corresponding catalog. See next illustration.

The screenshot displays the Altair FluxMotor software interface. The main window is titled "Motor Catalog" and shows a central 3D model of a motor stator with 48 slots, colored in a rainbow pattern. The interface is divided into several sections:

- Top Bar:** Contains "MOTOR" and "COMPARATOR" tabs with various action icons like EDIT, NEW, DUPLICATE, IMPORT, DELETE, ADD, ADD ALL, and COMPARE.
- Left Panel:** A "CATALOG SELECTOR" with "REFERENCE" and "USER" sections. The "USER" section shows a tree view where "MyCatalog" is selected, and "NewMotor\_1" is highlighted under the "User\_SM\_PM\_IR\_3Ph" folder.
- Center:** A 3D model of the motor stator, labeled "NewMotor\_1".
- Right Panel:** A "COMPARE" window showing "GENERAL DATA" and "PERFORMANCE" tabs. The "GENERAL DATA" tab is active, displaying the following information:
 

CLASSIFICATION	
Motor	NewMotor_1
Catalog	MyCatalog
Family	Synchronous
Type	Permanent magnet
Sub-type	Inner rotor
Elec. supply network	3Phase
STATOR	
Outer diameter (mm)	320.0
Inner diameter (mm)	180.0
Length (mm)	80.0
No. slots	48
Library	os_Free
Part	os_Free_01B
Material	REF.M330_35A
Conductor material	REF.Copper
AIRGAP	
Length (mm)	8.0 E-1
ROTOR	
Outer diameter (mm)	178.4
Inner diameter (mm)	90.0
Length (mm)	80.0
No. poles	8
Library	ims_Ring
Part	ims_Ring_01A
Material	REF.M330_35A
Magnet material	REF.SmCo_1040_1800
SHAFT	
Topology	None
Material	-

Annotations in the image point to specific features:

 
- 2:** Points to the "CATALOG SELECTOR" panel.
- 1:** Points to the "NewMotor\_1" motor model in the center.
- 3:** Points to the "GENERAL DATA" tab in the right panel.

The new motor "NewMotor1" (1) previously created is stored in the corresponding catalog (2).  
 Its general data are displayed in the corresponding tab (3).  
 Performance will be added only when the datasheet test will be performed (3).

### 3.2.3 Duplicate


The duplication of a motor is possible only in a user's catalog. If you select a Reference catalog, the icon "DUPLICATE" is disabled.

Note: If the selected catalog is empty, the icon "DUPLICATE" is disabled.

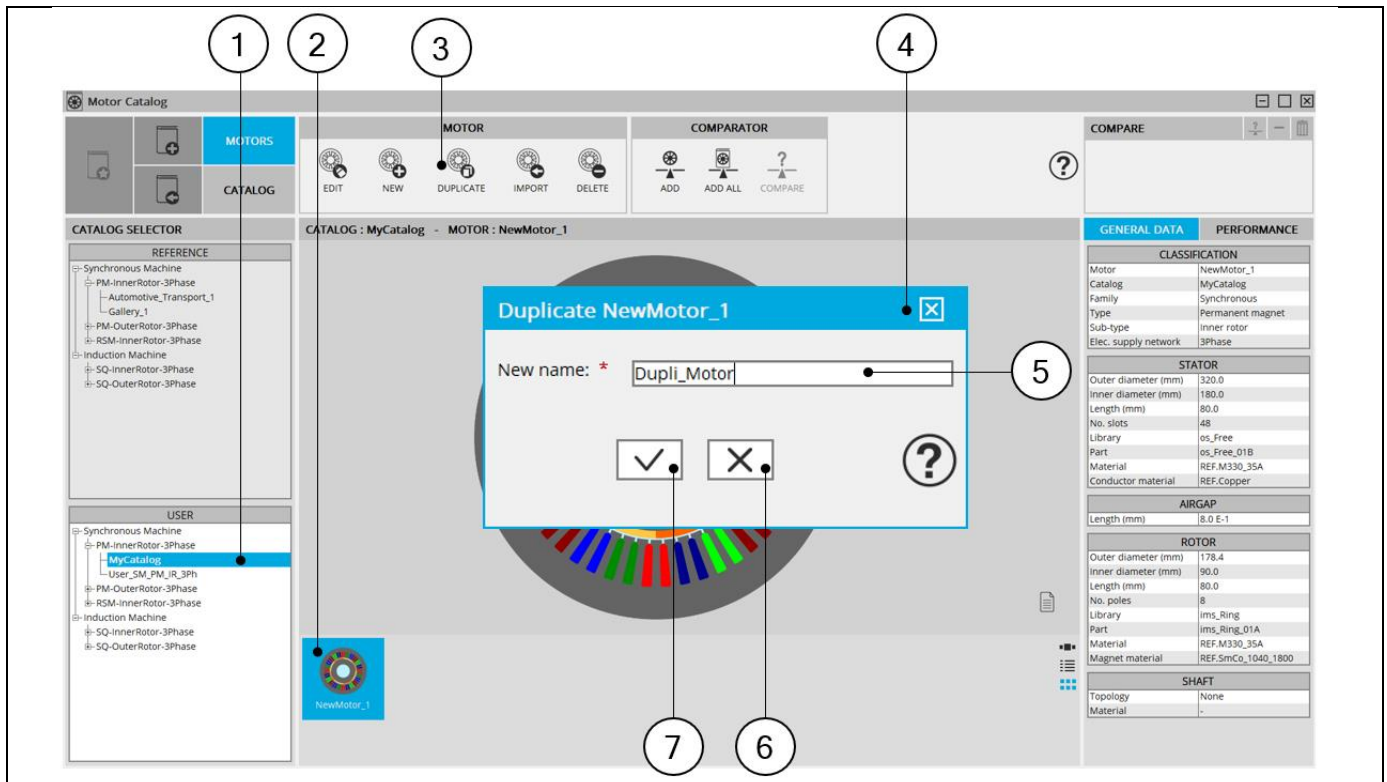

#### How to duplicate motor?

 1	Selection of a user's catalog in which the motor to be duplicated is stored.
2	Selection of the motor to duplicate.
3	Click on the button "DUPLICATE".
4	A dialog box is automatically opened to allow the process of duplication.
5	Give a name to the new motor.
6	Button to cancel the editing of the motor.
7	Button to apply inputs and create the new motor. Note: The new motor "Dupli_Motor" previously created will be stored in the corresponding catalog. See next illustration.

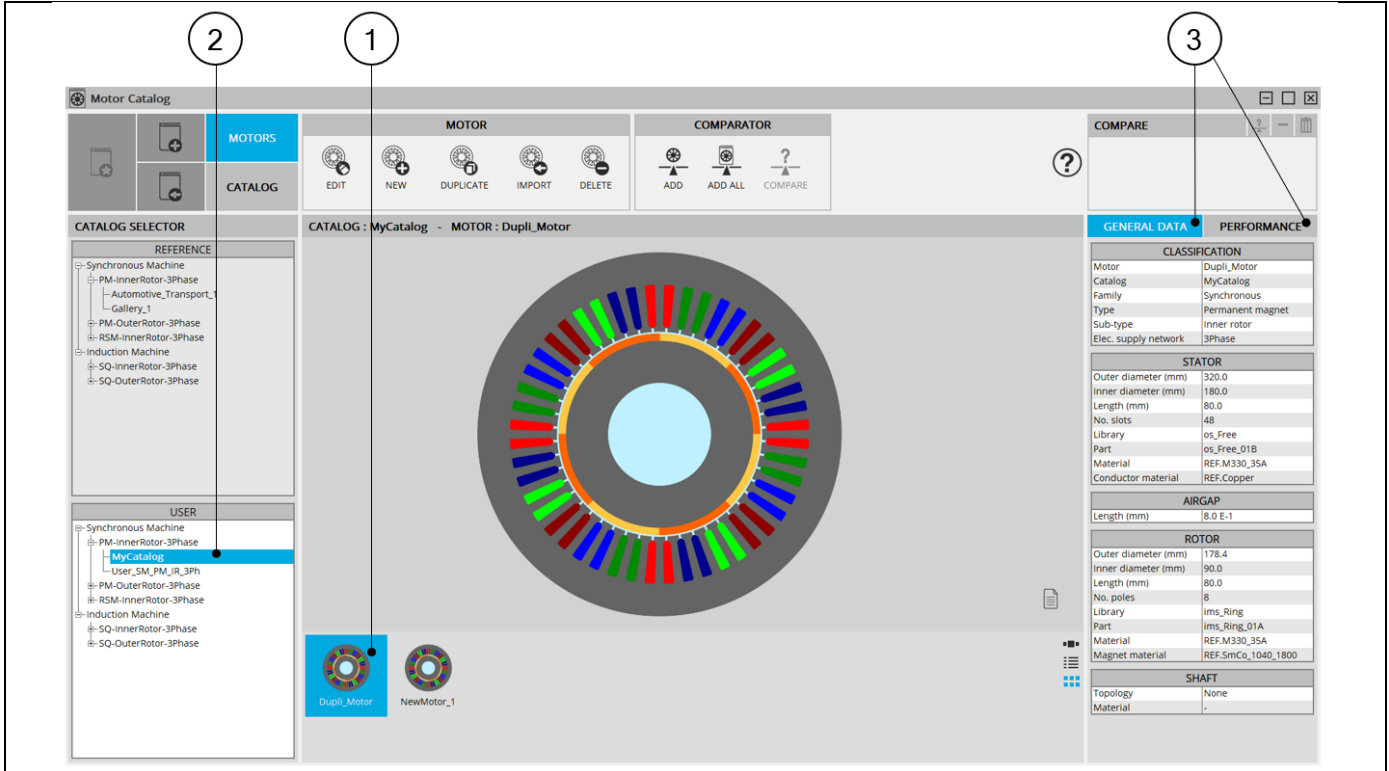


The new motor "Dupli\_Motor" (1) previously created is stored in the corresponding catalog (2).

Its general data are displayed in the corresponding tab (3).

Performance are available only if the datasheet test has been performed (3).

### 3.2.4 Import a motor from another catalog

 Import of motors is possible only in a user's catalog. If you select a Reference catalog, the icon "Import" is disabled.

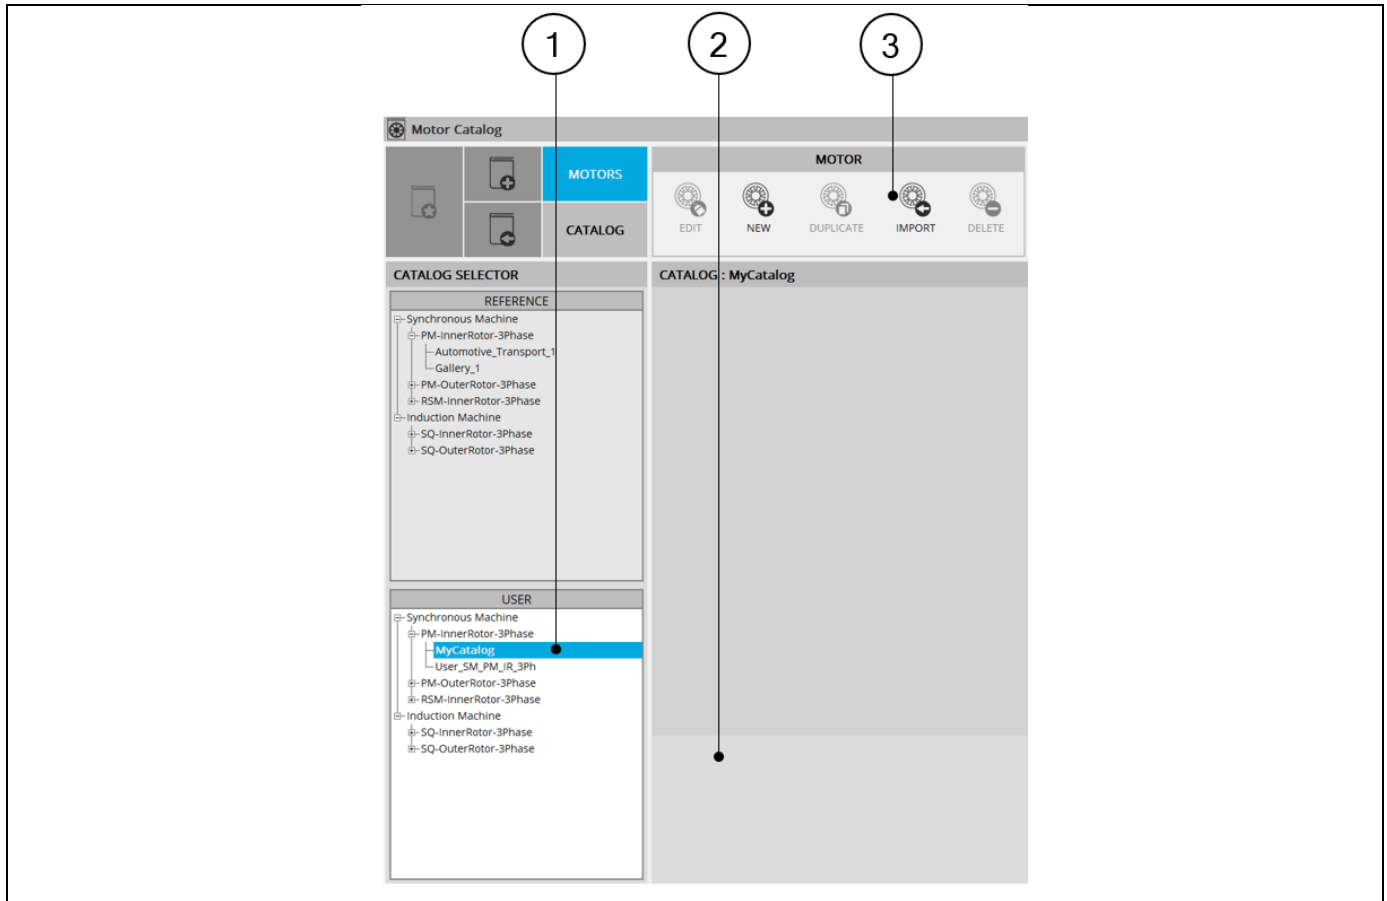


#### How to import a motor from another catalog ?

1	Selection of a user's catalog in which the motors to import will be stored.
2	In this example, the catalog in which motors will be imported is currently empty.
3	Click on the button "IMPORT".



 
Clicking on the icon "IMPORT" opens a dialog box, allowing access to the motor catalog. It allows to visualize, compare, choose, and import another motor topology in the selected catalog.

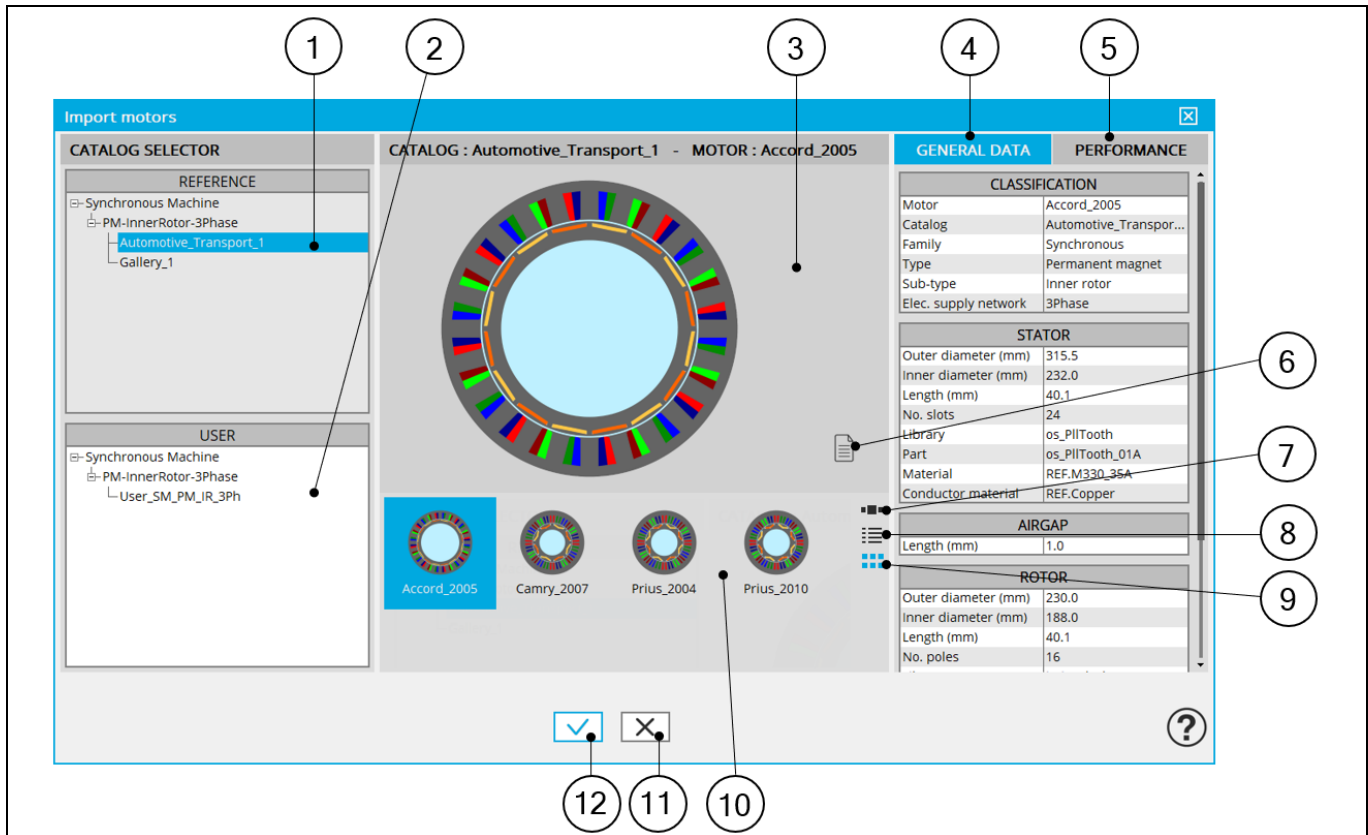

#### How to select motors to import?

1	Visualization of reference catalog i.e. the catalogs of motor topologies provided with FluxMotor®. Select them to view their contents and choose motors among them.
2	Visualization of user catalogs. The default user catalog is "UserSynchronous".
3	Area where the selected motor is displayed (static picture).
4	General data of the selected motor.
5	Performance of the selected motor (available when the datasheet test has been performed. See Motor Factory user guide (TEST environment)).
6	Button to visualize the list of documents attached to the motor. See additional information.
7	Button to display thumbnails as a slide show.
8	Button to display thumbnails as a list.
9	Button to display thumbnails as a matrix view of pictures.
10	Area to visualize all the topologies of motors from the selected catalog.
11	Button to close the dialog box and cancel import of motors.
12	Button to choose and import the selected motors.
 
## 3.2.5 Delete motor from a catalog

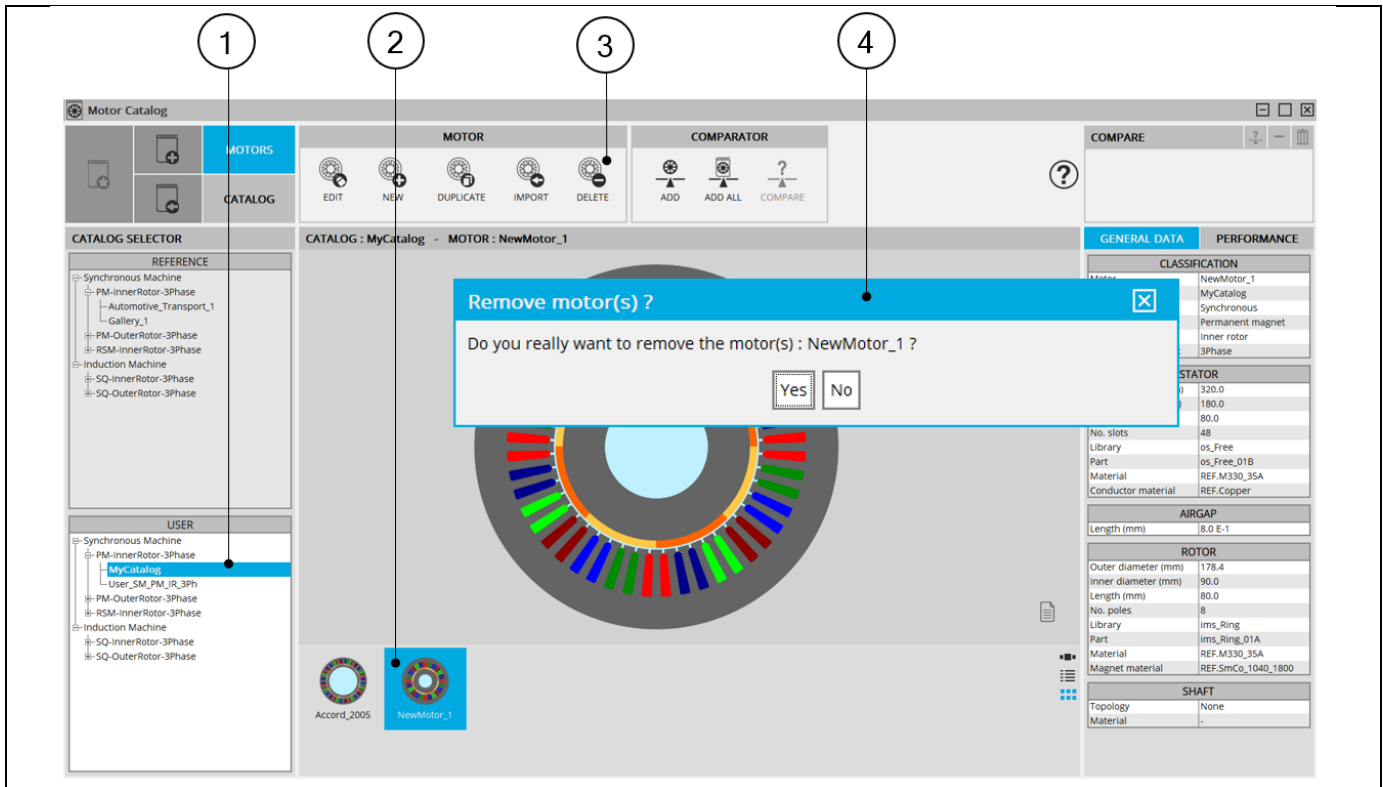


## How to delete motors from a catalog?

1	Select the catalog where the motors to delete are stored.
2	Select the motor to delete (several motors can be selected to be deleted).
3	Click on the button “DELETE”.
4	A dialog box is automatically opened to validate the removal of the selected motors. Note: Delete a motor means that all the data of the motor are destroyed and not recoverable.

## 3.3 Compare motors

 
### 3.3.1 Overview

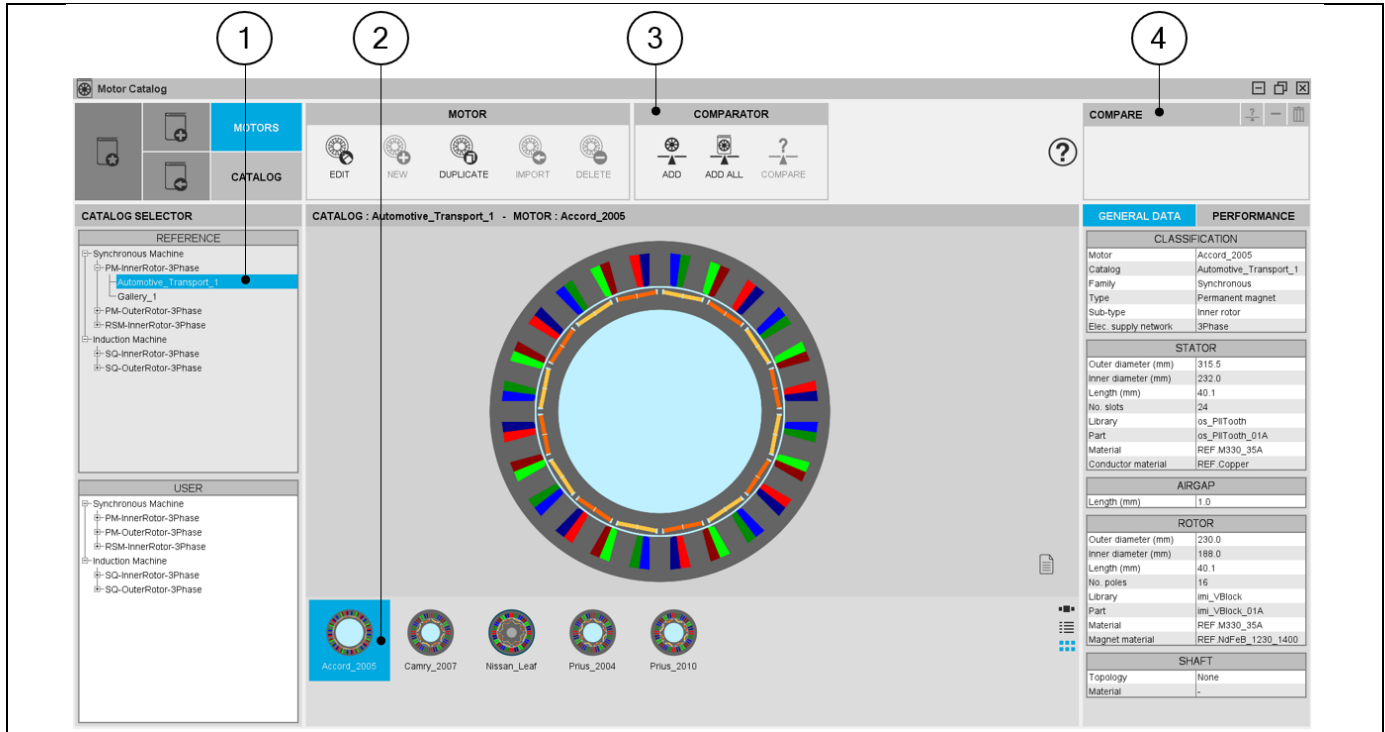

Tools to select and compare the motors

1	Selection of the catalog of the motors are displayed.
2	Select one or several motors to compare.
3	Box of tools to add the selected motors into the comparator. See more details below.
4	Box of tools to manage the selected motors into the comparator. See more details below.

## 3.3.2 Content management

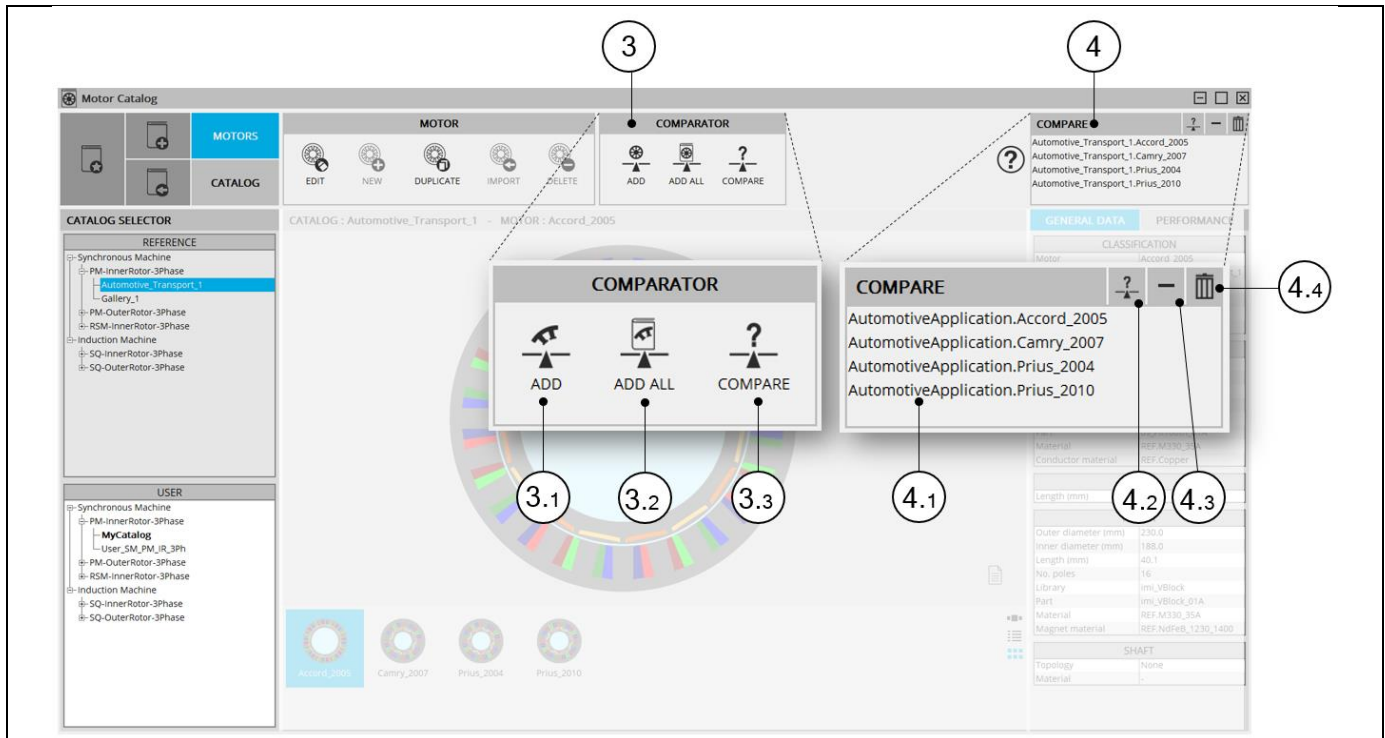 


Tools to select and compare the motors

3	Box of tools to add the selected motors into the comparator. See more details below.
3.1	Click on this icon to add the selected motors (one or several) into the comparator.
3.2	Click on this icon to add all the motors of the selected catalog into the comparator.
3.3	Click on this icon to get into the comparator application and compare the selected motors.
4	Box of tools to manage the selected motors into the comparator. See more details below.
4.1	Visualization of the selected motor list.
4.2	Click on this icon to get into the comparator application and compare the selected motors.
4.3	Button to remove the selected motors (one or several) from the comparator.
4.4	Button to remove all the motors from the comparator.

### 3.3.3 Compare

 Here is, the environment for the comparator of motors.

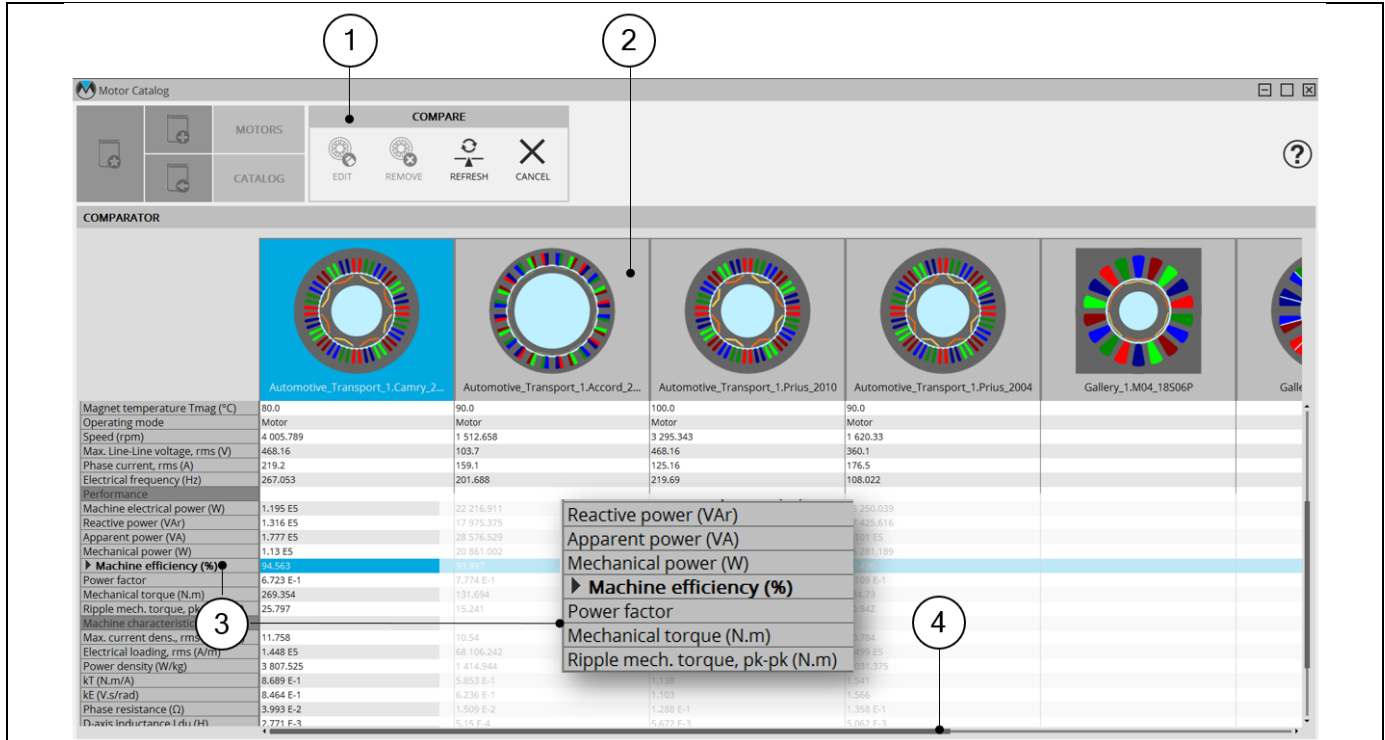

Tools to select and compare the motors

1	<p>Box of tools to manage the selected motors into the comparator.</p> <ul style="list-style-type: none"> <li>• EDIT: The selected motor (one motor) can be edited into Motor Factory. Edit a motor allows modifying its properties by using the functions of Motor Factory. See the chapter edit a motor for more details.</li> <li>• REMOVE: The selected motor is removed from the comparator.</li> <li>• REFRESH: For updating data by considering new results got in Motor Factory – Test environment.</li> <li>• CANCEL: To close the comparator and get back to Motor Catalog environment.</li> </ul>
2	<p>All the selected motors are aligned to help the comparison. The general data and performance are displayed.</p>
3	<p>Clicking on one field allows arranging the motors by considering ascending or decreasing order of the selected data. The black arrow shows the order retained.</p>
4	<p>A scroll bar allows visualizing all the motors.</p>

## 3.4 Attachments


### 3.4.1 Introduction

Documents can be attached to user's motors. It allows quickly reaching to the available additional information for describing these motors.

Note 1: Documents can be attached only to user's motors.

Note 2: Documents can be linked to motors as well as to catalogs. See chapter Management of catalogs.

 
### 3.4.2 How to create an attachment?

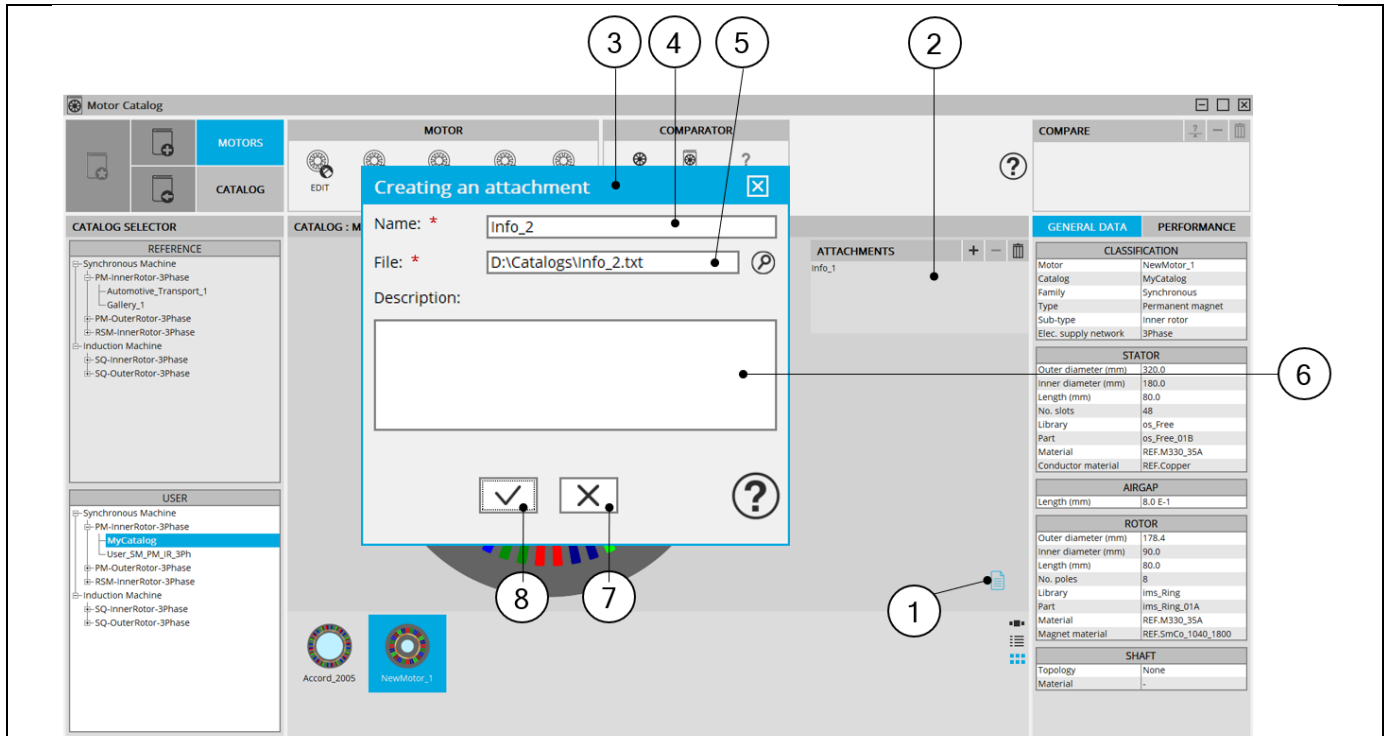

Creation of an attachment for a motor

1	Icon to display the attachment box just above (2).
2	Attachments box to manage the attached documents. Button (+) allows adding documents. Button (-) allows removing selected documents. Note: This box is disabled when motors from reference catalogs are considered.
3	A dedicated dialog box allows adding a new attached document. All kind of documents can be attached (like word, excel, pdf or text files, pictures, etc.).
4	Give a name to the attached document.
5	Select the folder in which the document to be attached is stored.
6	It is possible to write a reminder dealing with the attached document.
7	Button to cancel the creation of the attachment.
8	Button to apply inputs, create the new attachment and close the dialog box.

## 3.4.3 Management of attachments

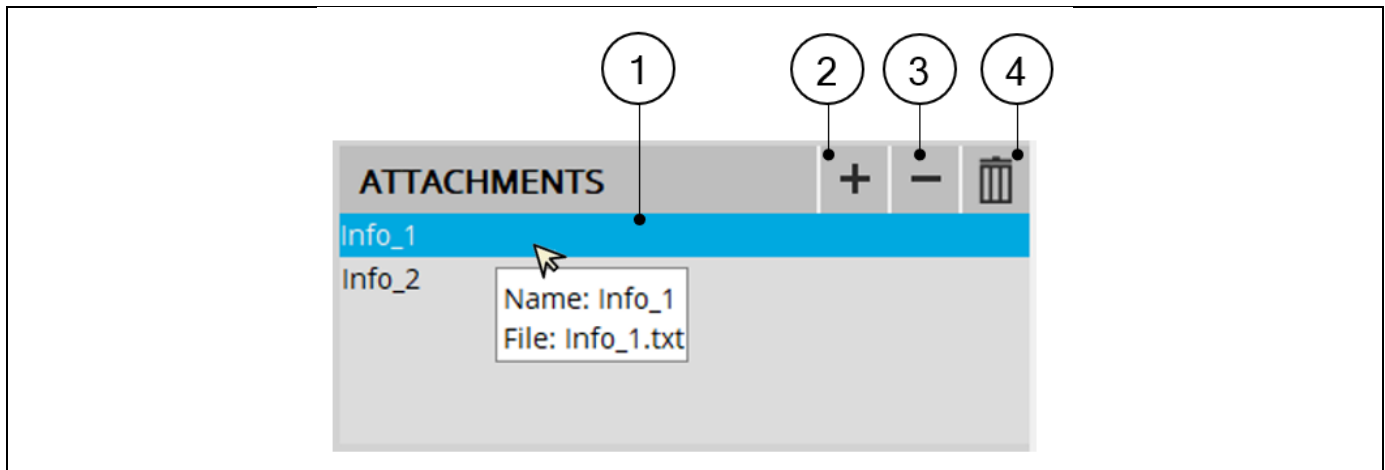 

Management of attachments

1	Selection of an attached document. Once selected, a tooltip reminds the name and the description of the selected document.
2	Button (+) to add an attachment (see the previous section).
3	Button (-) to remove one or several attachments.
4	Button for removing selected attached file.

## 4 EXTERNAL LINKS

### 4.1 Browse

#### 4.1.1 Overview

From the CATALOG environment it is possible to directly access the folder in which the data dealing with the selected catalog are stored.

Browsing to access the catalog folder

 
1	Selection of a catalog.
2	Browse function available from the top part of the environment.
3	Browse function available from information table.



## 4.1.2 Contents of folders

### 4.1.2.1 Overview

The contents of folder directly reachable from the CATALOG interface are described below.

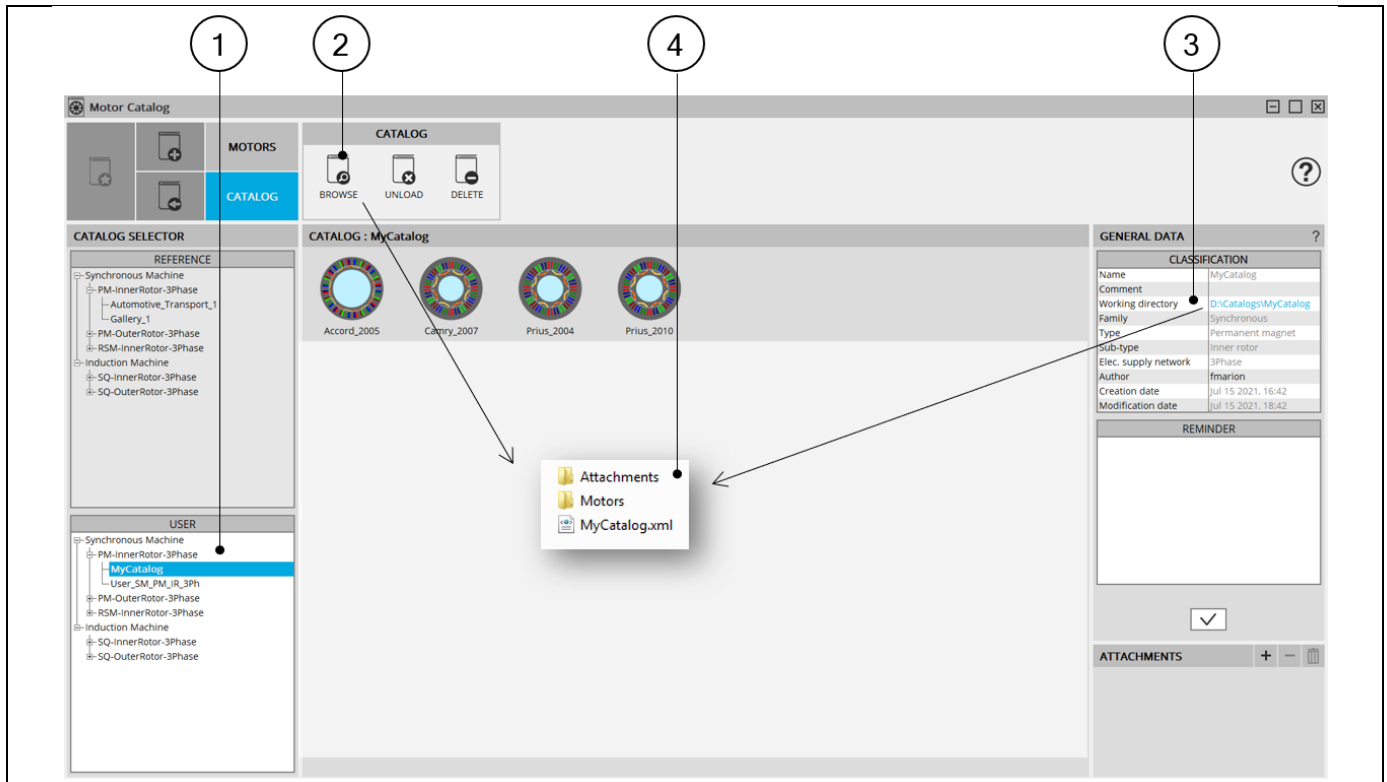


Browsing to access the catalog folder

1	Selection of a user's catalog. In our example the name of this catalog is "MyCatalog".
2	Click on the icon "BROWSE" to reach the folders dealing with the motor.
3	Click on the path in the "Working folder" field to reach the folders dealing with the motor.
4	Content of the folder "MyCatalog": Two folders "Attachments" and "Motors" + one xml file: MyCatalog.xml. See below the content of these folders.

## 4.1.2.2 Folder organization

The graph below shows how to reach the main files dealing with catalogs or motors.

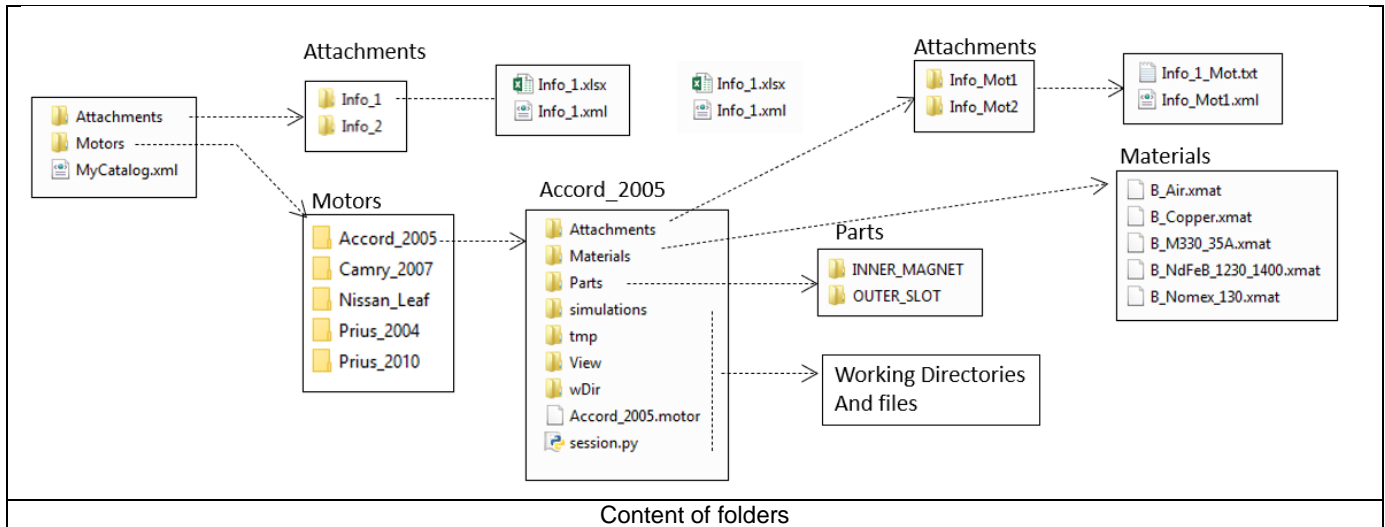 

Folder “Attachments”:

All the documents associated to the considered catalog (or Motor).

Folder “Motors”:

All the motors stored in the considered catalog.