

CDTire Licensing for Altair MotionSolve

Windows XP (32/64-bit)

CDTire Licensing for Altair MotionSolve.....	1
CDTire License Installation.....	2
Server License Installation.....	2
Client License Installation.....	2
CDTire.ini initialization file	3

Copyright Notice

Copyright © 2011 by Fraunhofer LBF. All rights reserved

CDTire License Installation

CDTire is using the flexlm licensing mechanism. For detailed information on flexlm, see **LicenseAdministration.pdf** supplied with the installation.

Server License Installation

The *CDTire* installation comes with a flexlm distribution and this includes the vendor daemon CDTIRE.

If you received a license file that needs to be served (license file starts with `SERVER <servername> <server HID> <optional port>`), you need to

1. modify the port specification according to your site requirements (the license file is shipped with a predefined port specification which can be edited without invalidating the license) and
2. start the license manager by executing

```
lmgrd -c <license_file> -l <log_file>
```

Alternatively, you can use the `lmtools.exe` executable to serve the license.

Note: If the server needs to be restarted, make sure that

- the server is terminated correctly.

Otherwise the server will not start correctly. See the flexlm documentation for more information on how to administrate the license (the `lmutil.exe` and `lmtools.exe` programs are also supplied).

Client License Installation

If you have received a license file that does not need to be served (license file does not start with `SERVER <servername> <server HID>`) or if you want to connect your *CDTire* installation with your license server, 3 mechanisms are possible:

- set environment variable `CDTIRE_LICENSE_FILE` to `<license>`
- set/expand environment variable `LM_LICENSE_FILE` with `<license>`
- set `LicenseFile=<license>` in section `[License]` of **CDTire.ini** initialization file

In all 3 cases, `<license>` contains either

- the license file name (including its full path)
`<full_path_to_lic_file>\<lic_file_name>` or
- `<port>@<server>` of the license server

As examples, see the following possibilities:

- (command-line example):
`set CDTIRE_LICENSE_FILE 31060@lic_server`
- (command-line example):
`set LM_LICENSE_FILE=%LM_LICENSE_FILE%;C:\dir\license.lic`
- (CDTire.ini file example):
`[License]`
`LicenseFile=31060@lic_server`

If the license needs to be served, see ***Server License Installation***.
Contact your system administrator to ask for port and server name.

CDTire.ini initialization file

With *CDTire*, some runtime information (like the license file or server to be used) can be stored in an initialization file called `CDTire.ini`. The *CDTire* software looks in three places for this file:

- Active *CDTire* installation folder (global settings: `%CDTIREHOME%`)
- The `%HOME%\CDTire` folder of the user (user settings)
- The current working directory of the simulation (local settings)

If `CDTire.ini` files exist in more than one of the above specified places, the contents of these files is merged - with the user key settings overruling the global key settings and the local key settings overruling the global and user key settings.