

ALTAIR

ONLY FORWARD

Altair Safety Report Manager
2022.3

GNCAP Occupant

Intellectual Property Rights Notice

Copyright © 1986-2023 Altair Engineering Inc. All Rights Reserved.

This Intellectual Property Rights Notice is exemplary, and therefore not exhaustive, of intellectual property rights held by Altair Engineering Inc. or its affiliates. Software, other products, and materials of Altair Engineering Inc. or its affiliates are protected under laws of the United States and laws of other jurisdictions. In addition to intellectual property rights indicated herein, such software, other products, and materials of Altair Engineering Inc. or its affiliates may be further protected by patents, additional copyrights, additional trademarks, trade secrets, and additional other intellectual property rights. For avoidance of doubt, copyright notice does not imply publication. Copyrights in the below are held by Altair Engineering Inc. or its affiliates. Additionally, all non-Altair marks are the property of their respective owners.

This Intellectual Property Rights Notice does not give you any right to any product, such as software, or underlying intellectual property rights of Altair Engineering Inc. or its affiliates. Usage, for example, of software of Altair Engineering Inc. or its affiliates is governed by and dependent on a valid license agreement.

Altair Simulation Products

Altair® AcuSolve® ©1997-2023

Altair Activate® ©1989-2023

Altair® Battery Designer™ ©2019-2023

Altair Compose® ©2007-2023

Altair® ConnectMe™ ©2014-2023

Altair® EDEM™ ©2005-2023

Altair® ElectroFlo™ ©1992-2023

Altair Embed® ©1989-2023

Altair Embed® SE ©1989-2023

Altair Embed®/Digital Power Designer ©2012-2023

Altair Embed® Viewer ©1996-2023

Altair® ESAComp® ©1992-2023

Altair® Feko® ©1999-2023

Altair® Flow Simulator™ ©2016-2023

Altair® Flux® ©1983-2023

Altair® FluxMotor® ©2017-2023

Altair® HyperCrash® ©2001-2023

Altair® HyperGraph® ©1995-2023

Altair® HyperLife® ©1990-2023

Altair® HyperMesh® ©1990-2023

Altair® HyperSpice™ ©2017-2023
Altair® HyperStudy® ©1999-2023
Altair® HyperView® ©1999-2023
Altair® HyperViewPlayer® ©2022-2023
Altair® HyperWorks® ©1990-2023
Altair® HyperXtrude® ©1999-2023
Altair® Inspire™ ©2009-2023
Altair® Inspire™ Cast ©2011-2023
Altair® Inspire™ Extrude Metal ©1996-2023
Altair® Inspire™ Extrude Polymer ©1996-2023
Altair® Inspire™ Form ©1998-2023
Altair® Inspire™ Mold ©2009-2023
Altair® Inspire™ PolyFoam ©2009-2023
Altair® Inspire™ Print3D ©2021-2023
Altair® Inspire™ Render ©1993-2023
Altair® Inspire™ Studio ©1993-2023
Altair® Material Data Center™ ©2019-2023
Altair® MotionSolve® ©2002-2023
Altair® MotionView® ©1993-2023
Altair® Multiscale Designer® ©2011-2023
Altair® nanoFluidX® ©2013-2023
Altair® OptiStruct® ©1996-2023
Altair® PolIEx™ ©2003-2023
Altair® PSIM™ ©2022-2023
Altair® Pulse™ ©2020-2023
Altair® Radioss® ©1986-2023
Altair® romAI™ ©2022-2023
Altair® S-FRAME® ©1995-2023
Altair® S-STEEL™ ©1995-2023
Altair® S-PAD™ ©1995-2023
Altair® S-CONCRETE™ ©1995-2023
Altair® S-LINE™ ©1995-2023
Altair® S-TIMBER™ ©1995-2023

Altair® S-FOUNDATION™ ©1995-2023

Altair® S-CALC™ ©1995-2023

Altair® S-VIEW™ ©1995-2023

Altair® Structural Office™ ©2022-2023

Altair® SEAM® ©1985-2023

Altair® SimLab® ©2004-2023

Altair® SimLab® ST ©2019-2023

Altair SimSolid® ©2015-2023

Altair® ultraFluidX® ©2010-2023

Altair® Virtual Wind Tunnel™ ©2012-2023

Altair® WinProp™ ©2000-2023

Altair® WRAP™ ©1998-2023

Altair® GateVision PRO™ ©2002-2023

Altair® RTLvision PRO™ ©2002-2023

Altair® SpiceVision PRO™ ©2002-2023

Altair® StarVision PRO™ ©2002-2023

Altair® EEvision™ ©2018-2023

Altair Packaged Solution Offerings (PSOs)

Altair® Automated Reporting Director™ ©2008-2022

Altair® e-Motor Director™ ©2019-2023

Altair® Geomechanics Director™ ©2011-2022

Altair® Impact Simulation Director™ ©2010-2022

Altair® Model Mesher Director™ ©2010-2023

Altair® NVH Director™ ©2010-2023

Altair® NVH Full Vehicle™ ©2022-2023

Altair® NVH Standard™ ©2022-2023

Altair® Squeak and Rattle Director™ ©2012-2023

Altair® Virtual Gauge Director™ ©2012-2023

Altair® Weld Certification Director™ ©2014-2023

Altair® Multi-Disciplinary Optimization Director™ ©2012-2023

Altair HPC & Cloud Products

Altair® PBS Professional® ©1994-2023

Altair® PBS Works™ ©2022-2023

Altair® Control™ ©2008-2023

Altair® Access™ ©2008-2023

Altair® Accelerator™ ©1995-2023

Altair® Accelerator™ Plus ©1995-2023

Altair® FlowTracer™ ©1995-2023

Altair® Allocator™ ©1995-2023

Altair® Monitor™ ©1995-2023

Altair® Hero™ ©1995-2023

Altair® Software Asset Optimization (SAO) ©2007-2023

Altair Mistral™ ©2022-2023

Altair® Grid Engine® ©2001, 2011-2023

Altair® DesignAI™ ©2022-2023

Altair Breeze™ ©2022-2023

Altair® NavOps® ©2022-2023

Altair® Unlimited™ ©2022-2023

Altair Data Analytics Products

Altair Analytics Workbench™ © 2002-2023

Altair® Knowledge Studio® ©1994-2023

Altair® Knowledge Studio® for Apache Spark ©1994-2023

Altair® Knowledge Seeker™ ©1994-2023

Altair® Knowledge Hub™ ©2017-2023

Altair® Monarch® ©1996-2023

Altair® Panopticon™ ©2004-2023

Altair® SmartWorks™ ©2021-2023

Altair SLC™ ©2002-2023

Altair SmartWorks Hub™ ©2002-2023

Altair® RapidMiner® ©2001-2023

Altair One™ ©1994-2023

2022.3

March 17, 2023

Technical Support

Altair provides comprehensive software support via web FAQs, tutorials, training classes, telephone, and e-mail.

Altair One Customer Portal

Altair One (<https://altairone.com/>) is Altair's customer portal giving you access to product downloads, a Knowledge Base, and customer support. We recommend that all users create an Altair One account and use it as their primary portal for everything Altair.

When your Altair One account is set up, you can access the Altair support page via this link:

www.altair.com/customer-support/

Altair Community

Participate in an online community where you can share insights, collaborate with colleagues and peers, and find more ways to take full advantage of Altair's products.

Visit the Altair Community (<https://community.altair.com/community>) where you can access online discussions, a knowledge base of product information, and an online form to contact Support. After you login to the Altair Community, subscribe to the forums and user groups to get up-to-date information about release updates, upcoming events, and questions asked by your fellow members.

These valuable resources help you discover, learn and grow, all while having the opportunity to network with fellow explorers like yourself.

Altair Training Classes

Altair's in-person, online, and self-paced trainings provide hands-on introduction to our products, focusing on overall functionality. Trainings are conducted at our corporate and regional offices or at your facility.

For more information visit: <https://learn.altair.com/>

If you are interested in training at your facility, contact your account manager for more details. If you do not know who your account manager is, contact your local support office and they will connect you with your account manager.

Telephone and E-mail

If you are unable to contact Altair support via the customer portal, you may reach out to technical support via phone or e-mail. Use the following table as a reference to locate the support office for your region.

Altair support portals are available 24x7 and our global support engineers are available during normal Altair business hours in your region.

When contacting Altair support, specify the product and version number you are using along with a detailed description of the problem. It is beneficial for the support engineer to know what type of workstation, operating system, RAM, and graphics board you have, so include that in your communication.

Location	Telephone	E-mail
Australia	+61 3 9866 5557	anzsupport@altair.com
Brazil	+55 113 884 0414	br_support@altair.com
Canada	+1 416 447 6463	support@altairengineering.ca
China	+86 400 619 6186	support@altair.com.cn
France	+33 141 33 0992	francesupport@altair.com
Germany	+49 703 162 0822	hwsupport@altair.de
Greece	+30 231 047 3311	eesupport@altair.com
India	+91 806 629 4500 +1 800 425 0234 (toll free)	support@india.altair.com
Israel		israelsupport@altair.com
Italy	+39 800 905 595	support@altairengineering.it
Japan	+81 3 6225 5830	jp-support@altair.com
Malaysia	+60 32 742 7890	aseansupport@altair.com
Mexico	+52 55 5658 6808	mx-support@altair.com
New Zealand	+64 9 413 7981	anzsupport@altair.com
South Africa	+27 21 831 1500	support@altair.co.za
South Korea	+82 704 050 9200	support@altair.co.kr
Spain	+34 910 810 080	support-spain@altair.com
Sweden	+46 46 460 2828	support@altair.se
United Kingdom	+44 192 646 8600	support@uk.altair.com
United States	+1 248 614 2425	hwsupport@altair.com

If your company is being serviced by an Altair partner, you can find that information on our web site at <https://www.altair.com/PartnerSearch/>.

See www.altair.com for complete information on Altair, our team, and our products.

Table of Contents

Altair Safety ReportManager	1
Table of Contents	2
Altair Safety Report Manager Intro	3
ASRM GUI Overview.....	4
GNCAP Occupant Module	9
GNCAP Occupant	11

Altair Safety Report Manager Intro

The Altair Safety Report Manager (aka ASRM) is a fully customizable automatic report generation utility for crash & safety regulations. It allows users to create a First Sight Report PPT for the selected impact type & regulation. The PPT report which consists of plots & animations that are generated based on various inputs entered by the user.

A standard report is delivered for each mode with the following info and contents.

 
- Model information
- Run quality statistics
- Occupant requirements
- Structure requirements
- Structure overview
- User defined plots

In addition, HyperView template & session files are created at the end of report generation which contains all plots/animations for closer analysis. It has the capability to overlay plots from different iterations. It is also possible to overlay plots with test data in HyperView.

The ASRM utility can also be run on HPC after job completion.

ASRM GUI Overview

Below is a snapshot of the ASRM GUI. To understand the ASRM workflow better, the GUI is divided into various sections as highlighted & numbered in the below picture. The main functionality of all the sections is briefly described below.

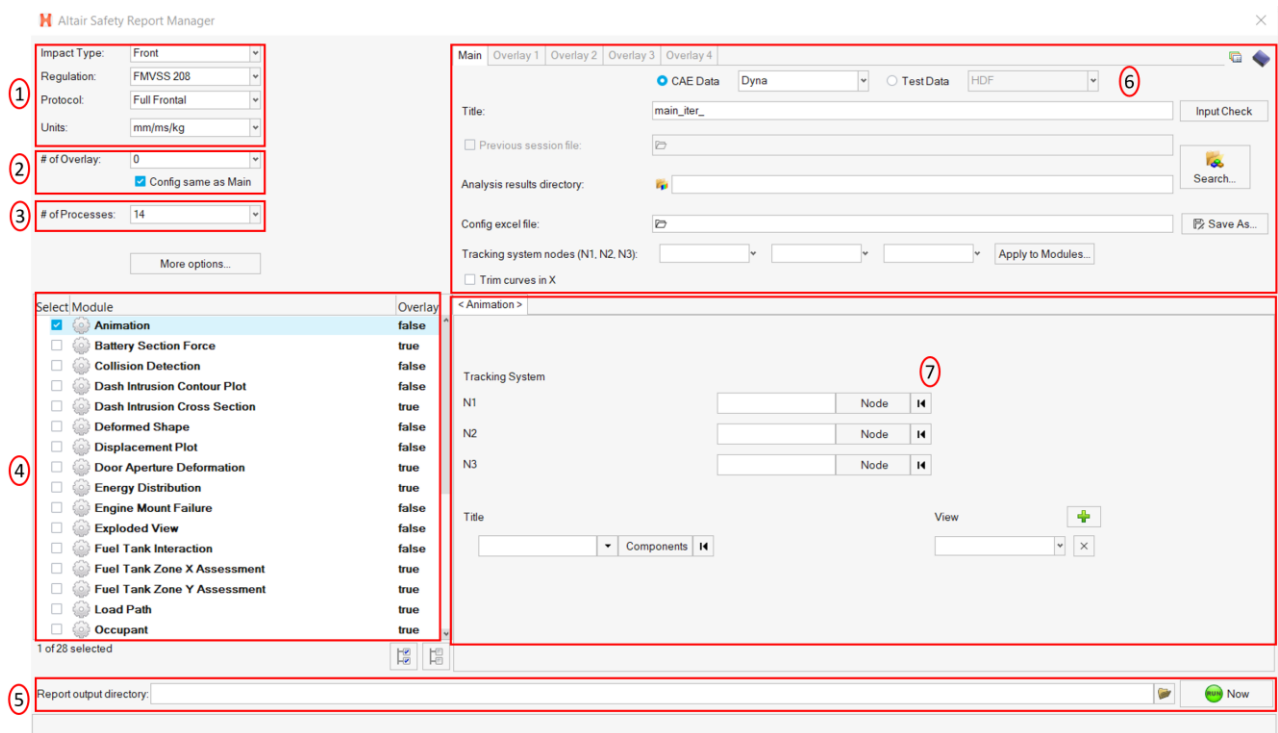

Impact Type & Units selection Section

In this section, user will be able to select the Impact Type, Regulation, and the Protocol for which he / she wants to generate the PPT report along with the source units used for running the simulation. Based on this selection the modules list (section #4) gets updated.

Impact Type:	Front
Regulation:	FMVSS 208
Protocol:	Full Frontal
Units:	mm/ms/kg

Overlay selection section

In this section user will be able to select the overlay option. Following scenarios are supported.

- When you want to generate report for a single run then you would set overlay option to 0. Therefore, overlay tabs (in section #6) is disabled.



- When you want to run in overlay mode, then you must pick appropriate number of overlay runs. The overlay tabs get enabled based on the number selected. User can select up to 4 iterations for overlay.



Please note that only those modules which run in HyperGraph (that create curves / graphs) are supported for overlay mode. There is a specific overlay status column next to modules list that indicates the overlay support for each module.

No. of Processes selection & save session file section

This section allows user to enter the no. of processes to be used when executing the utility. ASRM has the capability to run the report generation in parallel based on the no. of processes selected.

It also saves TPL files and session files at the end of the report generation. Users can also choose to export curves (curves created from the respective plotting modules) into **Excel** format. Click on the **More options...** button to select these options.



Modules list

This section allows users to select the modules to be run for report generation. User must make sure to select the module that he / she wants to include in the report generation.

Output directory selection

In this section user will select the output directory path. This is where all the output files such as the session files, images, animations, PPT & log files from the ASRM run will be created.

 
Main section

Input directory & configuration section

In this section, user should select the following.


- Type of data being used for generating the report. It could be CAE simulation data or physical test data.
- Title for the report which will be used for creating results directory as well as prefix for curve names & summary tables
- Results directory path where the solver input file, results files such as animation & time history files or test data are located.
- Config file path (if it exists already)

- Define global tracking system using 3 nodes (requests from Time history file). This is an optional input. Once the global tracking system is defined, it can be easily applied to other modules where tracking system is an input. Click on **Apply to Modules...** button, a selection dialog pops up, select the modules to apply the 3 nodes, and click **Apply&Close** button.

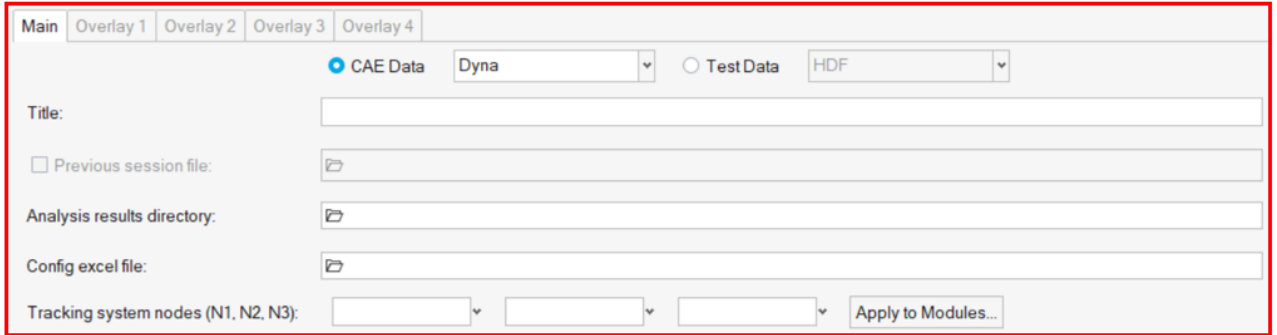

Input Validation check

 
Input Check button would run a quick validation check to verify if the inputs defined for various modules selected is valid. The verification is done on the results files available in the input directory specified. Any invalid inputs and missing input found from validation check will be highlighted in RED in the ASRM GUI as shown below.

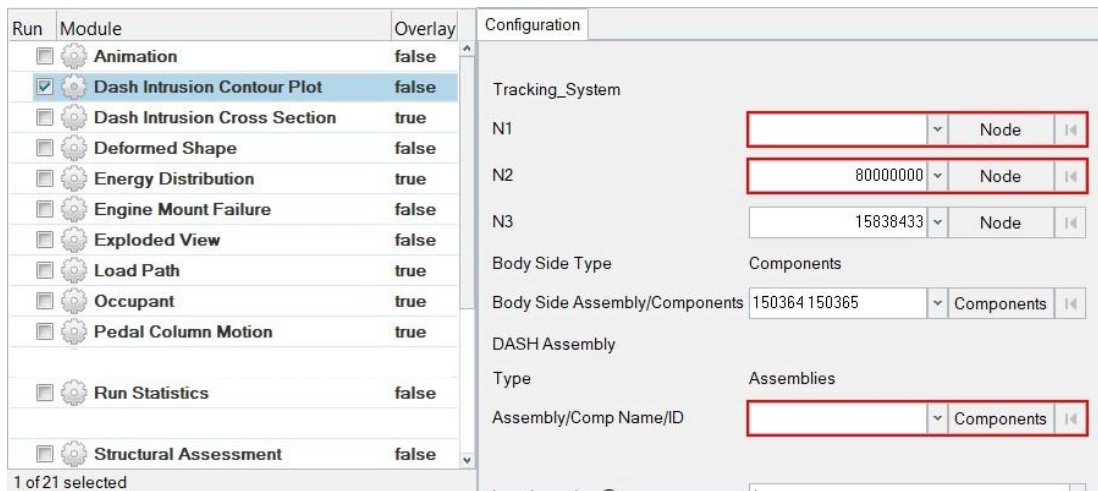

Search function

 
Search button will let users to select and import the 2D time history file (CAE (T01 / binout) or physical test data (HDF / ISO MME)) as well as main solver input file into the current session. This is required for defining the inputs for all the modules. An additional dialog called **files to load** will be displayed to select the files as shown below.




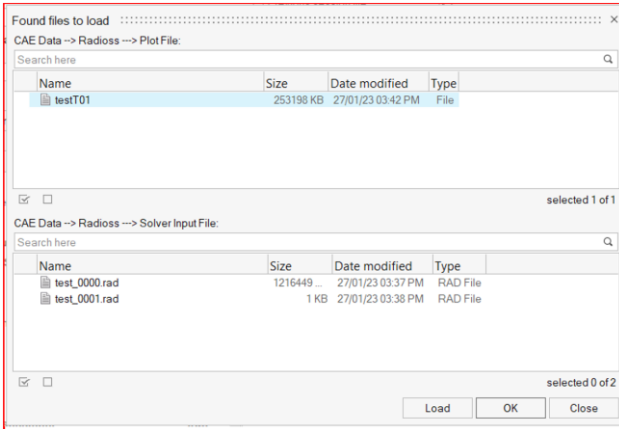


Change curve attributes & publish session

This section is mainly used for the overlay scenario.

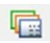 The change curve attributes option  brings up an overlay setting dialog as shown below. This will allow to change various curve & note related attributes for the overlay session per layer basis.

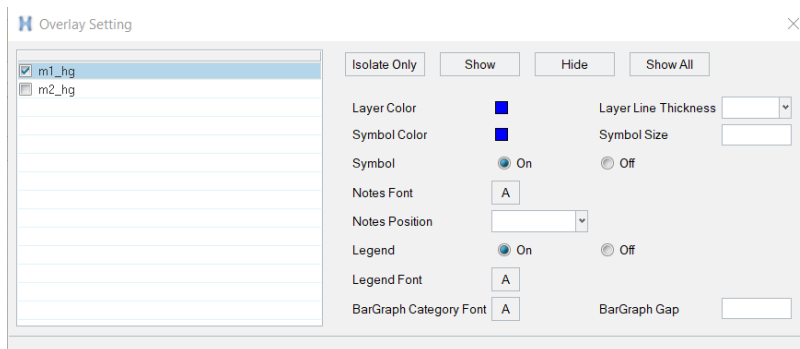

After changing the curve & note related attributes using the overlay setting dialog, user can click on Publish session icon  which would publish a report for the overlay session.

Configuration section

This is the section wherein the inputs required for all the modules will be entered & displayed. For defining the inputs, firstly make sure to load both the 3D (solver input file) file as well as Time History file using the Load button. Then start defining the inputs for the modules.

FE entities such as nodes, components or assemblies can be selected from graphics screen from the loaded solver input file.

Tracking System

N1 Node

N2 Node

N3 Node

Title

View

Inputs from the Time History files (subcases, requests & components) can be selected from the drop-down context dialog as shown below.

< Occupant >

Driver: Passenger

Dummy Model: 50th

h₀ Driver Restraint Type

Driver ID

Driver Injury Criteria	Subcase	Datatype	Request	Component	Filter
HEAD_ACC_X	h0dbout				
HEAD_ACC_Y	h0dbstat				
HEAD_ACC_Z	h0dbstat				
HEAD_ACC_RES	h0dbstat				
NECK_UPPER_MOMENT_Y	h0dbstat				
NECK_UPPER_FORCE_X	h0dbout				
NECK_UPPER_FORCE_Z	h0dbout				
CHEST_DEFLECTION					
CHEST_ACC_X					
CHEST_ACC_Y					
CHEST_ACC_Z					

GNCAP Occupant Module

Introduction

The Global New Car Assessment Program (Global NCAP) is designed to provide a fair, meaningful, and objective assessment of the impact performance of cars and provide a mechanism to inform consumers. This protocol is based upon those used by the European New Car Assessment Program for adult occupant protection and child occupant protection ratings.

Method of Assessment

The starting point for the assessment of adult occupant protection is the dummy response data recorded in the frontal impact. Initially, each relevant body area is given a score based on the measured dummy parameters. The assessment also considers the structural performance of the car by taking account of such aspects as steering wheel displacement, pedal movement, foot well distortion and displacement of the A pillar.

For Adult occupant protection, the overall rating is based on the driver data, unless part of the passenger fared less well. It is stated that the judgement relates primarily to the driver. The adjusted rating for the different body regions is presented in a visual format of colored segments within a human body outline for the driver and passenger.

Points Calculation

A sliding scale system of points scoring has been adopted for the biomechanical assessments. This involves two limits for each parameter, a more demanding limit (higher performance), beyond which a maximum score is obtained and also a less demanding limit (lower performance), below which no points are scored. For the adult rating, the maximum score for each body region is four points. Where a value falls between the two limits, the score is calculated by linear interpolation.

For all tests that are part of the adult occupant protection assessment, capping limits are maintained for criteria related to critical body regions: head, neck and chest. Exceeding a capping limit generally indicates unacceptable high risk at injury. In all cases, this leads to loss of all points related to the tests. Capping limits can be equal to or higher than the lower performance limit, depending on the test.

Scoring & Visualization

The protection provided for adults for each body region are presented visually, using colored segments within body outlines. The color used is based on the points awarded for that body region (rounded to three decimal places), as follows:

- Green - 4.000 points
- Yellow - 2.670 - 3.999 points
- Orange - 1.330 - 2.669 points
- Brown - 0.001 - 1.329 points
- Red - 0.000 points

For frontal impact, the body regions are grouped together, with the score for the grouped body region being that of the worst performing region or limb. Results are shown separately for driver and passenger. The grouped regions are:

- Head and Neck,
- Chest,
- Knee, Femur, Pelvis (i.e., left and right femur and knee slider)
- Leg and Foot (i.e., left and right lower leg and foot and ankle)

The contribution of the frontal impact test to the Adult Occupant Protection Score is calculated by summing the body scores for the relevant body regions, taking the lower of the driver and passenger scores. The total achievable score is 17.00 points, and the overall scores are then used to generate star ratings as follows.

 
Frontal Impact:

- 14.00 – 16.00 points + 1-point SBR + 4ch ABS + ECE95* 5 stars
- 11.00 – 13.99 points 4 stars
- 8.00 – 10.99 points 3 stars
- 5.00 – 7.99 points 2 stars
- 2.00 – 4.99 points 1 star
- 0.00 – 1.99 points 0 stars

GNCAP Occupant

The GNCAP Occupant module generates following summary report based on user selected info.


- 1) Occupant protection summary
- 2) Adult & child occupant protection detailed summary table that includes various injury criteria, high & low performance limits, actual result obtained and the corresponding point value
- 3) Occupant performance plots

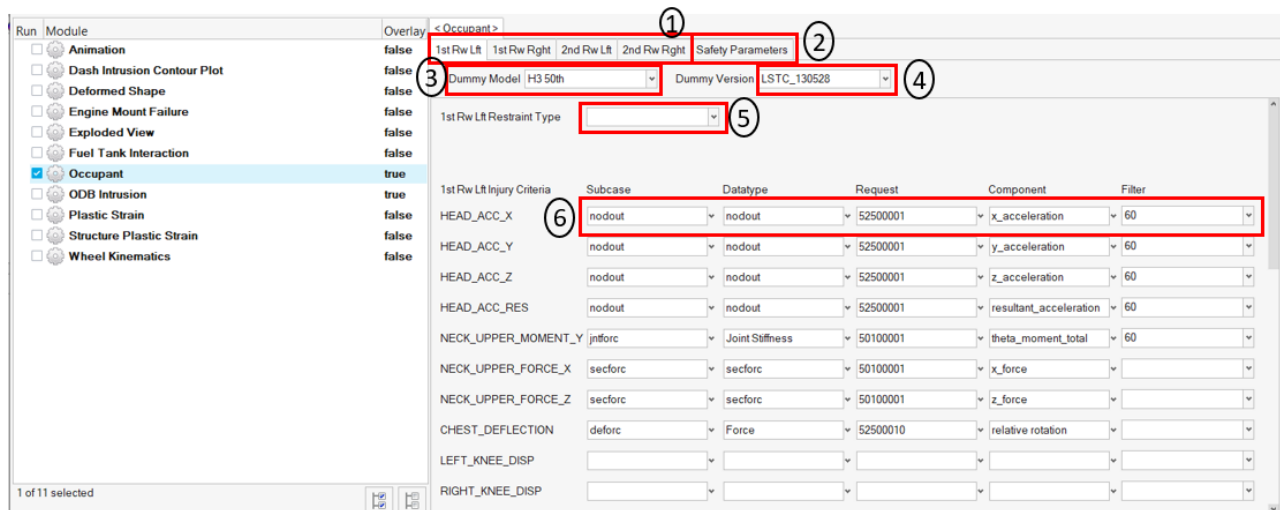

Inputs:

- 1) **Tabs** allowing users to define 1st row left & 1st row right **adult** dummy info as well as 2nd row left & 2nd row right **child** dummy info independently
- 2) **Safety Parameters** tab allows to select various parameters to be included in rating calculation
- 3) **Dummy model** selection option. Currently following dummy types are supported for different occupant positions as per the regulation.
 - For the 1st row left & 1st row right positions, Hybrid 3 50th dummy type is supported.
 - For the 2nd row left position, Q1.5 dummy type is supported.
 - Similarly, for the 2nd row right position, Q3 dummy type is supported
- 4) **Dummy version** selection. Users can either select a particular version number from the drop down or set it to config option. When selecting a version number, all the subcase, datatype, request & component types along with filters are predefined for the user based on defaults config file. When user selects the config option then it is user's responsibility to define all the inputs. This is especially needed when using a newer dummy version.
- 5) **Restraint type** selection. For each of the occupant, user is allowed to select the restraint type Belted or Unbelted.
- 6) **Driver / Passenger Injury Criteria selection.** This option is enabled only when the dummy version is set to config. User should first make sure to load the Time History file (binout) by clicking the Load

 
button. After loading the file, user can start defining the appropriate subcase, datatype, request & component types for each of the injury criteria.

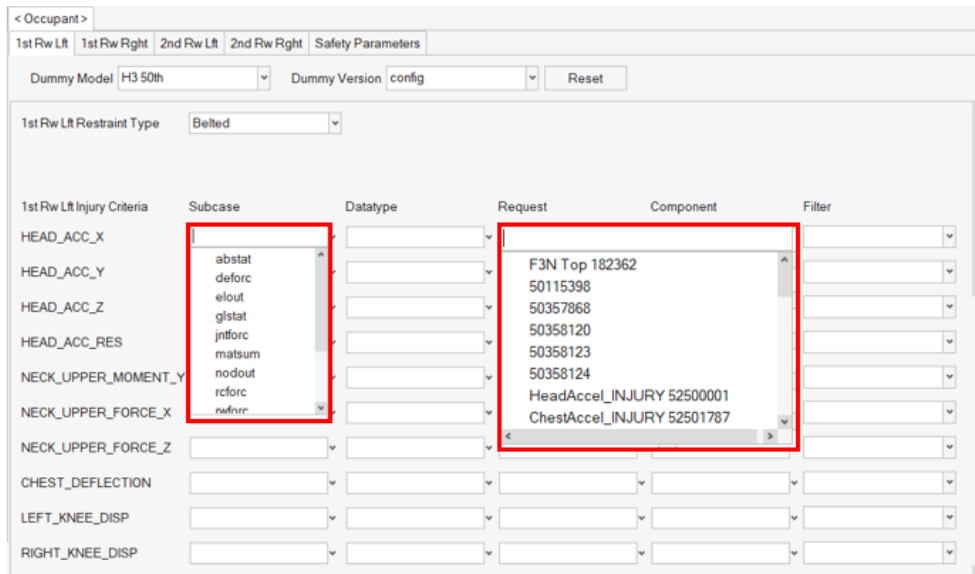

GNCAP Occupant Report details

A detailed report is generated for each of the occupant with the following info. A number of plots are created for each of the occupant injury criteria.

 Adult Occupant Protection Summary

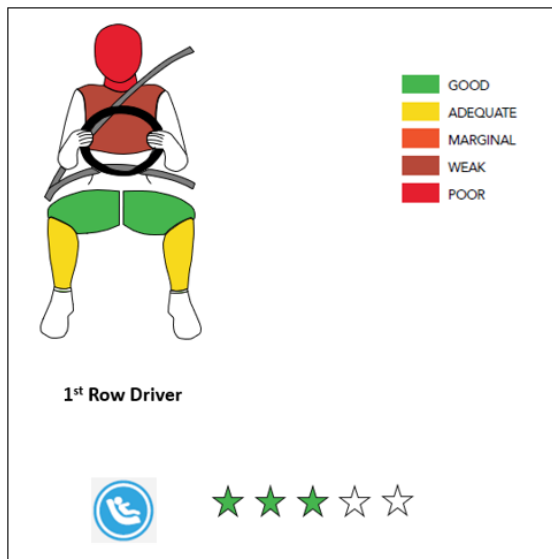


ADULT FRONTAL IMPACT OCCUPANT PROTECTION ASSESSMENT	H3 50th - LSTC_130528 - t1
Head-Neck	0
Chest	0.736
Femur-Knee	4
Tibia-Foot	3.806
Seat Belt Reminders(SBR)	1
Max (17)	9.542

AOP Total Points	9.542 Points
AOP Star Rating	3 Stars

Adult Occupant Protection Detailed Summary

	Title	Higher Performance Limit	Lower Performance Limit	Driver - H3 50th - LSTC_130528 - t1	Points
Head	HIC 15	500	700	490.238	4
	Resultant Acc. 3 msec (G)		88	68.175	4
Neck	Shear (N)	(0,25,35,45,1000) (1900.0,1200.0,1200.0,1100.0,1100.0)	(0,25,35,45,1000) (3100.0,1500.0,1500.0,1100.0,1100.0)	340.003	4
	Tension (N)	(0,35,60,1000) (2700.0,2300.0,1100.0,1100.0)	(0,35,60,1000) (3300.0,2900.0,1100.0,1100.0)	260.659	4
	Extension (N.m)	42	57	34.960	4
Chest	Deflection (mm)	22	42	38.322	0.736
	Viscous Criterion (mm/s)	500	1000	223.512	4
Knee	Left Knee Disp (mm)	6	15	err	err
	Right Knee Disp (mm)	6	15	err	err
Femur	Femur Axial Force - Left (N)	3800	7560	1129.302	4
	Femur Axial Force - Right (N)	3800	7560	1514.367	4
Lower Leg	Tibia Axial Force - Left (N)	2000	8000	2291.104	3.806
	Tibia Axial Force - Right (N)	2000	8000	2182.596	3.878
	Left Tibia Index	0.4	1.3	0.435	3.844
	Right Tibia Index	0.4	1.3	0.385	4
Foot-Ankle	Pedal displacement (mm)	100	200	err	err

 1st R_w Lft Head

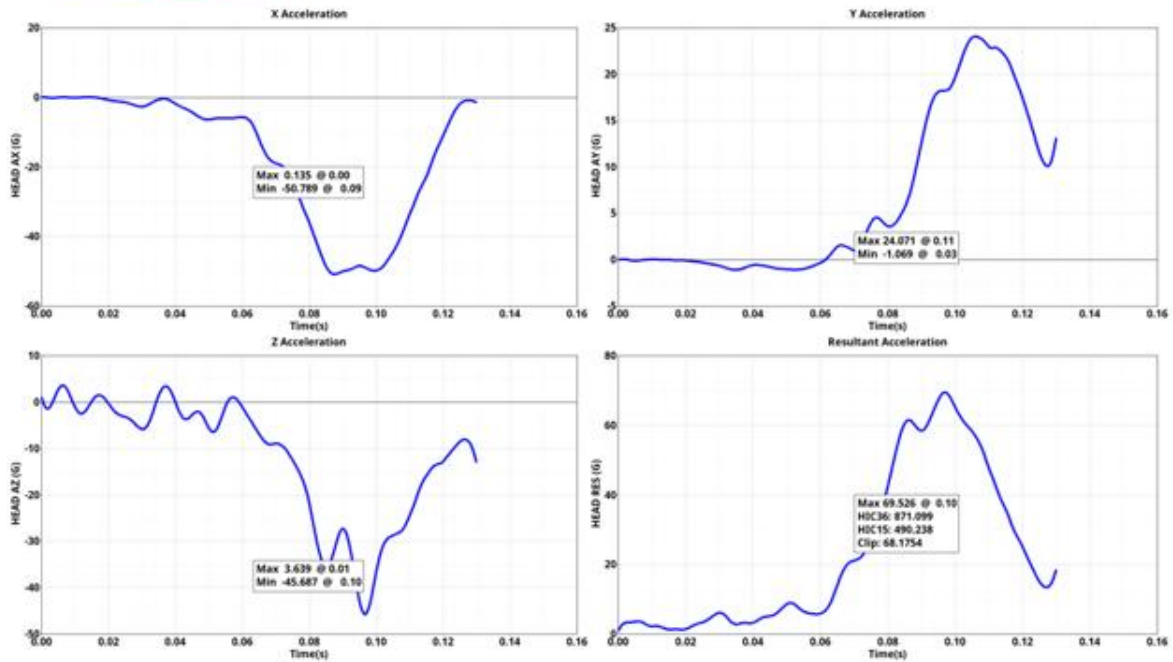

1st Rw Lft Tibia Left

