

ALTAIR

Altair[®] FluxMotor[®] 2022.1

Induction Machines - Squirrel cage - Inner & Outer rotor

Motor Factory – Design

General user information

Contents

1 Induction machines – Squirrel cage – Inner rotor	6
1.1 Home page view	6
1.2 Topology	7
1.2.1 Overview	7
1.2.2 Inputs	8
1.2.2.1 Method to define the airgap	8
1.2.2.2 Structural data	8
1.2.3 Advice for use	9
1.3 Housing	10
1.3.1 Overview	10
1.3.2 Housing - Frame	11
1.3.2.1 Type of frame	11
1.3.2.2 Combination between lamination outer shape and frame types	12
1.3.3 Housing – Fin	13
1.3.3.1 Overview	13
1.3.3.2 Type of fins	13
1.3.3.3 Parallel type fins – Topologies and dimensions	14
1.3.3.4 Radial type fins – Topologies and dimensions	15
1.3.4 Housing – Cooling circuit	17
1.3.4.1 Overview	17
1.3.4.2 Type of cooling circuits	17
1.3.4.3 Cooling circuits – Topologies and dimensions	18
1.4 Shaft	22
1.4.1 Overview	22
1.4.2 Shaft type	23
1.4.3 Shaft - Inputs	23
1.4.4 Shaft – Bearing	24
1.4.4.1 Overview	24
1.4.4.2 Shaft-Bearing type and characteristics	25
1.4.4.3 Shaft-Bearing input parameters	26
1.5 Bar	27
1.5.1 Overview	27
1.6 Bar design	28
1.6.1 Choose a bar topology	28
1.6.1.1 Attached documents – Additional information	28
1.6.1.2 Inputs / Outputs	29
1.6.2 Bar – Skew	30
1.6.2.1 Overview	30
1.6.2.2 Set a skew angle	31
1.7 End ring	32
1.7.1 Overview	32
1.7.2 End ring – Design – Inputs / Outputs	32
1.7.3 End ring – Inter bar impedance	33
1.7.3.1 Overview	33
1.7.3.2 Calibration factors	34
1.7.3.3 Automatic computation mode	35
1.7.3.4 Constant computation mode	35
1.7.3.5 Working point evaluation	36

1.7.3.6	Main results-----	36
1.8	Slot-----	38
1.8.1	Overview-----	38
1.8.2	Slot - Design-----	39
1.8.2.1	Slot shape - Choose a slot topology -----	39
1.8.2.2	Attached documents – Additional information -----	39
1.8.2.3	Inputs / Outputs -----	40
1.8.3	Slot – Skew -----	41
1.8.3.1	Overview-----	41
1.8.3.2	Set A skew angle-----	42
1.8.4	Slot – Lamination -----	43
1.8.4.1	Overview-----	43
1.8.4.2	Circular shape lamination -----	43
1.8.4.3	Square shape lamination -----	44
1.9	Winding-----	46
1.10	External cooling-----	48
1.10.1	Overview-----	48
1.10.2	Advice for use -----	49
1.10.2.1	Hypothesis on fluidic computations-----	49
1.10.2.2	Validity domain of the fluidic computations -----	49
1.10.2.3	Frame convection and cooling circuit convection -----	49
1.10.2.4	Temperature considered for fluidic computations-----	49
1.10.3	Fluidic – Inputs -----	50
1.10.3.1	Natural convection-----	51
1.10.3.2	Forced convection-----	52
1.10.4	Radiation – Inputs -----	54
1.10.5	X-Factors – Inputs -----	55
1.10.5.1	Overview-----	55
1.10.5.2	Calibration factors-----	56
1.10.5.3	Model evaluation-----	56
1.10.6	External cooling outputs-----	57
1.10.6.1	Frame external area -----	57
1.10.6.2	Cooling circuit -----	59
1.11	Internal cooling -----	60
1.11.1	Overview-----	60
1.11.2	Advice for use -----	61
1.11.2.1	Hypothesis on fluidic computations-----	61
1.11.2.2	Validity domain of the fluidic computations -----	61
1.11.2.3	Natural convection on end windings-----	61
1.11.2.4	Temperatures considered for fluidic computations-----	61
1.11.2.5	Interface thickness usage -----	61
1.11.2.6	Radiation from the shaft -----	61
1.11.3	Fluidic – Inputs -----	62
1.11.3.1	Natural convection-----	63
1.11.3.2	Forced convection-----	63
1.11.4	Radiation – Inputs -----	67
1.11.5	Interface – Inputs-----	68
1.11.6	Slot model – Inputs -----	69
1.11.7	X-Factors-----	70
1.11.7.1	X-factor mapping -----	71
1.11.8	Internal cooling outputs-----	75
1.11.8.1	End-space-----	75
1.11.8.2	Airgap-----	75
1.11.8.3	Interface conduction resistances-----	75


1.11.8.4	Slot model characteristic	75
1.12	Materials	76
1.12.1	Overview	76
1.12.2	Rotor inputs / outputs	77
1.12.3	How to assign materials – Example for rotor lamination	78
1.12.4	How to assign materials – Example for stator lamination	79
1.12.5	Materials for the winding	80
1.12.6	Material datasheet	81
2	Induction machines – Squirrel cage – Outer rotor	82
2.1	Home page view	82
2.2	Topology	83
2.2.1	Overview	83
2.2.2	Inputs	84
2.2.2.1	Method to define the airgap	84
2.2.2.2	Structural data	84
2.2.3	Advice for use	85
2.3	Shaft	86
2.3.1	Overview	86
2.3.2	Shaft type	87
2.3.3	Shaft topology	88
2.3.4	Inputs	89
2.3.5	Display Fix and rotating parts	90
2.4	Housing	91
2.4.1	Overview	91
2.4.2	Frame design area	92
2.5	Bar	93
2.5.1	Overview	93
2.5.2	Bar design	94
2.5.2.1	Choose a bar topology	94
2.5.2.2	Attached documents – Additional information	94
2.5.2.3	Inputs / outputs	95
2.5.3	Bar – Skew	96
2.5.3.1	Overview	96
2.5.3.2	Set a skew angle	97
2.6	End ring	98
2.6.1	Overview	98
2.6.1.1	Inputs / Outputs	98
2.6.2	End ring – Inter bar impedance	99
2.6.2.1	Overview	99
2.6.2.2	Calibration factors	100
2.6.2.3	Automatic computation mode	101
2.6.2.4	Constant computation mode	101
2.6.2.5	Working point evaluation	102
2.6.2.6	Main results	102
2.7	Slot	104
2.7.1	Overview	104
2.7.2	Slot – Design	105
2.7.2.1	Choose a slot topology	105
2.7.2.2	Attached documents – Additional information	105
2.7.2.3	Inputs / Outputs	106

2.7.3	Slot – Skew	107
2.7.3.1	Overview	107
2.7.3.2	Set a skew angle	108
2.8	Winding	109
2.9	Materials	111
2.9.1	Overview	111
2.9.2	Rotor Inputs / Outputs	112
2.9.3	How to assign materials? – Example for rotor lamination	113
2.9.4	How to assign materials? – Example for stator laminations	114
2.9.5	Materials for the winding	115
2.9.6	Material datasheet	116

1 INDUCTION MACHINES – SQUIRREL CAGE – INNER ROTOR

1.1 Home page view

The Motor Factory – DESIGN area is the first environment of Motor Factory.
It is composed of five main zones. This is the guided line to design your machine.

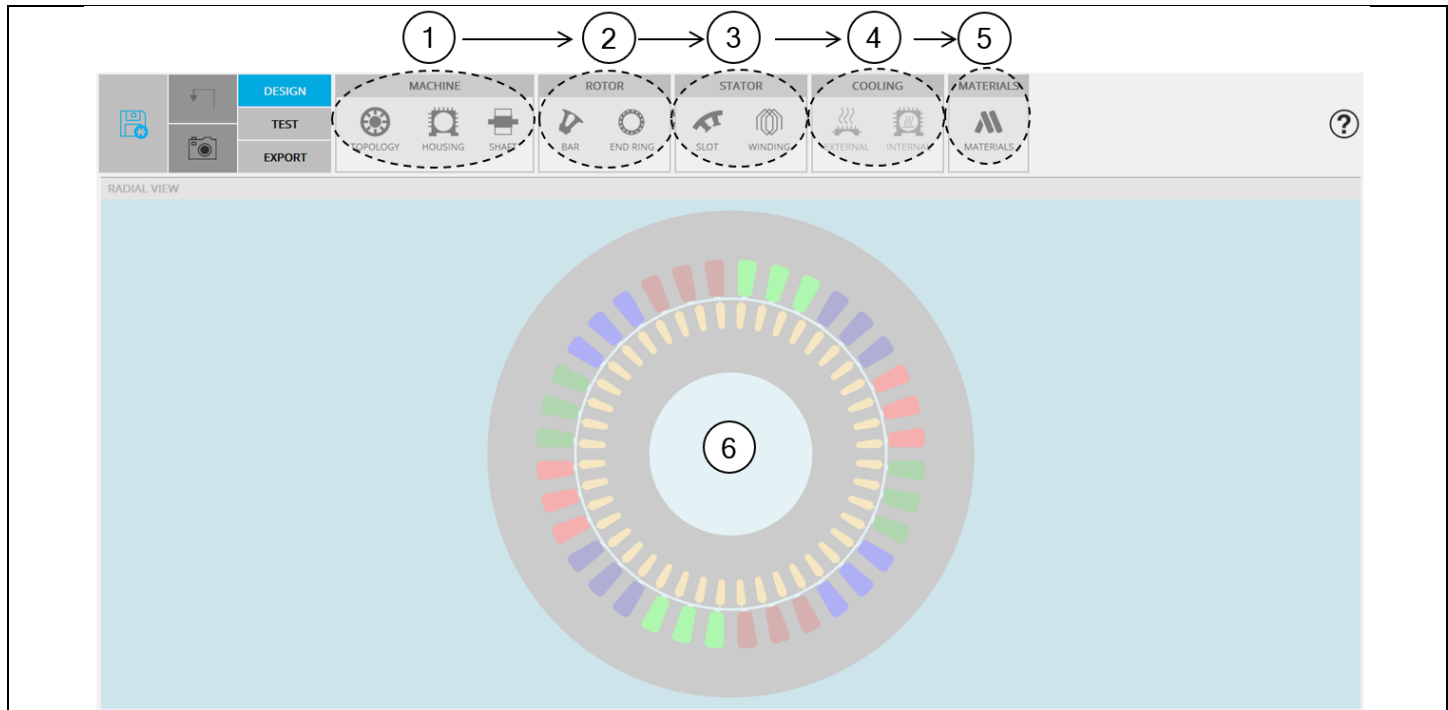

Motor Factory – DESIGN area view – Example for induction machine – Squirrel cage

Zone 1 MACHINE	Definition of general data of the machine depending on the considered type of machine • Topology with overall dimensions, No. slots, No. poles, No. bars • Housing, Frame, Fins and cooling circuit topologies and dimensions • Shaft, type, Bearings and dimensions
Zone 2 ROTOR	Access to the main functions to design the ROTOR and its corresponding subsets: • Bar, End-ring
Zone 3 STATOR	Access to the main functions to design the STATOR and its corresponding subsets: • Slot, Winding
Zone 4 COOLING	Define external and internal cooling parameters Convection, radiation, conductivity parameters and X-factors Note: By default, accesses to External cooling and Internal cooling environments are locked. External cooling is unlocked when a frame is defined (Housing / Frame environment) Internal cooling is unlocked when a frame is defined (Machine / Housing / Frame environment) and a shaft with bearings are defined (Machine / Shaft / Bearing environment).
Zone 5 MATERIALS	Area to select all the materials needed to build the machine, rotor, stator and the cooling
Zone 6 VIEW	Visualization of the motor radial view. The winding (automatically defined) is shown. Note: Graphic functions like export picture and zoom are available on this view by right clicking on mouse (right part of the panel). See system functions, graphic management to get more information.

1.2 Topology

1.2.1 Overview

The first step of the design consists of defining structural data of the machine. However, at any time, it is possible to reach and modify the structural data from the Motor Factory design environment. Here is the process to reach and modify the structural data from the general data panel.

1

2

3

4

5

Process to reach and modify the structural data

1	Selection of the MACHINE subset: TOPOLOGY panel (Click on the icon TOPOLOGY)
2	Choose a way to define the diameters of the machine and the airgap See additional information below.
3	Modify the values of the structural data – When selected, the corresponding arrow is displayed on the view
4	Button to apply inputs
5	Icon to export data into *.txt or *.xlsx files - Please see above illustration

For more details concerning general functions of Motor Factory Design environment, please refer to the document “MotorFactory_2022.1_Introduction”.

1.2.2 Inputs

1.2.2.1 Method to define the airgap

In the topology sub area, three ways are possible to define the structural data of the machine, like the diameters and the airgap. They are illustrated below.

TOPOLOGY?

Dimension input mode

STATOR	
Outer diameter (mm)	210.0
Inner diameter (mm)	135.0
Length (mm)	80.0
No. slots	36
No. poles	4

AIRGAP	
Length (mm)	5.0 E-1

ROTOR	
Outer diameter (mm)	134.0
Inner diameter (mm)	70.0
Length (mm)	80.0
No. bars	44

1

TOPOLOGY?

Dimension input mode

STATOR	
Outer diameter (mm)	210.0
Inner diameter (mm)	135.0
Length (mm)	80.0
No. slots	36
No. poles	4

AIRGAP	
Length (mm)	5.0 E-1

ROTOR	
Outer diameter (mm)	134.0
Inner diameter (mm)	70.0
Length (mm)	80.0
No. bars	44

2

TOPOLOGY?

Dimension input mode

STATOR	
Outer diameter (mm)	210.0
Inner diameter (mm)	135.0
Length (mm)	80.0
No. slots	36
No. poles	4

AIRGAP	
Length (mm)	5.0 E-1

ROTOR	
Outer diameter (mm)	134.0
Inner diameter (mm)	70.0
Length (mm)	80.0
No. bars	44

3

Methods to define the diameters of the machine and the airgap

Example for an induction machine with squirrel cage and inner rotor

1	The user defines the inner diameter of the stator and the airgap. The outer diameter of the rotor is automatically deduced (the automatically computed value is displayed in grey color).
2	The user defines the inner diameter of the stator and the outer diameter of the rotor. The airgap is automatically deduced (automatically computed value is displayed in grey color).
3	The user defines the outer diameter of the rotor and the airgap. The inner diameter of the stator is automatically deduced (automatically computed value is displayed in grey color).

1.2.2.2 Structural data

Here are the user input parameters to define the structural data of the machine:

- Stator outer diameter
- Stator inner diameter
- Stator length
- Number of slots
- Number of poles
- Airgap length
- Rotor outer diameter
- Rotor inner diameter
- Rotor length
- Number of bars

The modification of the structural data can lead to the modification of the user input parameters in defining dimensions of parts like slots or bars. When modifications occur, a warning is displayed.
The application ranges for structural data are defined below.

Proprietary Information of Altair Engineering

ALTAIR

1.2.3 Advice for use

The choice of diameters is possible over the range [1, 20000] mm.

The choice of machine length is possible over the range [1, 20000] mm.

The number of slots is possible over the range [3, 2400].

The number of poles is possible over the range [2, 400].

The number of bars is possible over the range [5, 500].

For more information, see the list of allowed combinations between the number of slots and the number of poles, synthesized in the section dedicated to winding.

Note: Our building and computation processes have been qualified over the following data ranges:

Range for diameters [1, 1000] mm.

Range for the number of slots [3, 144].


Range for the number of poles [2, 20].

Range for the number of bars [5, 180].

Working beyond these limits is possible, but accurate results are the responsibility of the user.

1.3 Housing

1.3.1 Overview

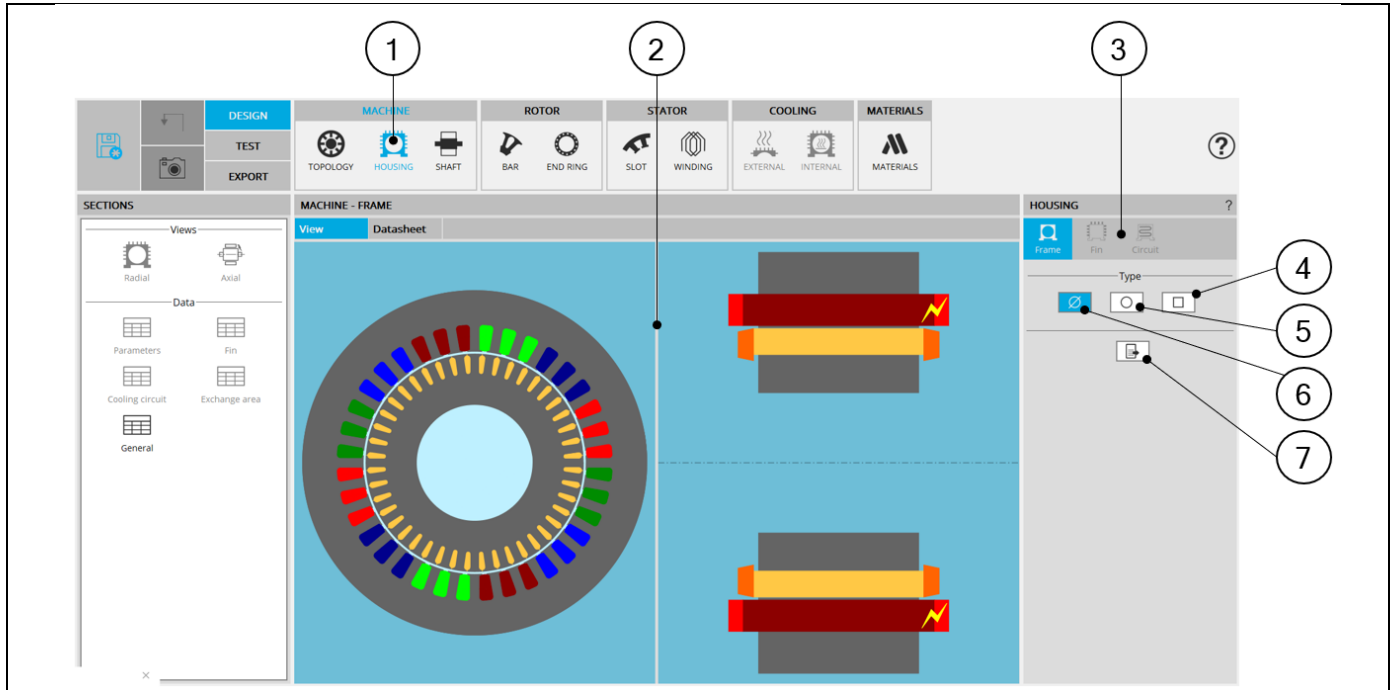

HOUSING design area

1	Selection of the MACHINE subset: HOUSING panel (Click on the icon HOUSING)
2	Radial and axial view of the motor.
3	Several sections allow defining all characteristics which are dealing with the Housing: Frame, Fin and Cooling circuit. Note: By default, the section Frame is selected.
4-5-6	Three choices are available to define the lamination topology: None, Circular and Square
4	Choice of a square shape lamination. See additional information below
5	Choice of a circular shape lamination. See additional information below
6	Choice of "None" meaning that the outer shape of lamination is circular without extensions. Outer dimensions of lamination are indicated in general data (structural data part).
7	Icon to export lamination data into *.txt or *.xlsx files.


1.3.2 Housing - Frame


1.3.2.1 Type of frame


The tools available in the housing tab allow defining the frame topology.
Three choices are available to define this topology: None, Circular or Square.

By default, housing type is set to "None". There is no frame.

Important note: When "None" is selected, accesses to External cooling and Internal cooling environments are locked.

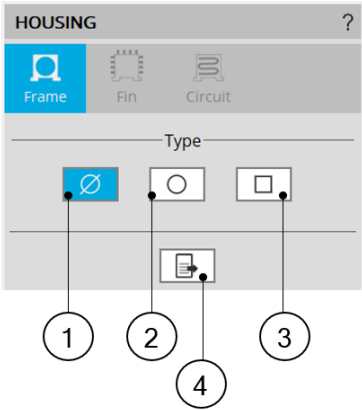	1	Default setting : Housing type is « None » The machine has no frame.
	2	Button to select a Circular shape frame.
	3	Button to select a Square shape frame.
	4	Icon to export frame data into *.txt or *.xlsx files.
Frame type available		

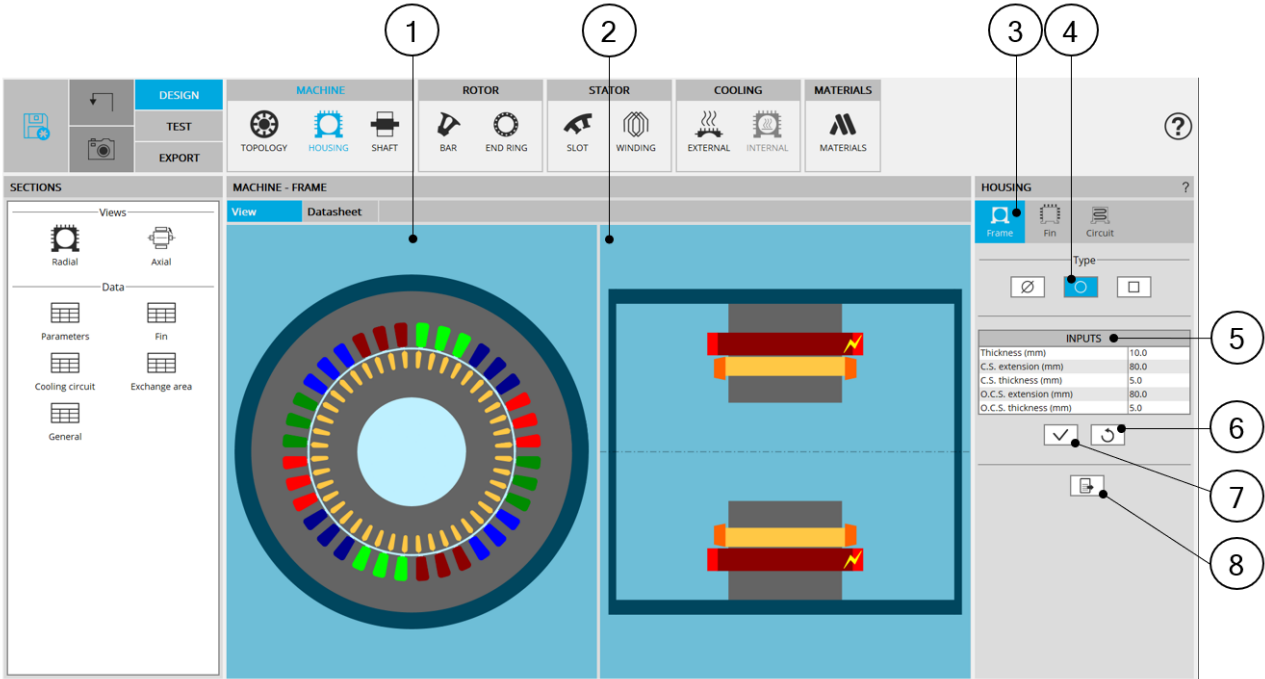	
Circular shape frame design area	
1	Radial view of the motor, including the housing topology and dimensions.
2	Axial view of the motor, including the housing topology and dimensions.
3	The section frame is selected to define the type and dimensions of the frame.
4	Selected button to set a circular shape frame.
5	User input parameters to define the frame dimensions. For more information see below.
6	Button to restore default input values.
7	Button to apply inputs. Pressing the enter key twice applies inputs too.
8	Icon to export frame data into *.txt or *.xlsx files.

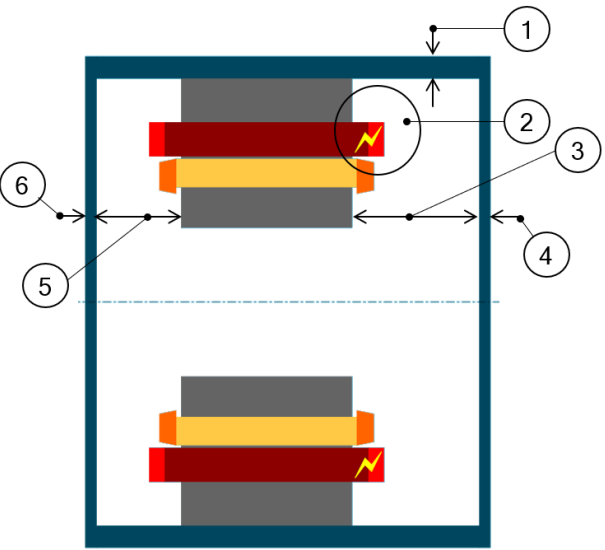



1	Thickness of the frame. Allowed range of values]0, 50] mm.
2	Connection side (C.S.) is identified by yellow lightning.
3	Connection side extension. Allowed range of values [0, 20000] mm.
4	Connection side – End-plate thickness. Allowed range of values [0, 50] mm.
5	Opposite connection side extension. Allowed range of values [0, 20000] mm.
6	Opposite connection side – End-plate thickness. Allowed range of values [0, 50] mm.


User input parameters to define frame dimensions in the axial view

1.3.2.2 Combination between lamination outer shape and frame types

		Frame type		
		None	Circular	Square
Lamination outer shape	None	v	v	v
	Circular	v	v	v
	Square	v	Not possible	v

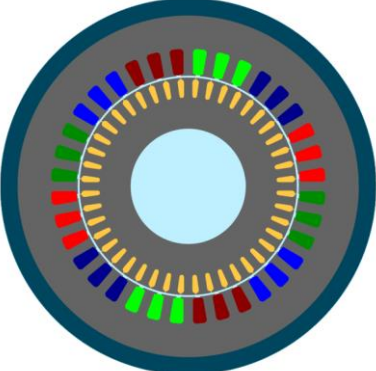

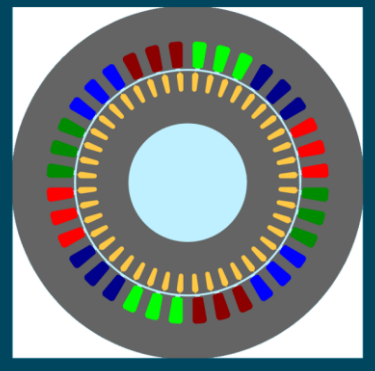

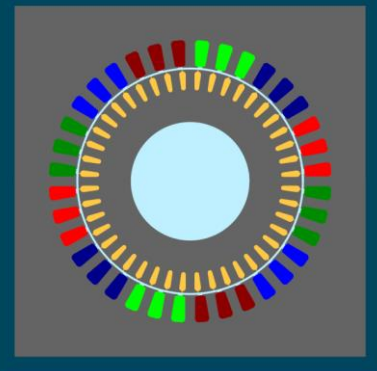


Circular shape lamination & Circular shape frame	Circular shape lamination & Square shape frame	Square shape lamination & Square shape frame
---	---	---

1.3.3 Housing – Fin

1.3.3.1 Overview

Access to the “Fin” area is unlocked when a frame is defined, whose shape is circular or square.

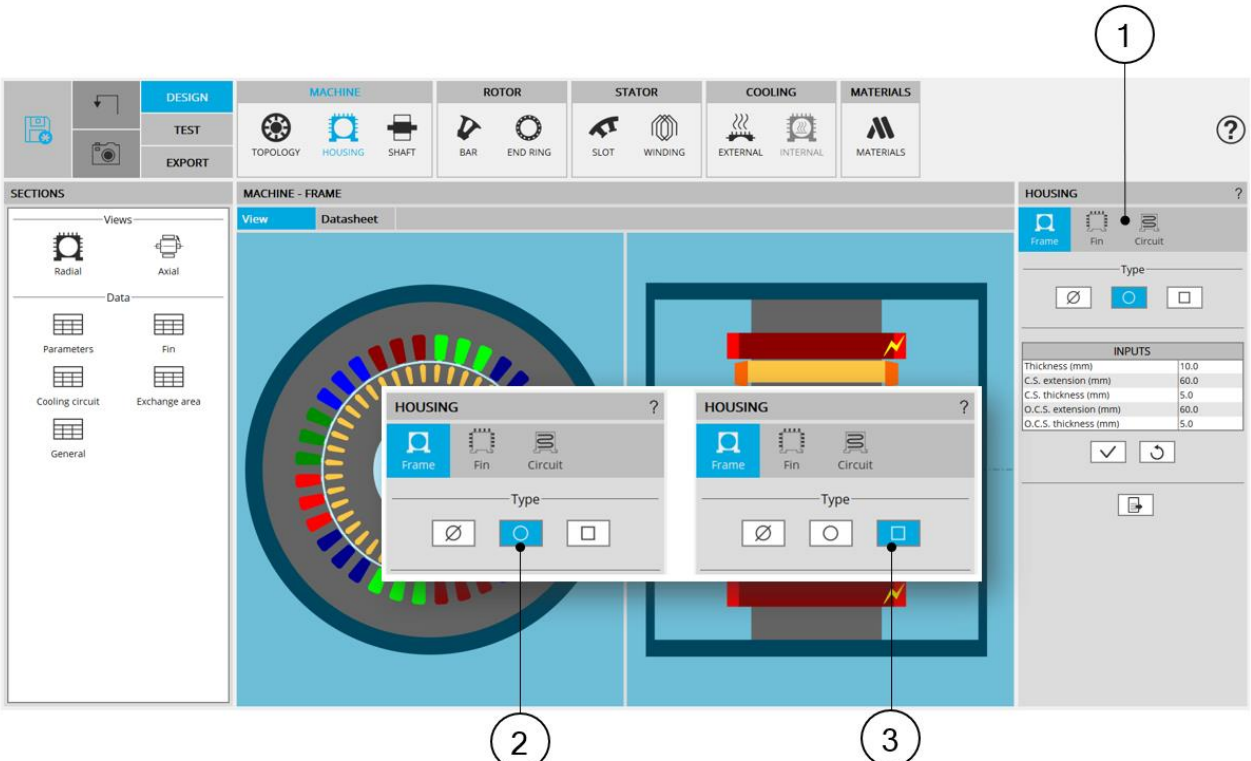


How to unlock the “Fin” area ?	
1	“Fin” area is unlocked (as well as the “Cooling circuit” area).
2	Selection of a circular shape frame.
3	Selection of a square shape frame.

1.3.3.2 Type of fins

The tools available in the housing tab allow defining the fin topology.
Three choices are available to define this topology: None, Parallel or Radial.

By default, fin type is set to “None”. There is no fin.

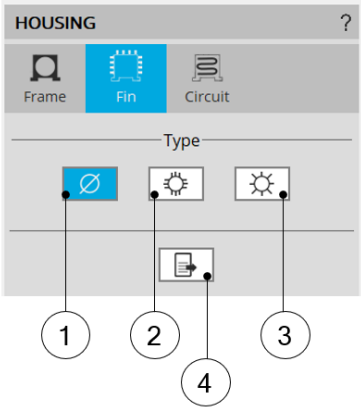


1	Default setting : Fin type is « None » The housing has no fin.
2	Button to select parallel type fins.
3	Button to select radial type fins.
4	Icon to export fin data into *.txt or *.xlsx files.

Fin type available

1.3.3.3 Parallel type fins – Topologies and dimensions


1) Parallel type fin area

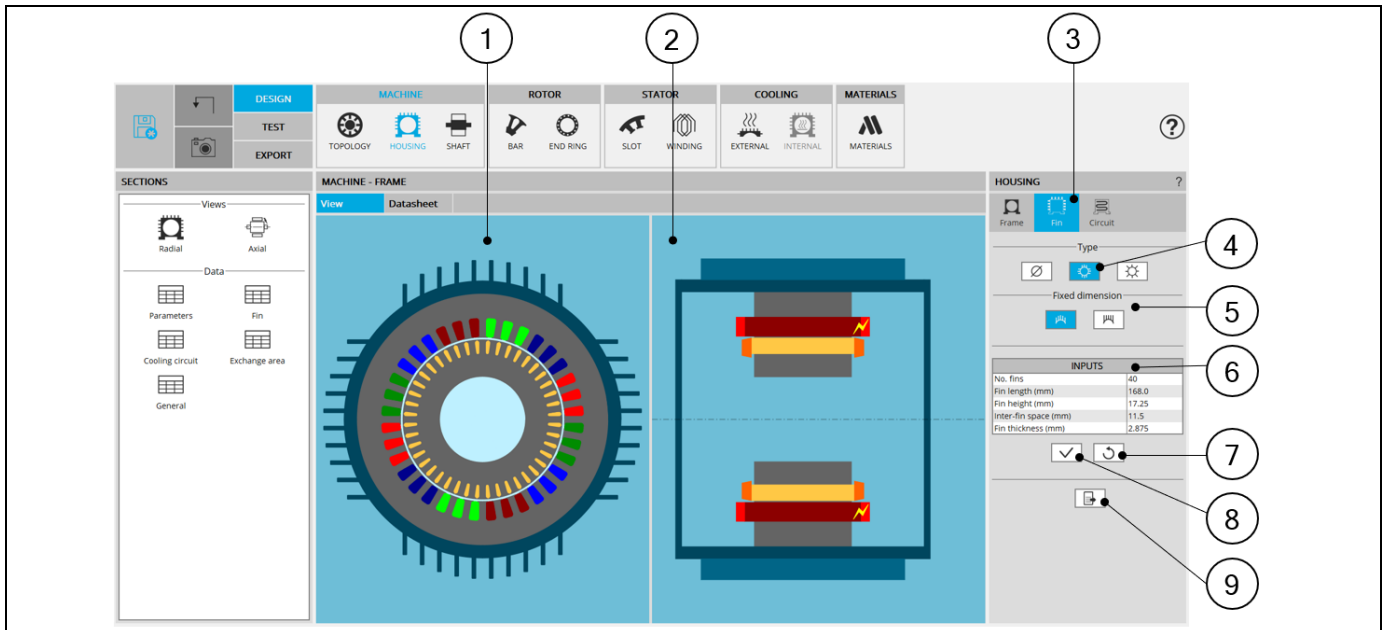

Parallel type fin design area

1	Radial view of the motor, including the housing topology with fin topology and dimensions.
2	Axial view of the motor, including the housing topology with fin topology and dimensions.
3	The section fin is selected to define the type and dimensions of the fins.
4	Selected button to define parallel type fins.
5	Two ways are possible to define the fin dimensions: "Height" and "Extension" options. See below illustrations.
6	User input parameters to define the fin dimensions. For more information see below.
7	Button to restore default input values.
8	Button to apply inputs. Pressing the enter key twice applies inputs too.
9	Icon to export frame data into *.txt or *.xlsx files.


2) Parallel type fins with constant height – Inputs

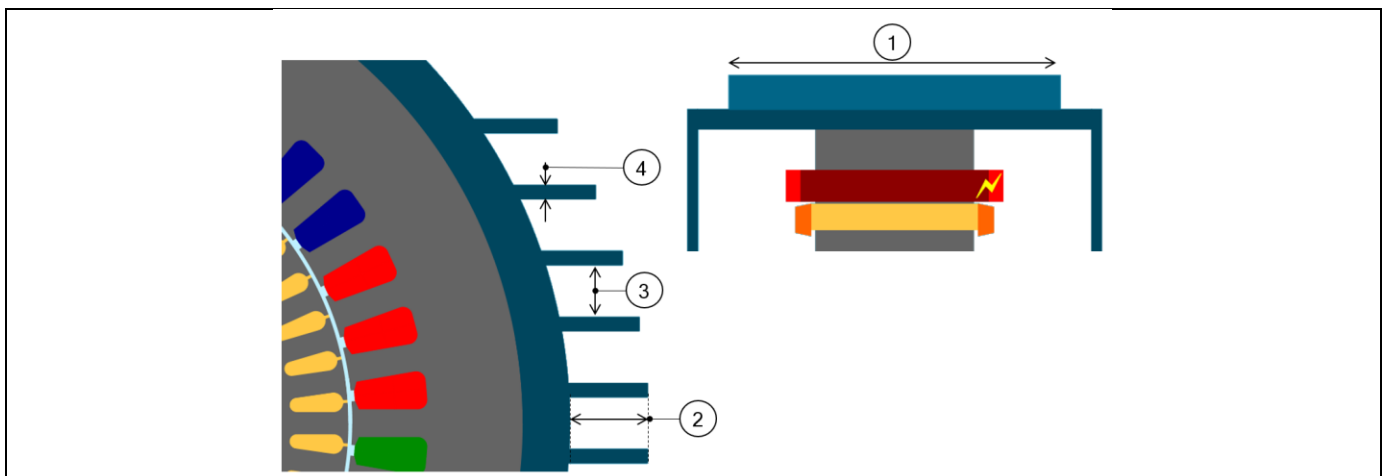

Parallel type fin with constant height - Inputs


#	No. fins (Number of fins) which spread all around the housing – Minimum allowed value = 12.
1	Fin length
2	Fin height
3	Inter-fin space
4	Fin thickness

3) Parallel type fins with constant total extension – Inputs

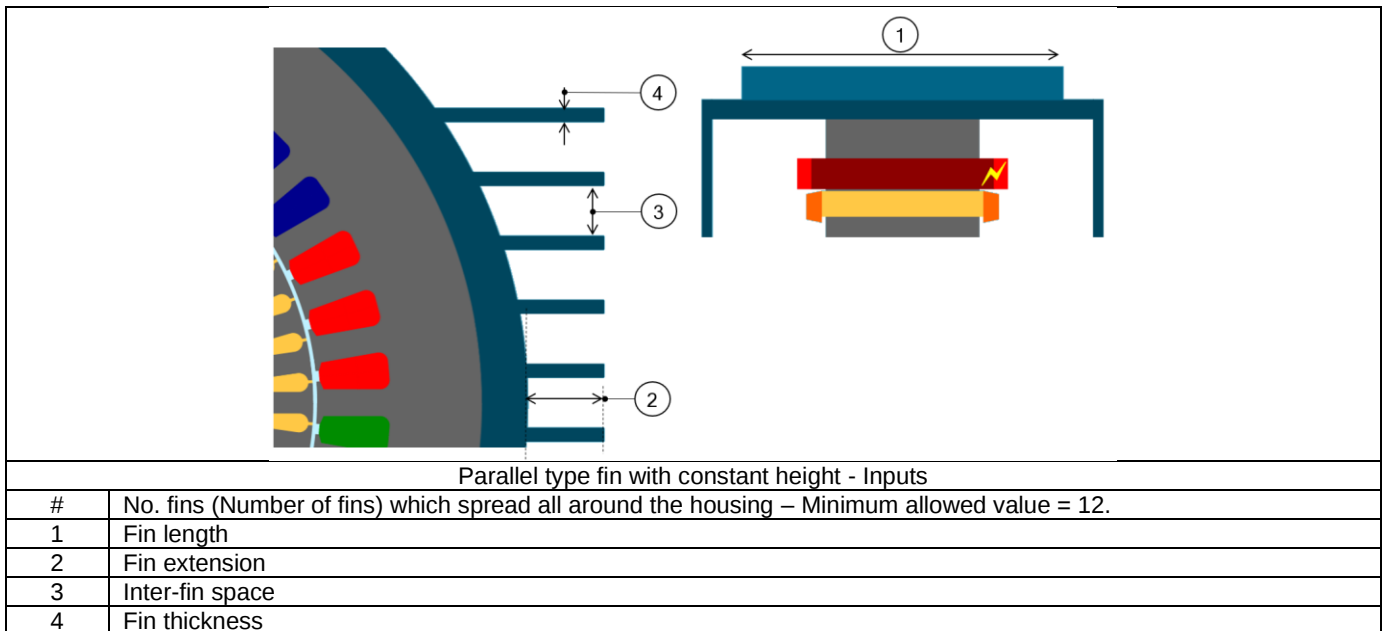


1.3.3.4 Radial type fins – Topologies and dimensions

1) Radial type fin area

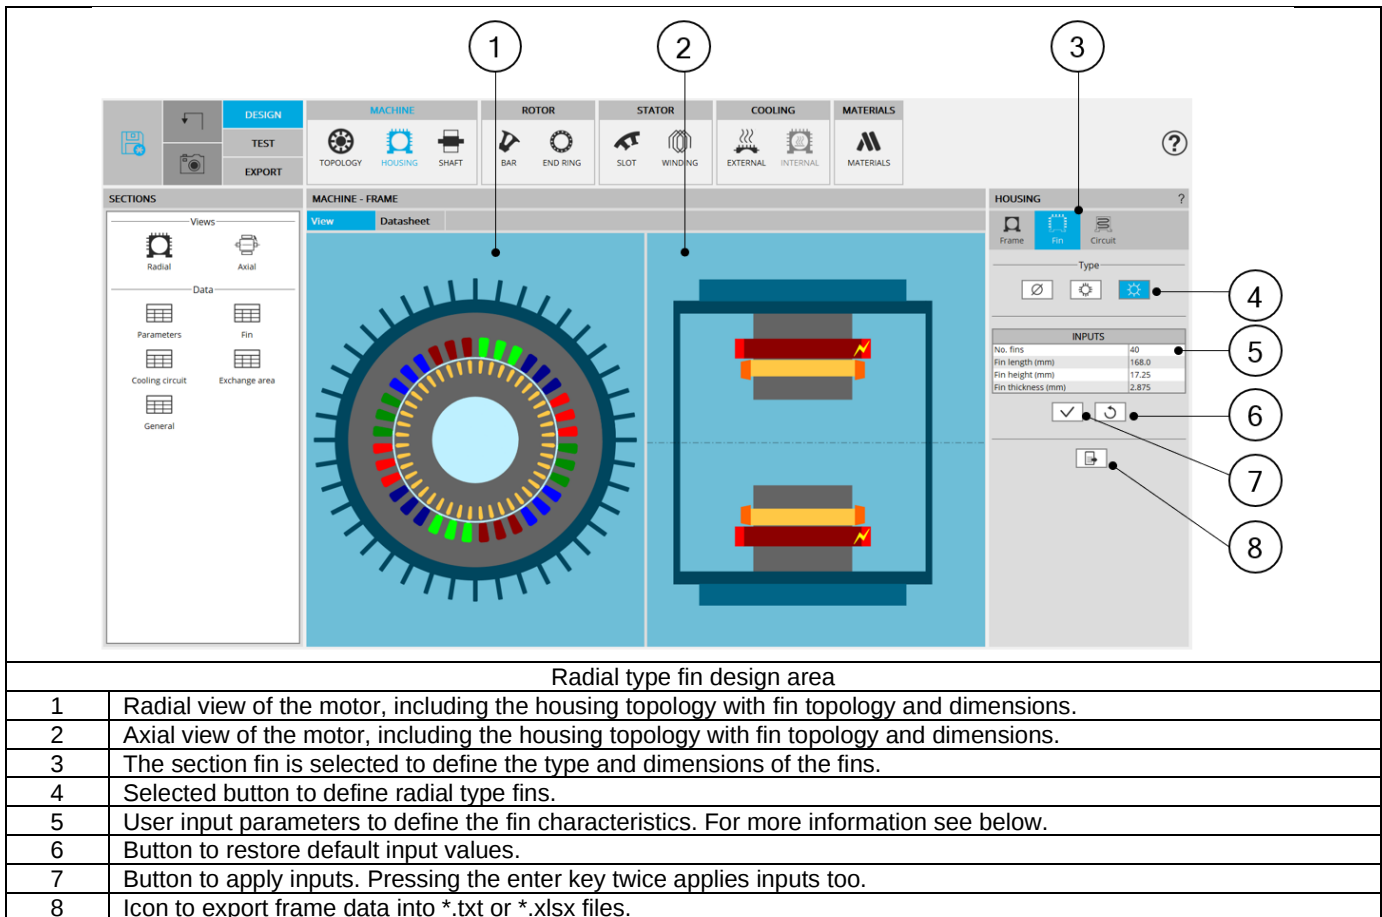

2) Radial type fins – Inputs

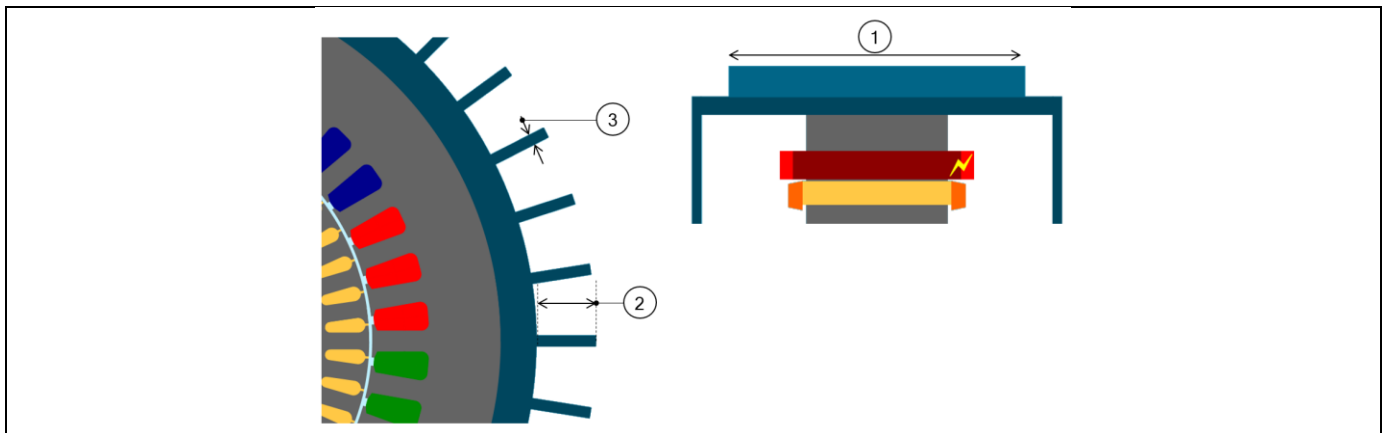


Parallel type fin with constant height - Inputs

#	No. fins (Number of fins) which spread all around the housing – Minimum allowed value = 12.
1	Fin length
2	Fin height
3	Fin thickness

1.3.4 Housing – Cooling circuit

1.3.4.1 Overview

Access to the “Cooling circuit” area is unlocked when a frame is defined, when its shape is circular or square.

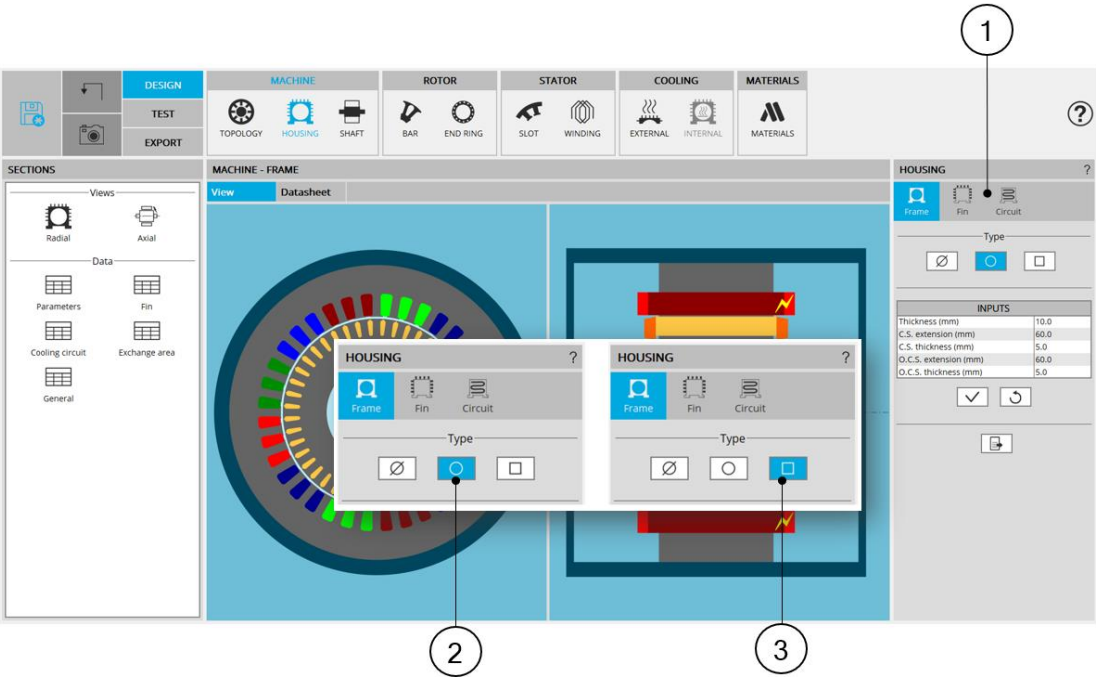


How to unlock the “Fin” area ?	
1	“Fin” area is unlocked (as well as the “Cooling circuit” area).
2	Selection of a circular shape frame.
3	Selection of a square shape frame.

1.3.4.2 Type of cooling circuits

The tools available in the housing tab allow defining the cooling circuit topology. Four choices are available to define this topology: None, Zig-Zag, solenoid or User shape.

By default, fin type is set to “None”. There is no cooling circuit.

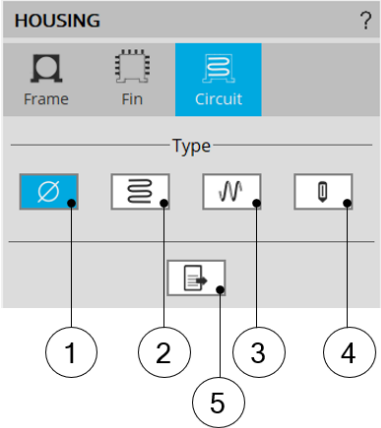

1	Default setting : Cooling circuit type is « None » Theres is no cooling circuit inside the housing.
2	Button to select Zig-Zag type cooling circuit.
3	Button to select Solenoid type cooling circuit.
4	Button to select User type cooling circuit.
5	Icon to export fin data into *.txt or *.xlsx files.

Cooling circuit type available

1.3.4.3 Cooling circuits – Topologies and dimensions

1) Zig-Zag type cooling circuit area

Zig-Zag type cooling circuit - Design area


1	Radial view of the motor, including the housing topology with cooling circuit topology and dimensions.
2	Axial view of the motor, including the housing topology with cooling circuit topology and dimensions.
3	The section Circuit (Cooling circuit) is selected to define the type and dimensions of the cooling circuit.
4	Selected button to define the topology of the cooling circuit.
5	Two sections can be considered: Circular (default one) and rectangular.
6	User input parameters to define the cooling circuit characteristics. For more information see below.
7	Button to restore default input values.
8	Button to apply inputs. Pressing the enter key twice applies inputs too.
9	Icon to export frame data into *.txt or *.xlsx files.

2) Zig-Zag shape cooling circuit topology with circular section tubes– Inputs


Zig-Zag shape cooling circuit – With circular tubes - Inputs

1	Yoke shift.
#	No. paths (Number of paths)
2	Path length in the axial direction
3	Section diameter


3) Zig-Zag shape cooling circuit topology with rectangular section tubes– Inputs

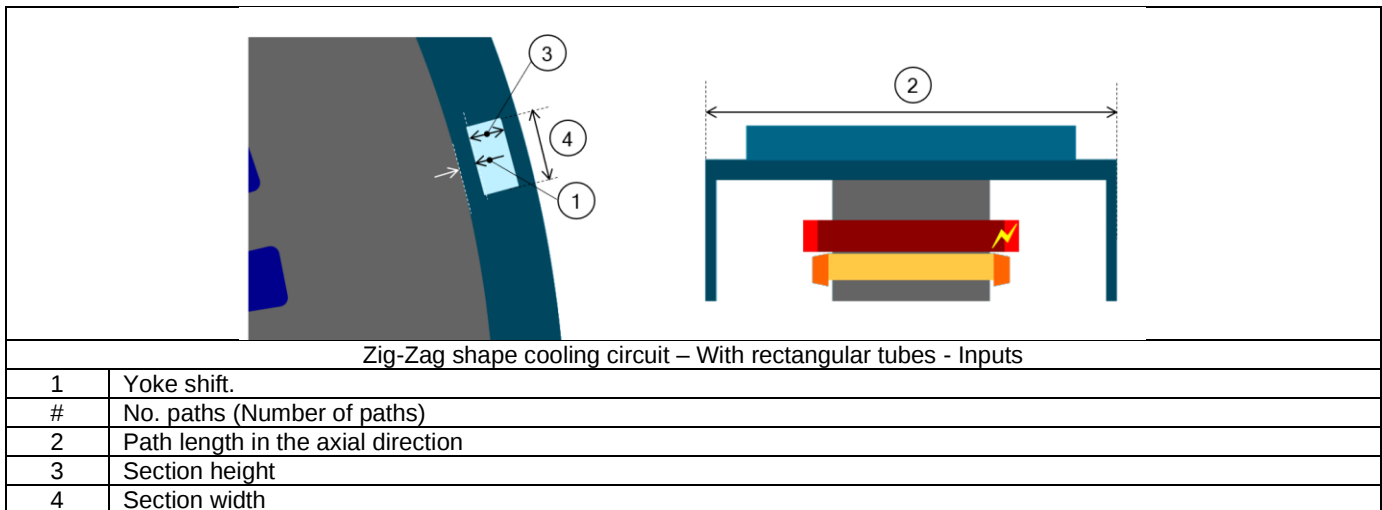

4) Solenoid type cooling circuit area

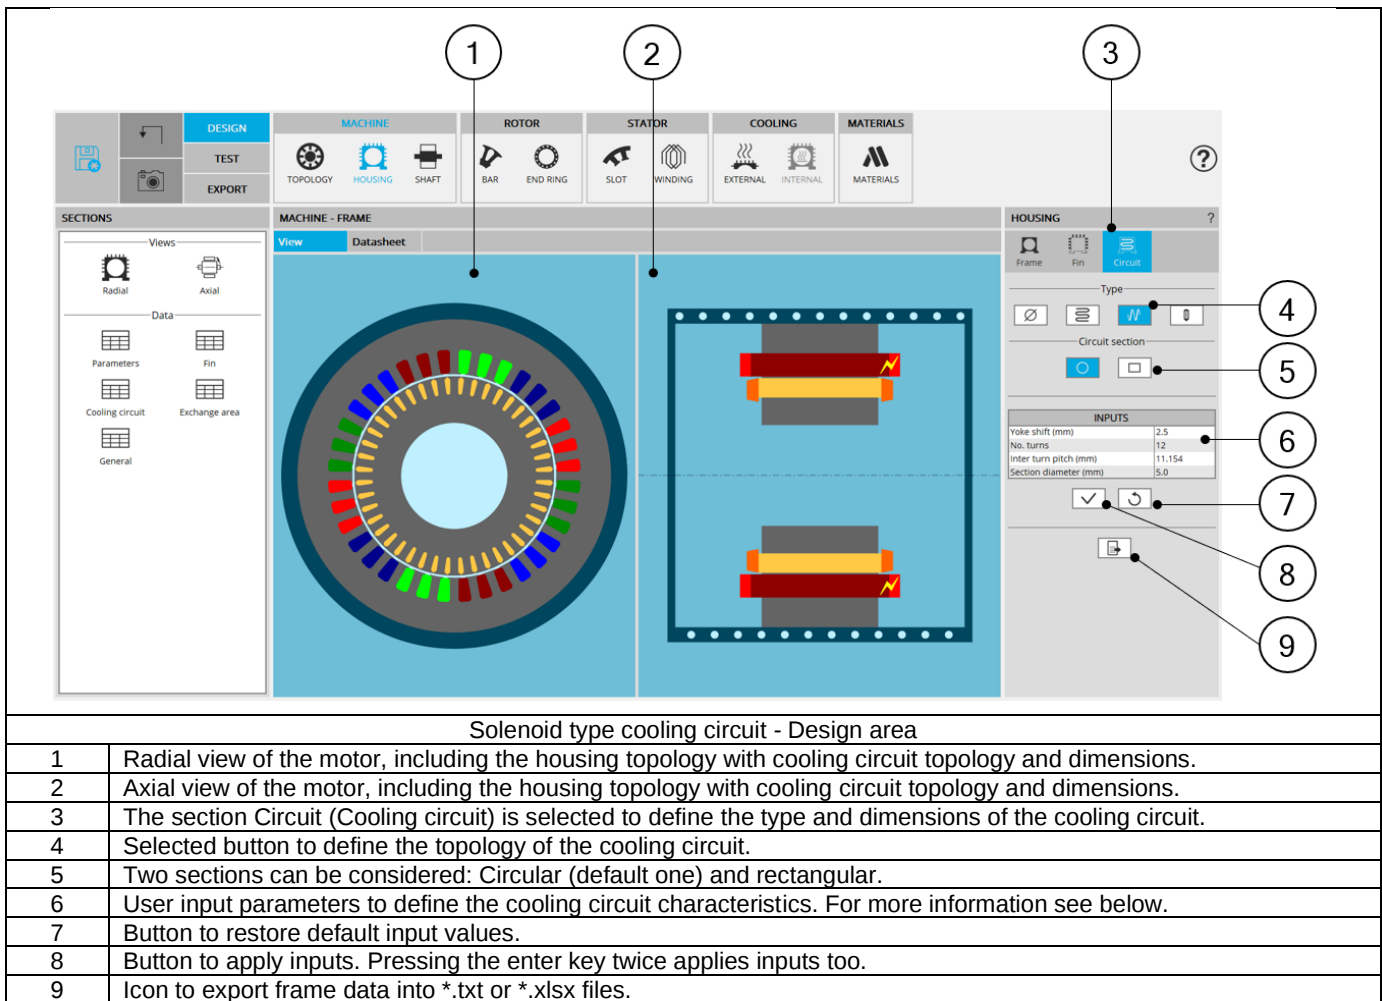


5) Solenoid shape cooling circuit topology with circular section tubes– Inputs

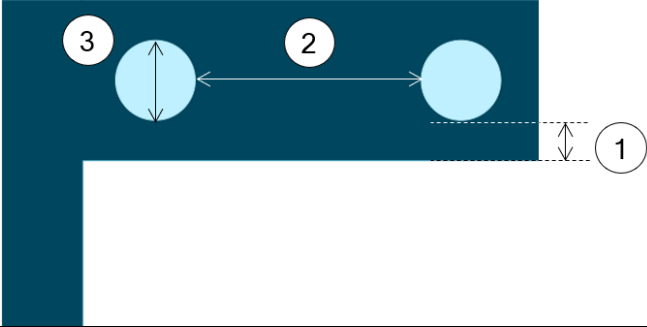


Solenoid shape cooling circuit – With circular tubes - Inputs	
1	Yoke shift.
#	No. turns (Number of turns)
2	Inter turn pitch
3	Section diameter

6) Solenoid shape cooling circuit topology with rectangular section tubes– Inputs

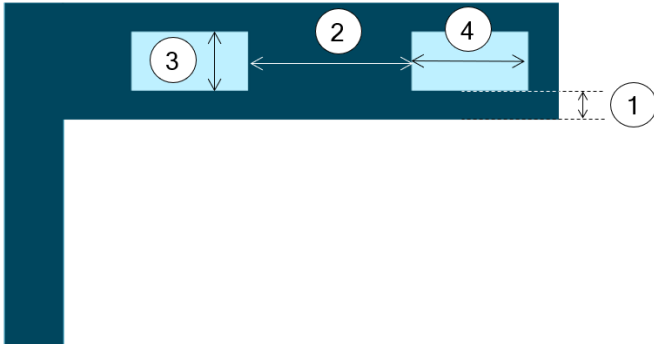

Solenoid shape cooling circuit – With rectangular tubes - Inputs	
1	Yoke shift.
#	No. turns (Number of turns)
2	Inter turn pitch
3	Section height
4	Section width


7) User shape cooling circuit topology with circular section tubes– Inputs

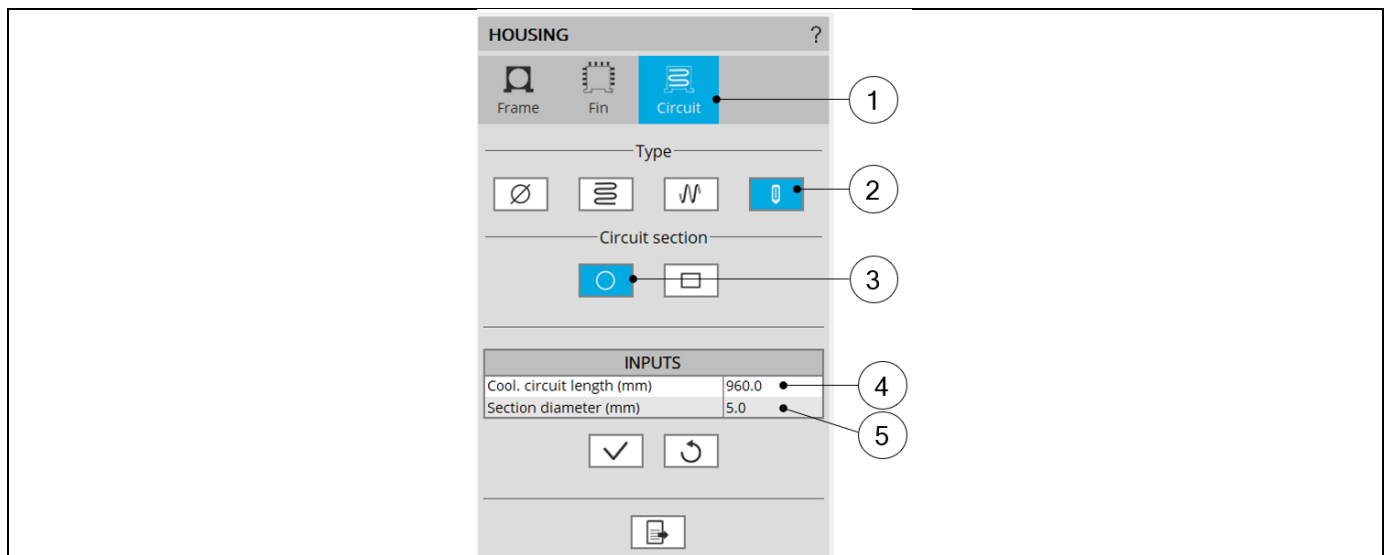

Solenoid shape cooling circuit – With rectangular tubes - Inputs

1	The section Circuit (Cooling circuit) is selected to define the type and dimensions of the cooling circuit.
2	Selected button to define the topology of the cooling circuit.
3	Two sections can be considered: Circular (default one) and rectangular.
4	Cooling circuit length.
5	Section diameter of cooling circuit tubes.

8) User shape cooling circuit topology with rectangular section tubes– Inputs

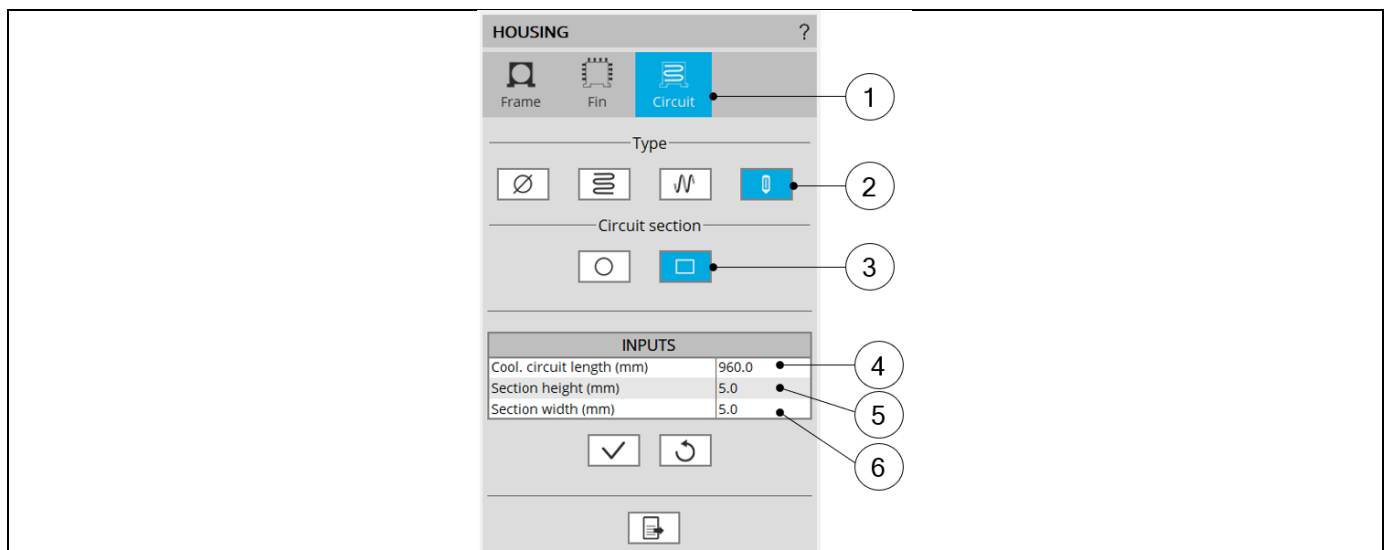

Solenoid shape cooling circuit – With rectangular tubes - Inputs

1	The section Circuit (Cooling circuit) is selected to define the type and dimensions of the cooling circuit.
2	Selected button to define the topology of the cooling circuit.
3	Two sections can be considered: Circular (default one) and rectangular.
4	Cooling circuit length.
5	Section height of cooling circuit tube.
6	Section width of cooling circuit tube.

1.4 Shaft

1.4.1 Overview


SHAFT design area

1	Selection of the MACHINE subset: SHAFT panel (Click on the icon SHAFT)
2	Visualization of the motor axial view to visualize the shaft topology and dimensions.
3	Shaft section to define the shaft parameters
4	When there is a shaft, the section of Bearing is unlocked
5	Choice of the shaft type. Two types are available: - None: No dimension to declare. Shaft is replaced by fluid material - Solid: End-shaft must be defined - Structural data of the shaft are then edited If shaft type is solid, end-shaft must be defined. Note 1: Connection side (C.S.) is identified by yellow lightning. Note 2: Range of definition for dimensions: [0, 20000] mm.
6	Shaft input data to be defined
7	Button to restore default input values
8	Button to Apply inputs. Pressing the enter key twice applies inputs too.
9	Icon to export shaft data into *.txt or *.xlsx files.

1.4.2 Shaft type


Two types of shaft can be selected:

- None: A shaft is not represented in the rotor design. It is replaced by a fluid (like air)
- Solid: Shaft is represented and considered in the rotor design. It is built with a solid material or laminations

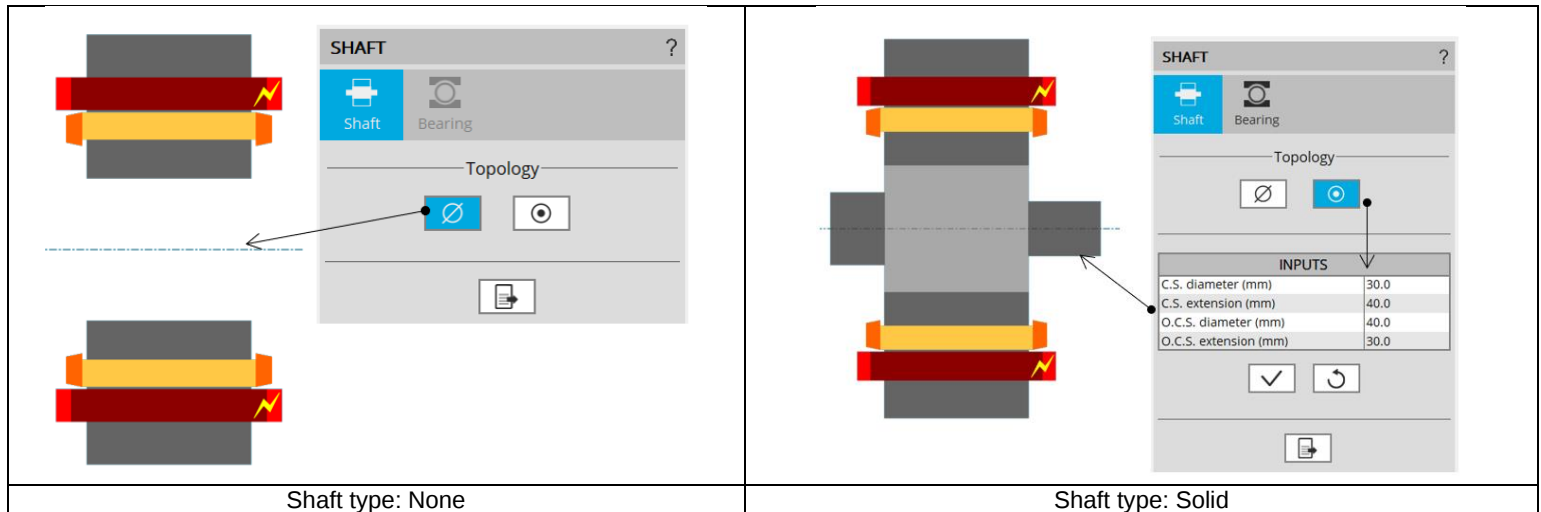

Shaft type: None

Shaft type: Solid

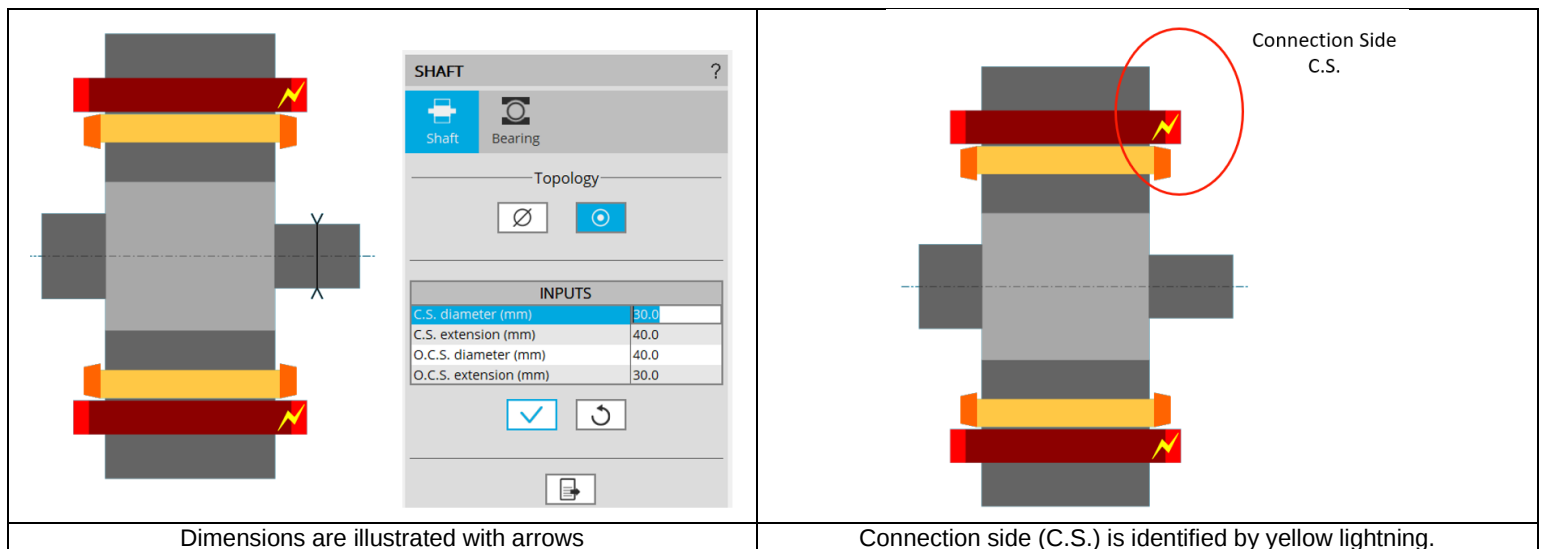

Dimensions are illustrated with arrows


Connection side (C.S.) is identified by yellow lightning.

1.4.3 Shaft - Inputs

Label	Symbol	Tooltip, note, formula
C.S. diameter	D1	Connection side end-shaft diameter.
C.S. extension	L1	Connection side end-shaft extension.
O.C.S. diameter	D2	Opposite connection side end-shaft diameter.
O.C.S. extension	L2	Opposite connection side end-shaft extension.

1.4.4 Shaft – Bearing

1.4.4.1 Overview

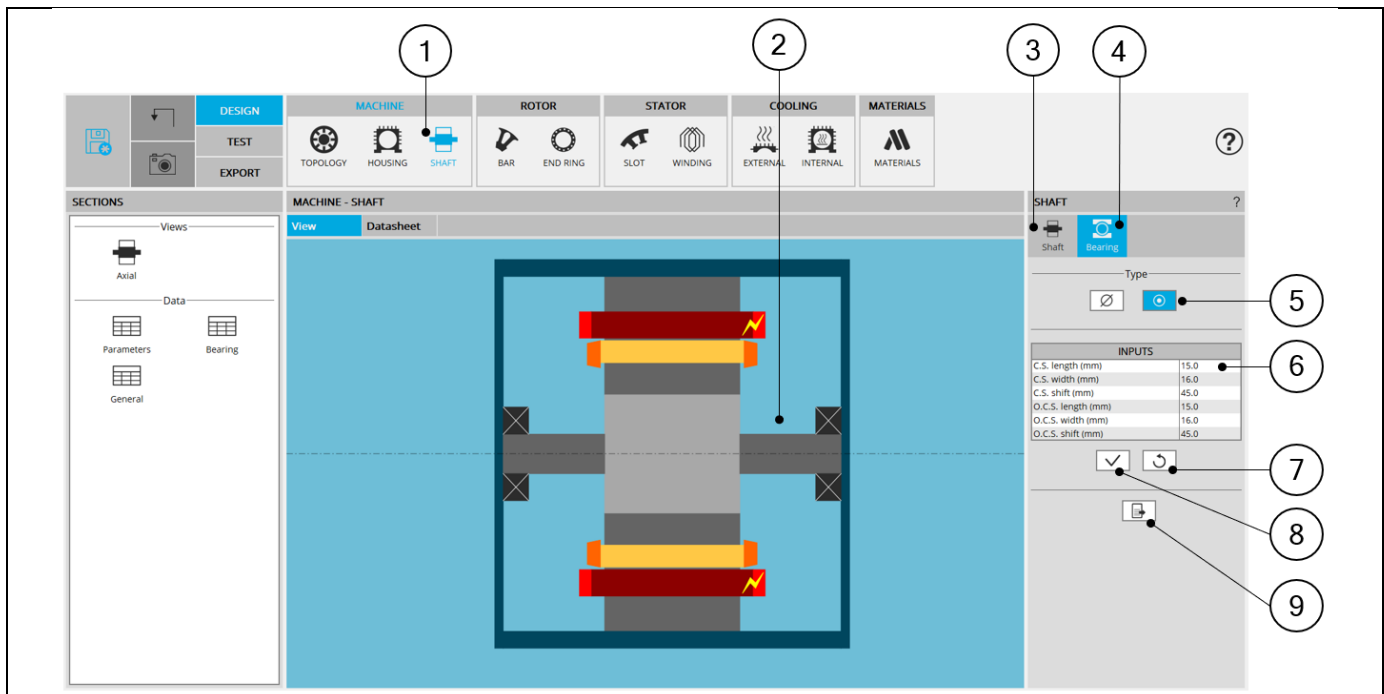

SHAFT – Bearing - Design area



1	Selection of the MACHINE subset: SHAFT panel (Click on the icon SHAFT)
2	Visualization of the motor axial view to visualize the shaft topology with bearings
3	Shaft section to define the shaft parameters
4	When there is a shaft, the section of Bearing is unlocked
5	Choice of the shaft-Bearing type. Two types are available: • None: No dimension to declare. There is no bearing. • With bearings: Bearings characteristics must be defined - Structural data of bearings are then edited
6	Shaft-Bearing input data to be defined
7	Button to restore default input values
8	Button to Apply inputs. Pressing the enter key twice applies inputs too.
9	Icon to export shaft data into *.txt or *.xlsx files.

Important note: When “None” is selected, accesses to Internal cooling environment is locked.

1.4.4.2 Shaft-Bearing type and characteristics


Two types of shaft can be selected:

- None: There is no bearing in the rotor design = No dimension to declare.
- With bearings: Shaft-Bearings are represented and considered in the rotor design.

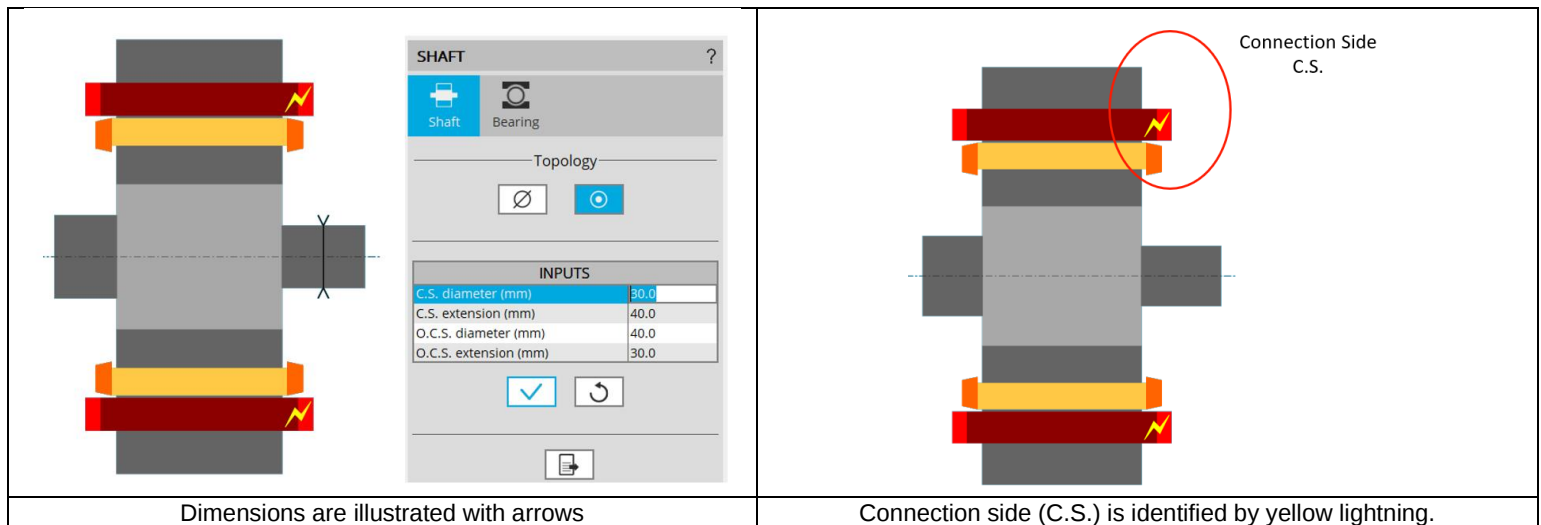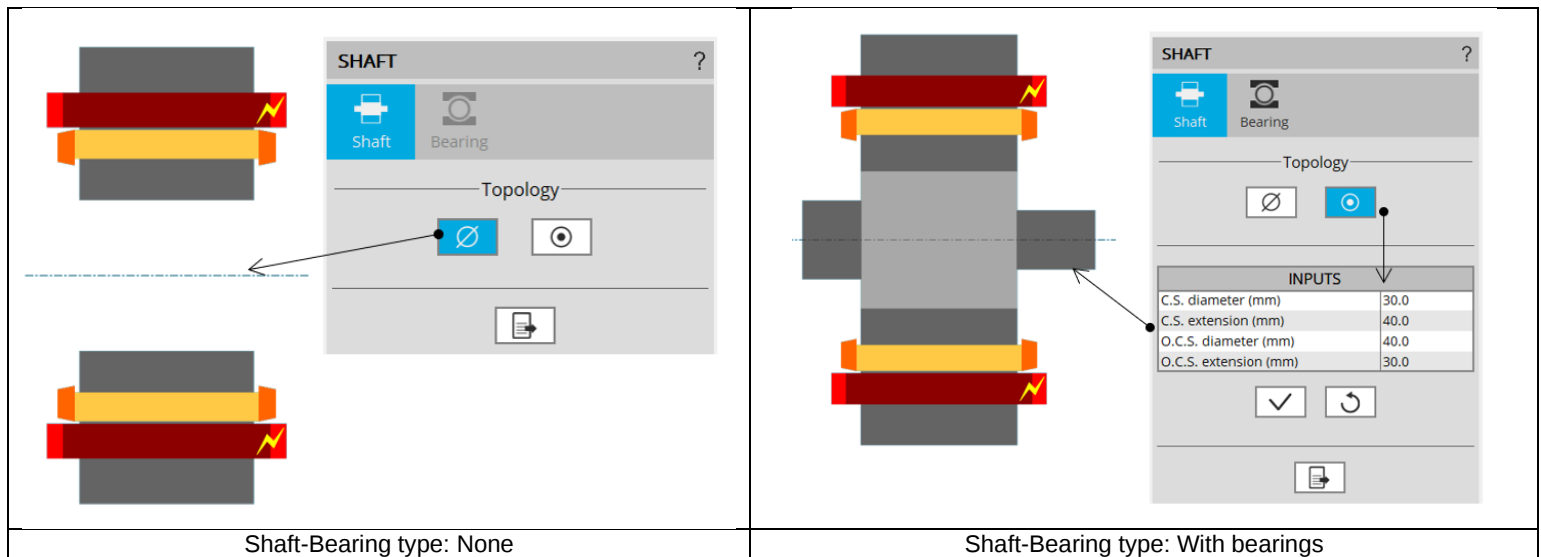


1.4.4.3 Shaft-Bearing input parameters

Label	Tooltip, note, formula
C.S. length	Connection side bearing length.
C.S. width	Connection side bearing width.
C.S. shift	Connection side bearing shift.
O.C.S. length	Opposite Connection side bearing length.
O.C.S. width	Opposite Connection side bearing width.
O.C.S. shift	Opposite Connection side bearing shift.

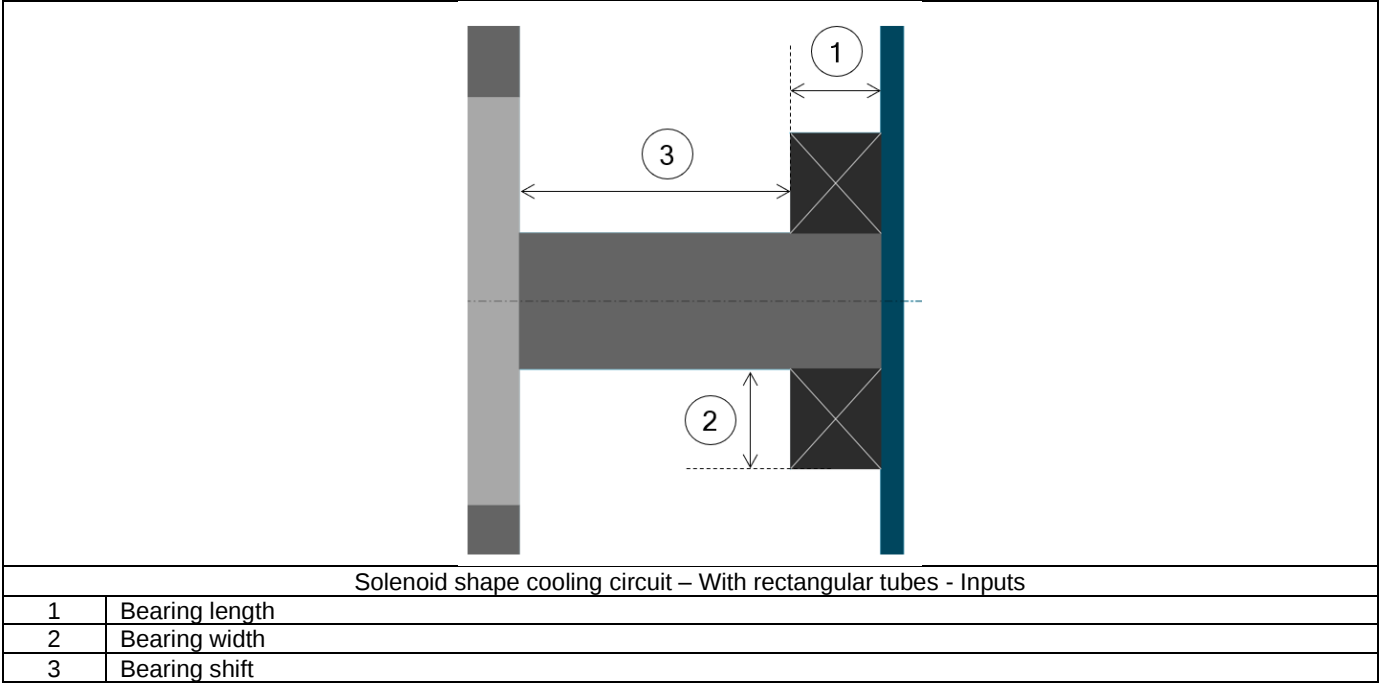

1.5 Bar

1.5.1 Overview

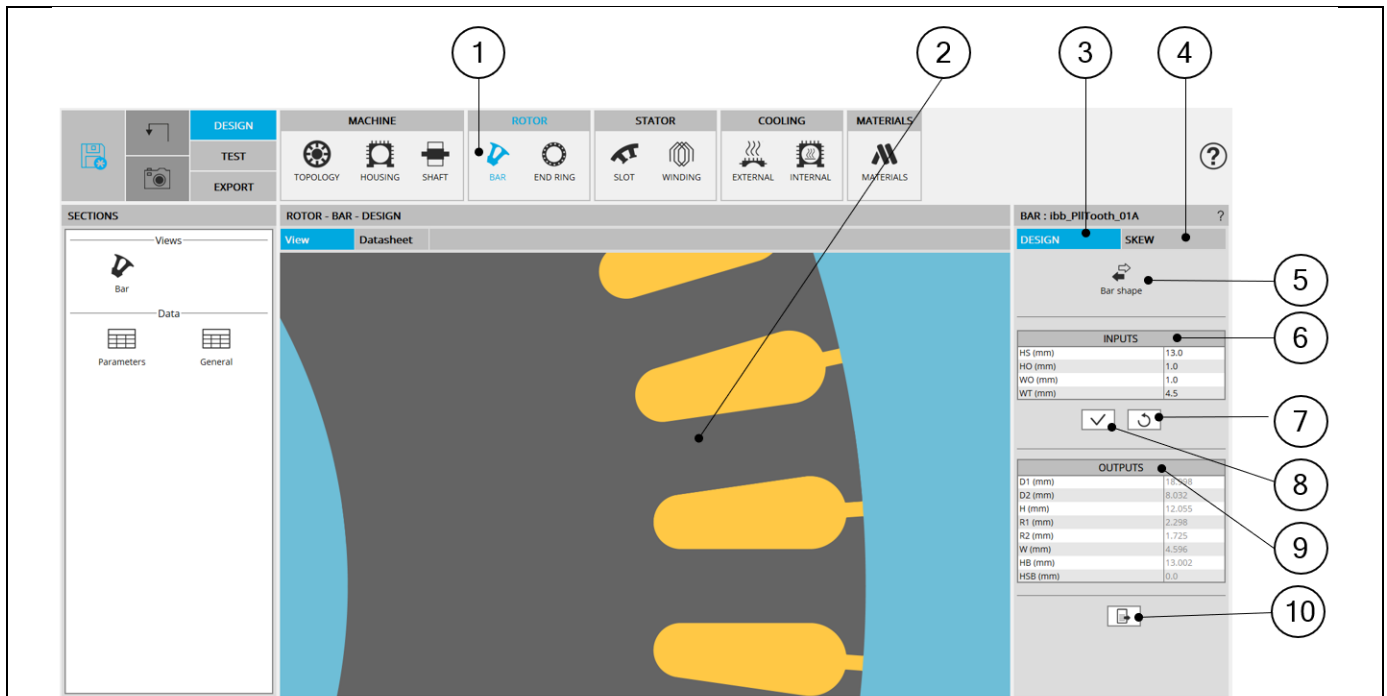


BAR – DESIGN - design area

1	Selection of the ROTOR subset: BAR panel (Click on the icon BAR)
2	Visualization of the motor radial view with bar topology and dimensions.
3	DESIGN tab indicates the tools to define the bar topology and parameter values Note: By default, DESIGN tab is selected
4	SKEW tab indicates the tools to define the bar skew angle
5	"Bar shape" button allows accessing to the bar libraries to change the bar topology. See additional information below.
6	User input parameter fields to enter the values.
7	Button to restore default input values.
8	Button to apply inputs. Pressing the "enter key" twice applies inputs too.
9	Output parameters (read only data) to complete the description of the topology.
10	Icon to export bar data into *.txt or *.xlsx files.

1.6 Bar design

1.6.1 Choose a bar topology

Clicking on the "Bar shape" button opens a dialog box, allowing to access the bar libraries. It allows visualizing, comparing, choosing and importing another bar topology to modify the current rotor design.

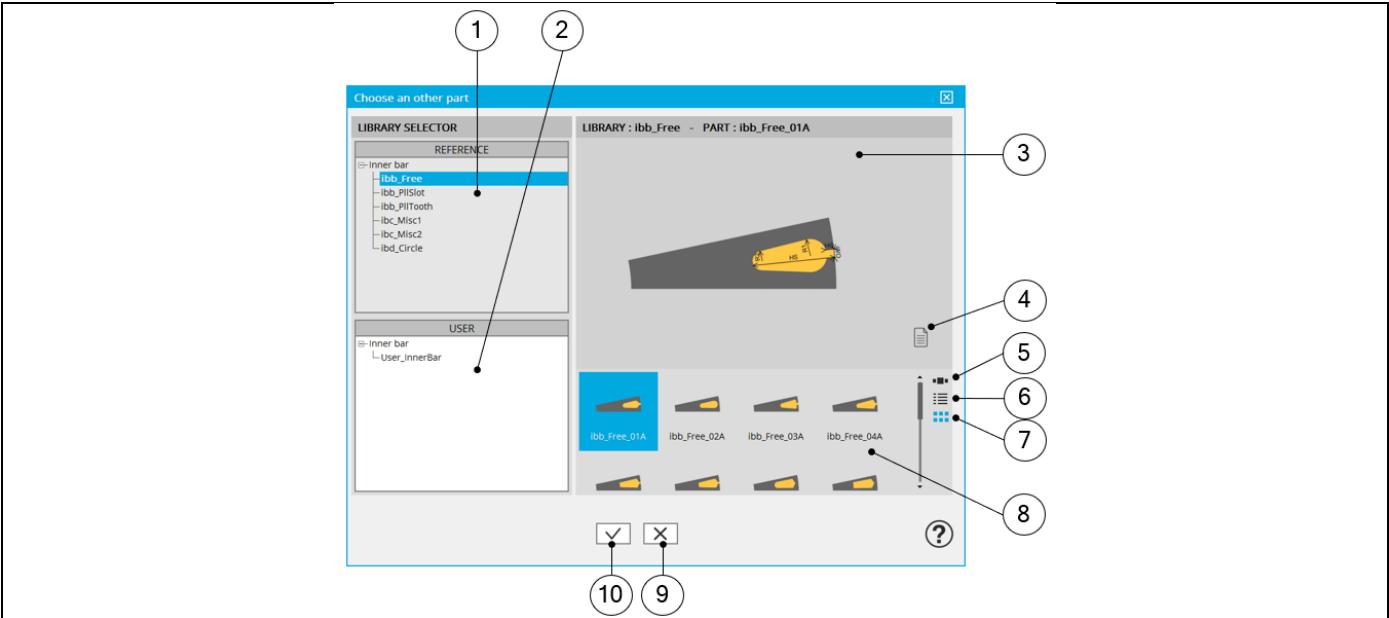

How to choose another bar topology?	
1	Visualization of reference libraries i.e. the libraries of bar topologies provided with FluxMotor®. Select them to view their content and choose the bar among their content. See “Part Library” application for more information.
2	Visualization of user libraries. The default user library is “User_InnerBar”. See “Part Library” application for more information.
3	Area where the selected bar is displayed (static picture) – Topology + dimension labels.
4	Button to visualize the list of documents attached to the part. See additional information below.
5	Button to display thumbnails as a slide show.
6	Button to display thumbnails as a list.
7	Button to display thumbnails as a matrix view of pictures.
8	Area to visualize all the topologies of bars from the selected library (ref. 1).
9	Button to close the dialog box and come back to Motor Factory – DESIGN – Bar area.
10	Button to choose and import the selected bar to modify the current rotor design.

1.6.1.1 Attached documents – Additional information

	1	List of attached documents after having clicked on button to display it (4).
	2	“+” or “-” non-active buttons from “Motor Factory” See “Part Library” application for more information.
	3	List of attached documents (if it exists) A double click on the selected document opens it. Documents can be added only from Part Library application. See “Part Library” application for more information.
	4	Button to show or to hide the attached document list.
Visualization of attached documents		

1.6.1.2 Inputs / Outputs

Specific inputs and outputs are considered for the bar topology.
The relevance of input parameter values can be evaluated by using “Part Factory” application.
See “Part Factory” application for more information.

Outputs are read only data. They complete the description of the topology.

BAR : ibb_PIItooth_01A ?

DESIGNSKEW

Bar shape

INPUTS	
HS (mm)	13.0
HO (mm)	1.0
WO (mm)	1.0
WT (mm)	4.5

✓


↺

OUTPUTS	
D1 (mm)	18.998
D2 (mm)	8.032
H (mm)	12.055
R1 (mm)	2.298
R2 (mm)	1.725
W (mm)	4.596
HB (mm)	13.002
HSB (mm)	0.0

📄

Inputs / Outputs of a bar

2

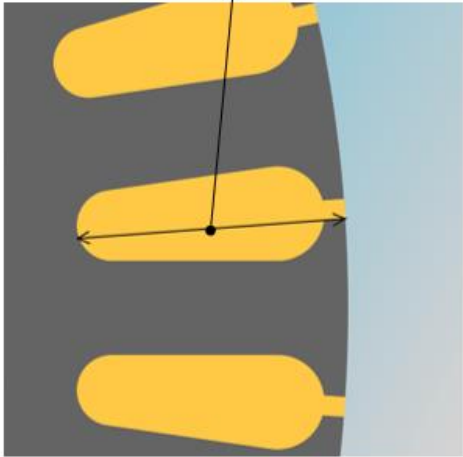

1

3

INPUTS	
HS (mm)	13.0
Slot height (mm)	1.0
HO (mm)	1.0
WO (mm)	4.5

✓

↺

OUTPUTS	
D1 (mm)	18.998
D2 (mm)	8.032
H (mm)	12.055
R1 (mm)	2.298
R2 (mm)	1.725
W (mm)	4.596
HB (mm)	13.002
HSB (mm)	0.0


📄

Inputs / Outputs of a bar

1	Selection of a parameter label highlights it.
2	Selection of a parameter label displays the corresponding arrow on the picture.
3	Selection of a parameter label displays the corresponding tooltip which completes information about the parameter.

1.6.2 Bar – Skew


1.6.2.1 Overview

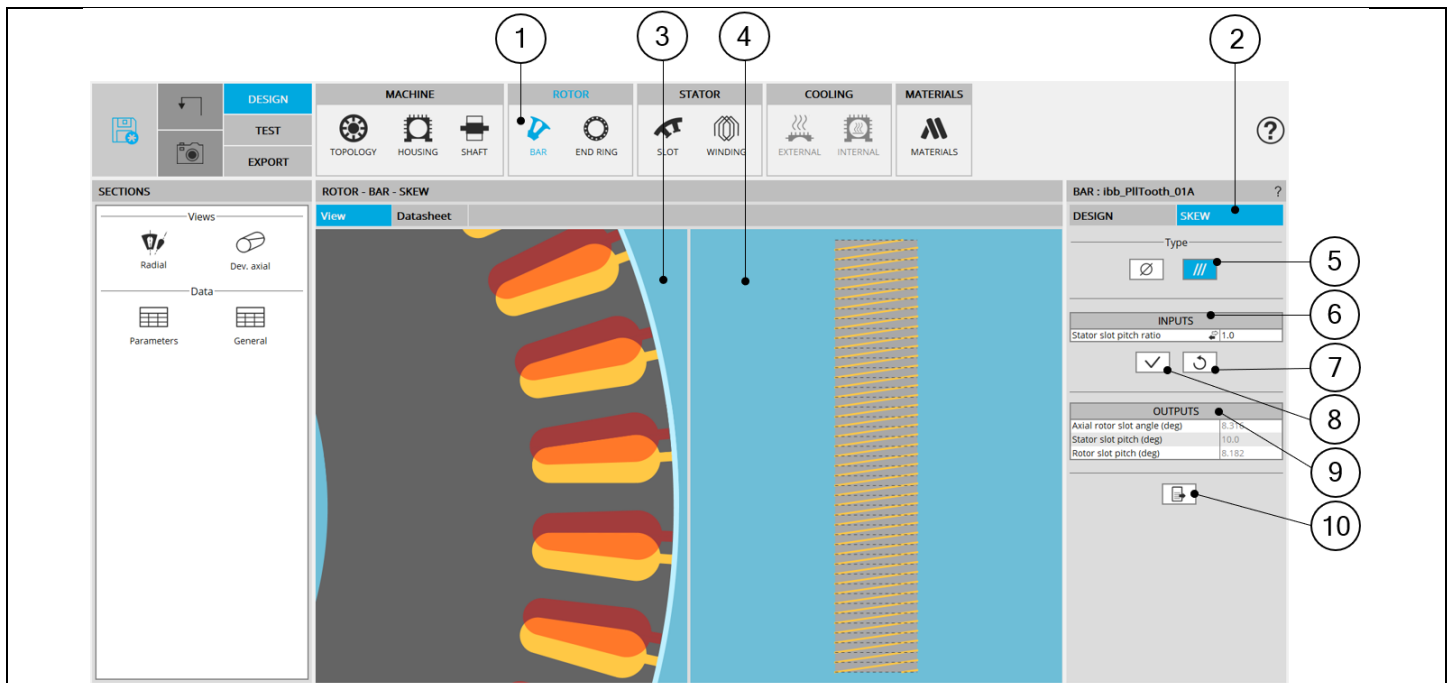

BAR – SKEW design area

1	Selection of the ROTOR subset: BAR panel (Click on the icon BAR)
2	SKEW tab indicates the tools to define the bar skew angle
3	Visualization of the motor radial view with bar topology and dimensions.
4	Visualization of the rotor developed view to visualize the bar skew
5	Choices to define a skew: None – Continuous (Continuous in our example)
6	Skew inputs to be defined
7	Buttons to restore the default input values
8	Buttons to validate the inputs (Pressing the “enter key” twice applies inputs too).
9	Skew outputs (read only)
10	Button to export the skew data into a text file

1.6.2.2 Set a skew angle

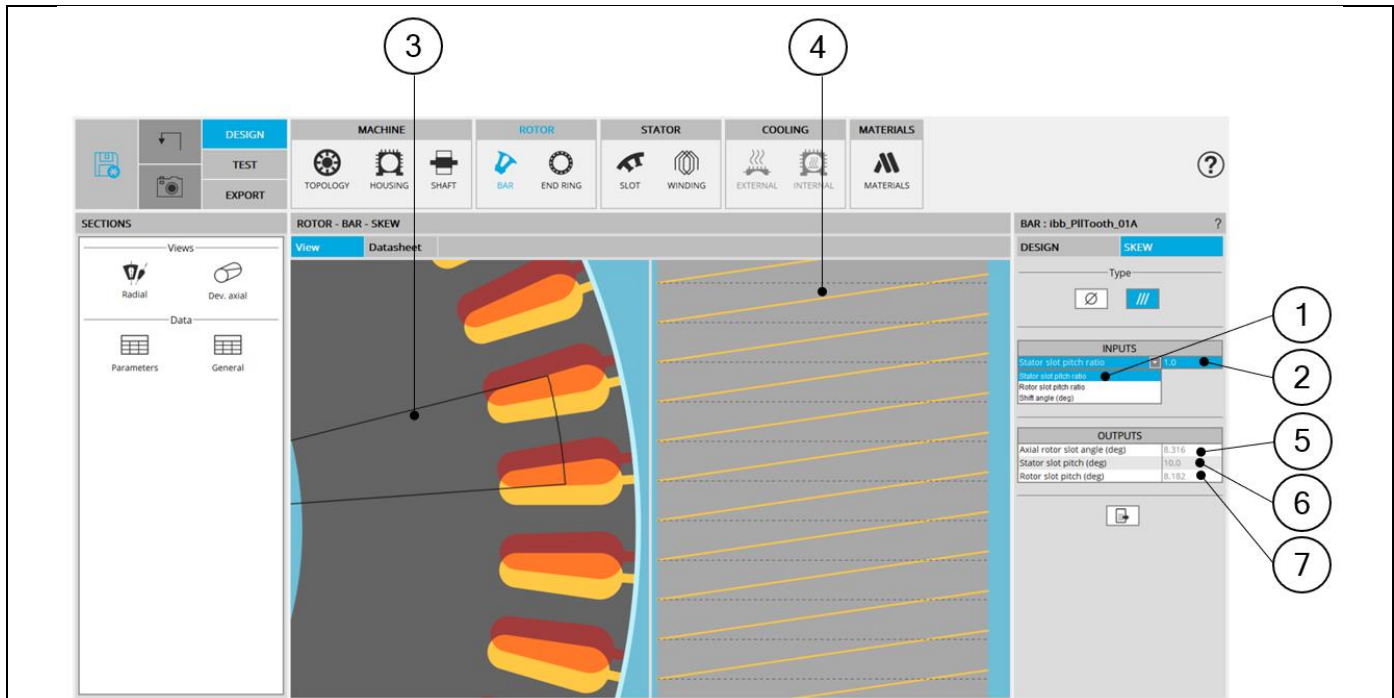

How to set a skew angle?

1	Choose the definition mode of the skew: Stator slot – Rotor slot – Shift angle
2	Definition of the skew angle depending on the definition mode
3	Visualization of the chosen skew angle on the machine radial view
4	Visualization of the equivalent axial slot angle on the rotor developed view
5	Equivalent axial rotor slot angle (read only)
6	Equivalent stator slot pitch (read only)
7	Equivalent rotor slot pitch (read only)

Note: The user can add a skew angle on the rotor or on the stator. If a skew is already defined in the stator when setting a skew on the rotor, the stator skewing will be automatically reset to "None".

1.7 End ring

1.7.1 Overview

END RING – DESIGN - design area

1	Selection of the ROTOR subset: END RING panel (Click on the icon END RING)
2	Visualization of the axial view of the machine
3	DESIGN tab indicates the tools to define the end ring topology and parameter values Note: By default, DESIGN tab is selected
4	IMPEDANCE tab indicates the tools to define the end ring impedance and check the impedances obtained for various slips, frequencies and temperatures.
5	End ring inputs to be defined
6	Buttons to restore default input values. See “Part Factory” application for more information.
6	Buttons to apply inputs (Pressing the “enter key” twice applies inputs too).
7	End ring outputs (read only)
8	Icon to export end ring data into *.txt or *.xlsx files.

1.7.2 End ring – Design – Inputs / Outputs

END RING - DESIGN – design area

1	Selector to choose same end ring topologies on both sides
2	Definition of each end ring geometrical input, with the corresponding arrow on the axial view of the machine

1.7.3 End ring – Inter bar impedance

1.7.3.1 Overview

The aim of this section is to compute the inter bar impedance of the squirrel cage.

END RING - IMPEDANCE area

1	Shortcut panels to navigate in the impedance results
2	Main window for results
3	Button to open calibration factor window
4	Automatic computation mode
5	Constant computation mode
6	Impedance characteristics to be defined
7	Working point evaluation to be defined (optional)
8	Buttons to validate input values or reset default input parameter values (Pressing the “enter key” twice applies inputs too).
9	Icon to export end ring impedance data into *.txt or *.xlsx files.

1.7.3.2 Calibration factors

The calibration factors (X-factors) are user coefficients to tune the inter bar end ring resistances and inductances.

END RING - IMPEDANCE area – X-factor window

1

2

3

1	Calibration factors to be defined
2	Button to validate the calibration factor of the table and come back in Motor Factory – BAR – IMPEDANCE context
3	Button to cancel the calibration factor window and come back in Motor Factory – BAR – IMPEDANCE context

Proprietary Information of Altair Engineering

 **ALTAIR**

1.7.3.3 Automatic computation mode

When automatic computation mode is set, inter bar end-ring impedances are computed by internal processes, being a function of the slip (or speed), the temperature at the end ring (at Connection Side and Opposite Connection Side), and the material of the end ring.

END RING

DESIGNIMPEDANCE

X
X-Factor

Computation mode

IMPEDANCE CHARACTERISTICS

WORKING POINT EVALUATION

✓↺

📄

1

2

3

END RING – Automatic computation mode	
1	Automatic computation mode selection
2	Impedance characteristic to be defined for which the impedances will be computed (optional)
3	Working point evaluation to be defined for which the impedances will be computed (optional)

1.7.3.4 Constant computation mode

When constant computation mode is set, the inter-bar end-ring resistance and inductance values must be set by the user. The values are given for a reference temperature. In this case the inter bar end ring resistances and inductances are only a function of the temperature (function depending on the material of the end-ring).

END RING

DESIGNIMPEDANCE

X
X-Factor

Computation mode

IMPEDANCE CHARACTERISTICS

WORKING POINT EVALUATION

✓↺

📄

1

2

3

END RING – Constant computation mode	
1	Automatic computation mode selection
2	Impedance characteristic to be defined
3	Working point evaluation for which the impedances will be computed (optional)

1.7.3.5 Working point evaluation

The inter bar end ring impedances must be defined for a working point.

A table allows the user to describe a working point, defined by a frequency and a slip (or by the machine rotating speed).

Note: For constant computation mode, the inter bar impedances are not depending on the frequency, neither on the slip (or speed). Therefore, the working point evaluation will give the same results in this mode, for any frequency and slip.

1.7.3.6 Main results

The main results given in the central window are the following

Impedance data					
Impedance characteristics					
Computation mode	Automatic	Bar ref. temperature (°C)	20.0		
C.S. ref. temperature (°C)	20.0	O.C.S. ref. temperature (°C)	20.0		

Impedance data: Resume all the inputs defined in the table "IMPEDANCE CHARACTERISTICS"

Working point data					
Working point evaluation					
Power supply frequency (Hz)	50.0	Synchronous speed (rpm)	1 500.0		
Definition mode	Slip	Slip (%)	5.0	Speed (rpm)	1 425.0

Working point data: Resume all the inputs defined in the table "WORKING POINT EVALUATION"

Setting data					
Calibration factors					
End ring resistance factor	1.0	End ring inductance factor	1.0		

Setting data: resume all the settings defined in the setting table "CALIBRATION FACTORS"

Material electrical resistivity data					
Electrical resistivity at 20°C					
C.S. end ring (Ω.m)	1.724 E-8	O.C.S. end ring (Ω.m)	1.724 E-8		
Bar1 (Ω.m)	1.724 E-8				
Electrical resistivity at ref. temp.					
C.S. ref. temperature (°C)	20.0	O.C.S. ref. temperature (°C)	20.0		
C.S. end ring (Ω.m)	1.724 E-8	O.C.S. end ring (Ω.m)	1.724 E-8		
Bar ref. temperature (°C)	20.0				
Bar1 (Ω.m)	1.724 E-8				
Elec. corrected resistivity at 20°C					
Bar1 (Ω.m)	1.834 E-8				
Elec. corrected resistivity at ref. temp.					
Bar ref. temperature (°C)	20.0				
Bar1 (Ω.m)	1.834 E-8				

Material electrical resistivity data contains the electrical resistivity of bars and end rings

Note: In the table "Material electrical resistivity data", the "corrected" resistivities are computed to give a bar resistance on the rotor lamination length equal to the bar resistance computed on the total bar length with the bar real resistivity (rotor lamination length + bar extensions). The corrected electrical resistivity values are used in Flux® 2D, for internal computations and exports.

Inter bar resistance data					
Inter bar resistance at 20°C					
End ring, avg (Ω)	1.359 E-6	C.S. end ring (Ω)	1.359 E-6	O.C.S. end ring (Ω)	1.359 E-6
Inter bar resistance at ref. temp.					
C.S. ref. temperature (°C)	20.0	O.C.S. ref. temperature (°C)	20.0		
End ring, avg (Ω)	1.359 E-6	C.S. end ring (Ω)	1.359 E-6	O.C.S. end ring (Ω)	1.359 E-6


Inter bar resistance data contains the inter bar resistance of each end ring

Inter bar inductance data

Inter bar inductance at 20°C					
End ring, avg (H)	9.882 E-9	C.S. end ring (H)	9.882 E-9	O.C.S. end ring (H)	9.882 E-9
Inter bar inductance at ref. temp.					
C.S. ref. temperature (°C)	20.0	O.C.S. ref. temperature (°C)	20.0		
End ring, avg (H)	9.882 E-9	C.S. end ring (H)	9.882 E-9	O.C.S. end ring (H)	9.882 E-9


Inter bar inductance data contains the inter bar inductance of each end ring

Inter bar impedance curve versus slip at reference temperature

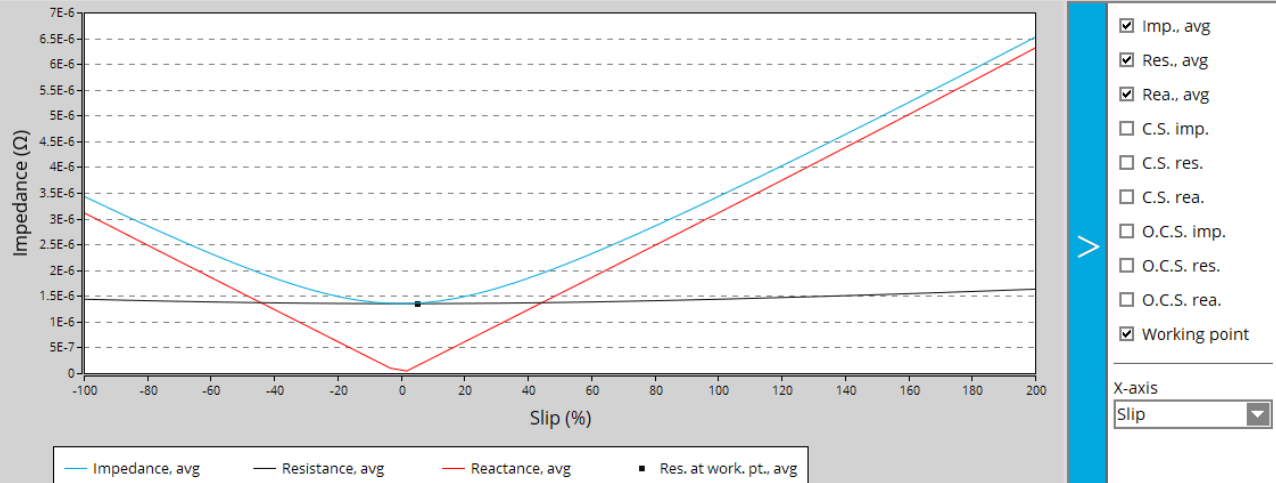

Inter bar impedance curve at reference temperature: Plot the end ring impedances in the range of possible slips, and the impedances at the working point defined in the input table "WORKING POINT EVALUATION"


Inter bar inductance curve versus slip at reference temperature

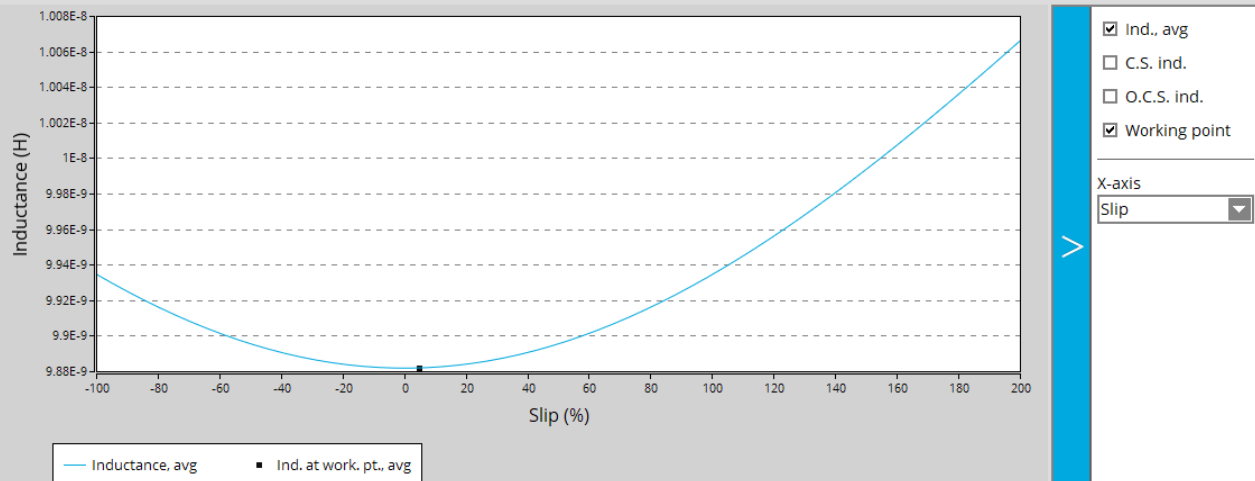

Inter bar inductance curve at reference temperature: Plot the end ring inductances in the range of possible slips, and the inductances at the working point defined in the input table "WORKING POINT EVALUATION"

1.8 Slot

1.8.1 Overview

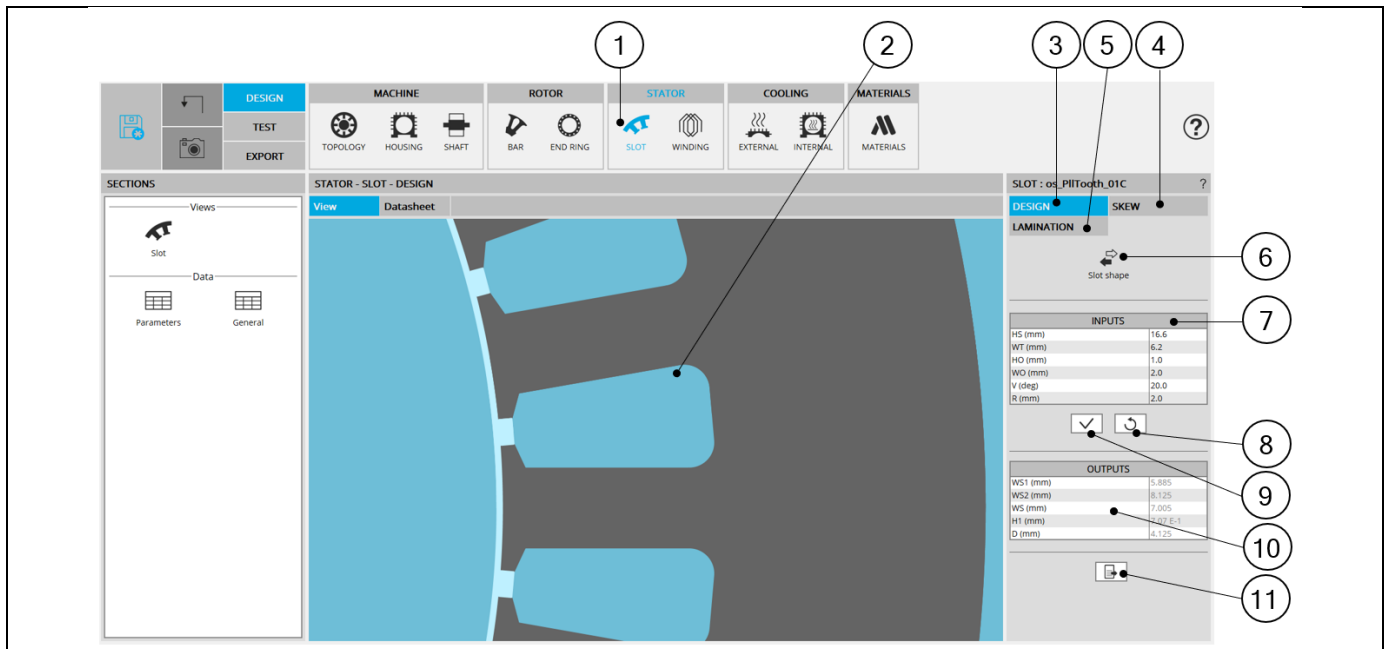


SLOT – DESIGN - design area

1	Selection of the STATOR subset: SLOT panel (Click on the icon SLOT)
2	Visualization of the motor radial view with slot topology and dimensions.
3	DESIGN tab indicates the tools to define the slot topology and parameter values Note: By default, DESIGN tab is selected
4	SKEW tab indicates the tools to define the slot skew angle
5	LAMINATION tab indicates the tools to define the shape of the lamination. Note: By default, Circular lamination is selected.
6	"Slot shape" button allows accessing to the slot libraries to change the slot topology. See additional information below.
7	User input parameter fields to enter the values.
8	Button to restore default input values.
9	Button to apply inputs. Pressing the "enter key" twice applies inputs too.
10	Output parameters (read only data) to complete the description of the topology.
11	Icon to export slot data into *.txt or *.xlsx files.

1.8.2 Slot - Design


1.8.2.1 Slot shape - Choose a slot topology

Clicking on the "Slot shape" button opens a dialog box, allowing access to the slot libraries. It allows visualizing, comparing, choosing, and importing another slot topology to modify in the current stator design.

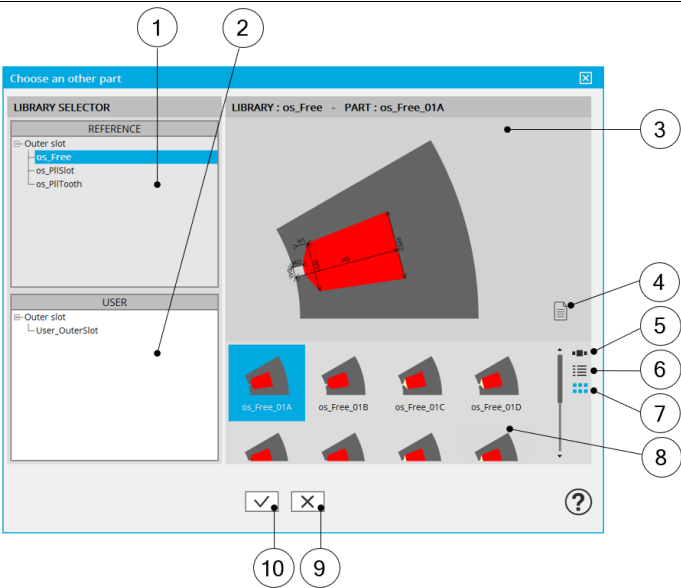

How to choose another slot topology?	
1	Visualization of reference libraries i.e. the libraries of slot topologies provided with FluxMotor®. Select them to view their content and choose the slot among them. See “Part Library” application for more information.
2	Visualization of user libraries. The default user library is “UserOuterSlot” See “Part Library” application for more information.
3	Area where the selected slot is displayed (static picture) – Topology + dimension labels.
4	Button to visualize the list of documents attached to the part. See additional information below.
5	Button to display thumbnails as a slide show.
6	Button to display thumbnails as a list.
7	Button to display thumbnails as a matrix view of pictures.
8	Area to visualize all the topologies of slots from the selected library (ref. 1).
9	Button to close the dialog box and come back to Motor Factory – DESIGN – Slot area.
10	Button to choose and import the selected slot to modify the current stator design.

1.8.2.2 Attached documents – Additional information

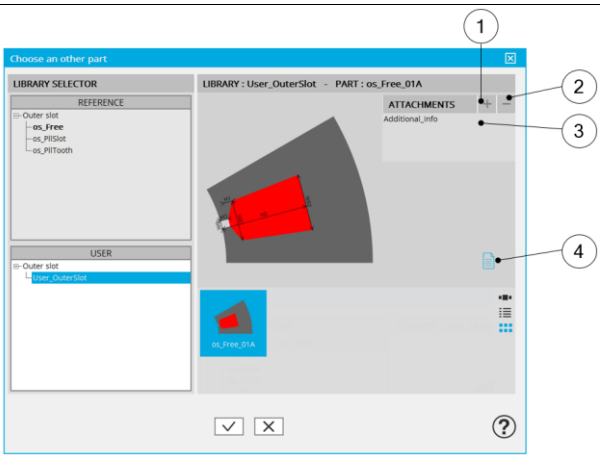

1	Attached document list after having clicked on button to display it (4).
2	“+” or “-” non-active buttons from “Motor Factory”. See “Part Library” application for more information.
3	List of attached documents (if present). A double click on the selected document opens it. Documents can be added only from Part Library application. See “Part Library” application for more information.
4	Button to show or hide the attached document list.

Visualization of attached documents

1.8.2.3 Inputs / Outputs

Specific inputs and outputs are considered for each slot topology.
The relevance of input parameters values can be evaluated by using “Part Factory” application.
See “Part Factory” application for more information.

Outputs are read only data. They complete the description of the topology.

SLOT : os_Free_01B ?

Slot shape

INPUTS	
HS (mm)	41.0
WS2 (mm)	10.0
H1 (mm)	2.207
WS1 (mm)	7.0
HO (mm)	1.0
WO (mm)	1.0
R (mm)	2.0

✓

↺

OUTPUTS	
WT1 (mm)	5.207
WT2 (mm)	7.05
WT (mm)	6.128
WS (mm)	8.5
V (deg)	36.345
D (mm)	5.838

📄

Inputs / Outputs of parts

2

INPUTS	
HS (mm)	41.0
Slot height (mm)	10.0
H1 (mm)	2.207
WS1 (mm)	7.0
HO (mm)	1.0
WO (mm)	1.0
R (mm)	2.0

✓

↺

1


3

Inputs / Outputs stator slot

1	Select a parameter highlights it.
2	Select a parameter label displays the corresponding arrow on the picture.
3	Select a parameter displays the corresponding tooltip which completes information about the parameter.

1.8.3 Slot – Skew


1.8.3.1 Overview

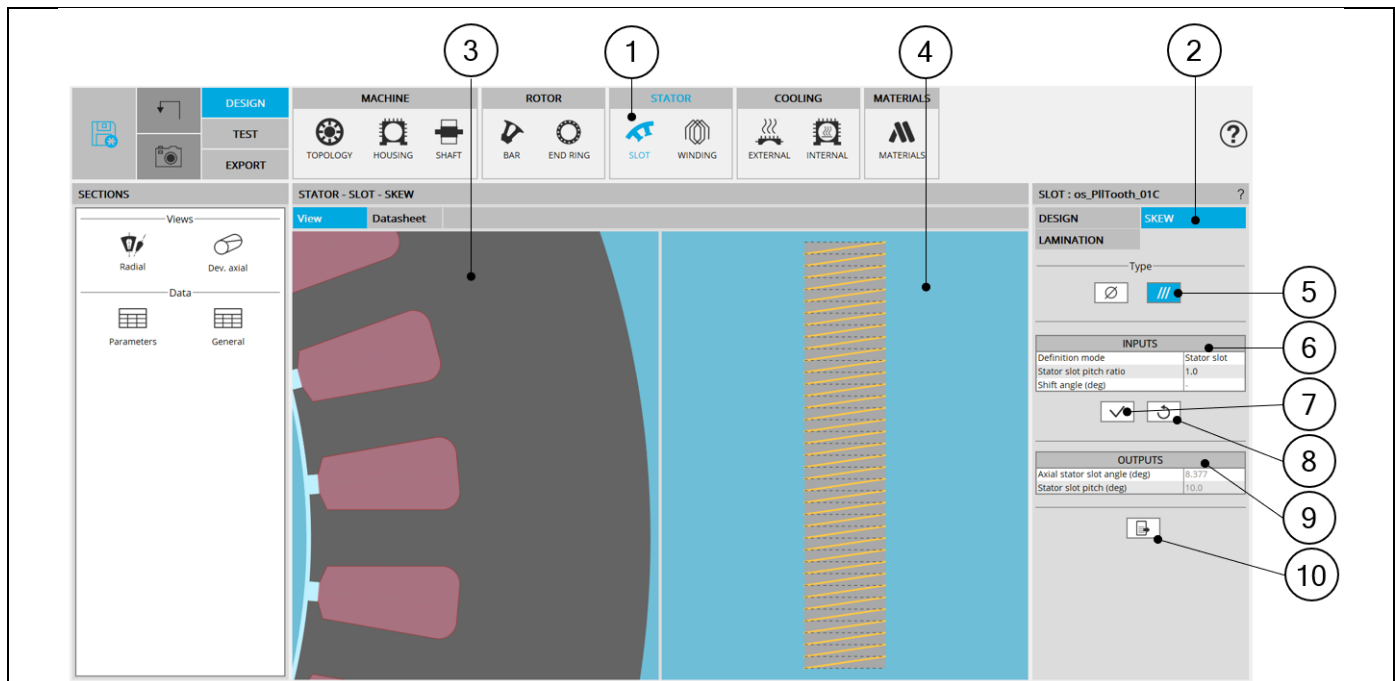

SLOT – SKEW design area

1	Selection of the STATOR subset: SLOT panel (Click on the icon SLOT)
2	Skew tab indicates the tool to define the slot skew angle
3	Visualization of the machine radial view to visualize the slot skew
4	Visualization of the stator developed view to visualize the slot skew
5	Choices to define a skew: None – Continuous (Continuous in our example)
6	Skew inputs to be defined
7	Buttons to validate the inputs (Pressing the “enter key” twice applies inputs too).
8	Buttons to restore the default input values.
9	Skew outputs (read only)
10	Button to export the skew data into *.txt or *.xlsx files.

1.8.3.2 Set A skew angle

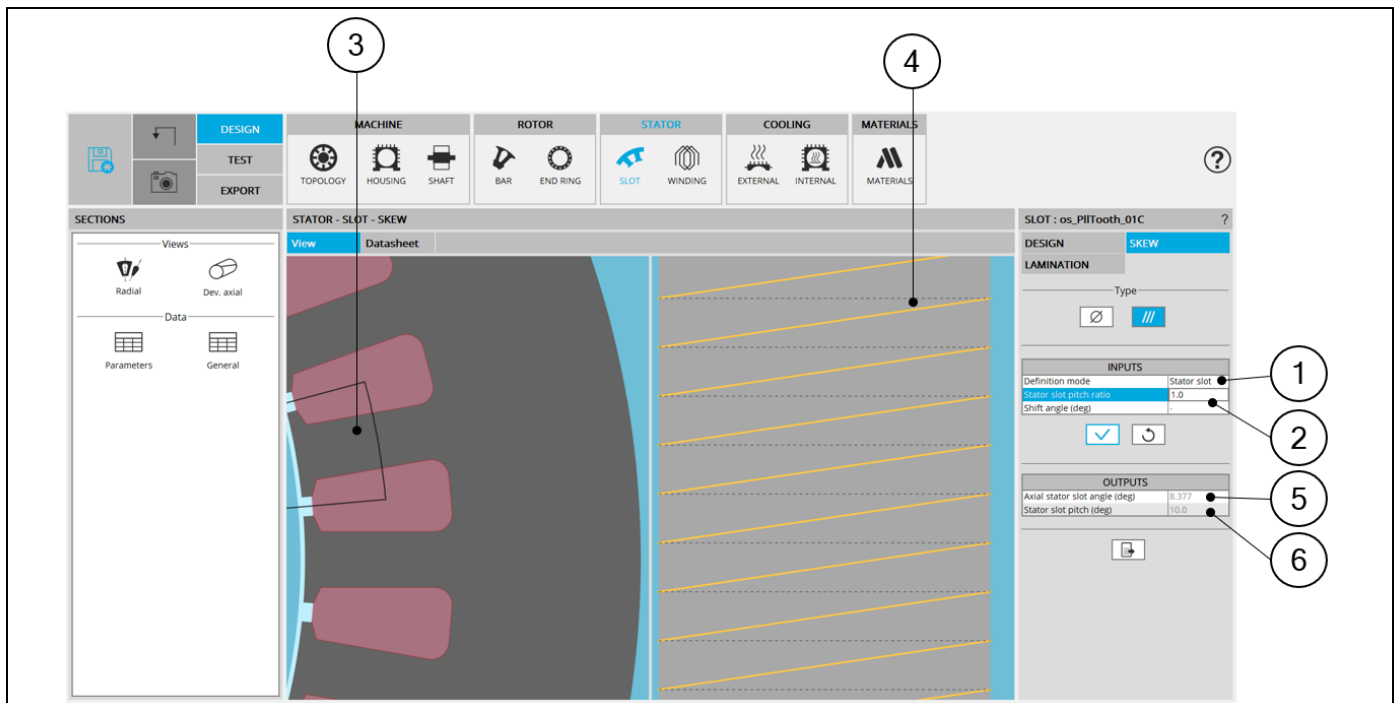

How to set a skew angle?


1	Choose the definition mode of the skew: Stator slot – Shift angle
2	Definition of the skew angle depending on the definition mode
3	Visualization of the chosen skew angle on the machine radial view
4	Visualization of the equivalent axial slot angle on the rotor developed view
5	Equivalent axial stator slot angle (read only)
6	Equivalent stator slot pitch (read only)

Note: The user can add a skew angle on the rotor or on the stator. If a skew is already defined in the rotor when setting a skew on the stator, the rotor skewing will be automatically reset to "None".

1.8.4 Slot – Lamination

1.8.4.1 Overview

The tools available in the lamination tab allow in defining the outer shape of the lamination. Three choices are available to define the lamination topology: None, Circular or Square. By default, the outer shape of the lamination is defined by considering the outer diameter of the stator (defined in structural data). When the choice of lamination is “None”, original structural data of the stator are considered. In that case outer shape of lamination is circular without extensions. Outer dimensions of lamination are indicated in general data (structural data part). See illustration below.

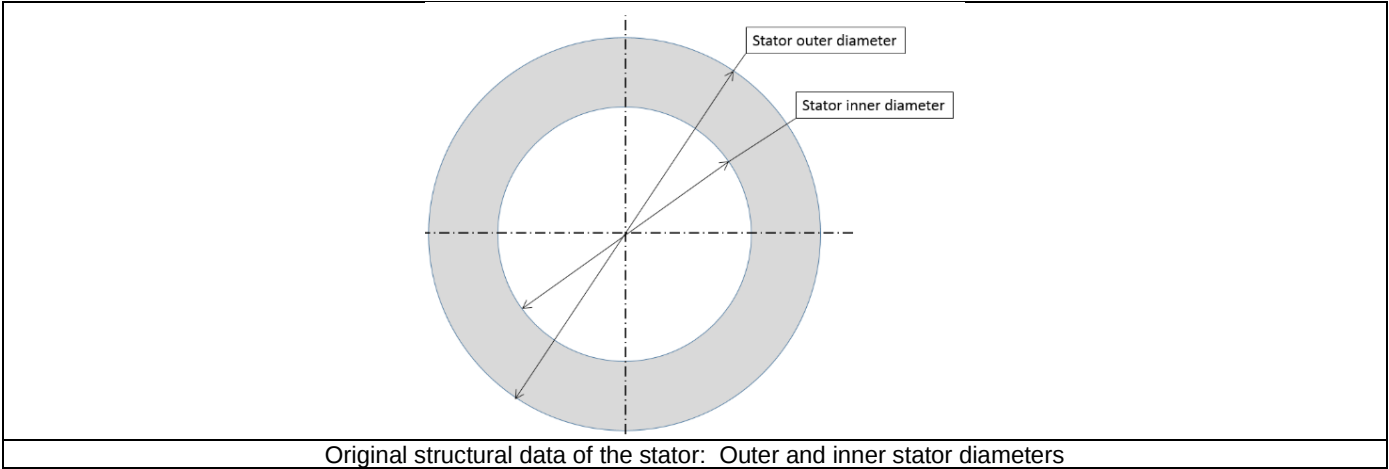

Original structural data of the stator: Outer and inner stator diameters

1.8.4.2 Circular shape lamination

SLOT : os_PllTooth_01C ?

DESIGN SKEW

LAMINATION

Type

∅

INPUTS

Extension (mm) 0.0

✓

↺

1

2

3

4

5

1	Choice of a circular shape lamination
2	Additional lamination extension. This corresponds to a diameter extension from the original stator outer diameter defined in the general data (structural data of the machine). See illustration below. For new design, this input won't be available anymore.
3	Button to restore default input values.
4	Button to Apply inputs. Pressing the enter key twice applies inputs too.
5	Icon to export lamination data into *.txt or *.xlsx files.

1

2

1	Extension = Diameter extension from the original stator outer diameter. Note: For new design, this input won't be available anymore.
2	Original stator outer diameter defined in the general data (structural data of the machine).

Proprietary Information of Altair Engineering



1.8.4.3 Square shape lamination

1) Main inputs



	- Choice of a square shape lamination. - Corner type available (Right, Chamfer, Fillet). - Button to select "fillet" type corner. - Button to select "chamfer" type corner. - Button to select "right" type corner. - User input parameters to define the angular shifting of the stator. Note: For new design, extension won't be available any more. - Button to restore default input values. - Button to apply inputs. Pressing the enter key twice applies inputs too. - Icon to export lamination data into *.txt or *.xlsx files.
Dialog box to define the square shape lamination	

2) Description of the different kinds of square shape lamination available

Square shape lamination with right corner	Square shape lamination with chamfer corner Setting of the length corresponding to a 45° chamfer
Square shape lamination with fillet corner Setting of the lamination fillet radius	Square shape lamination with right corner See the link with stator outer diameter

3) Definition of the slot angular shift

With a square shape lamination, it is possible to set a slot angular shift. It is advised to keep an angular shift lower than one slot pitch. This parameter allows adjusting outer dimension (Δ) between outer border of the lamination and the bottom part of slots. For more details see the illustrations below.

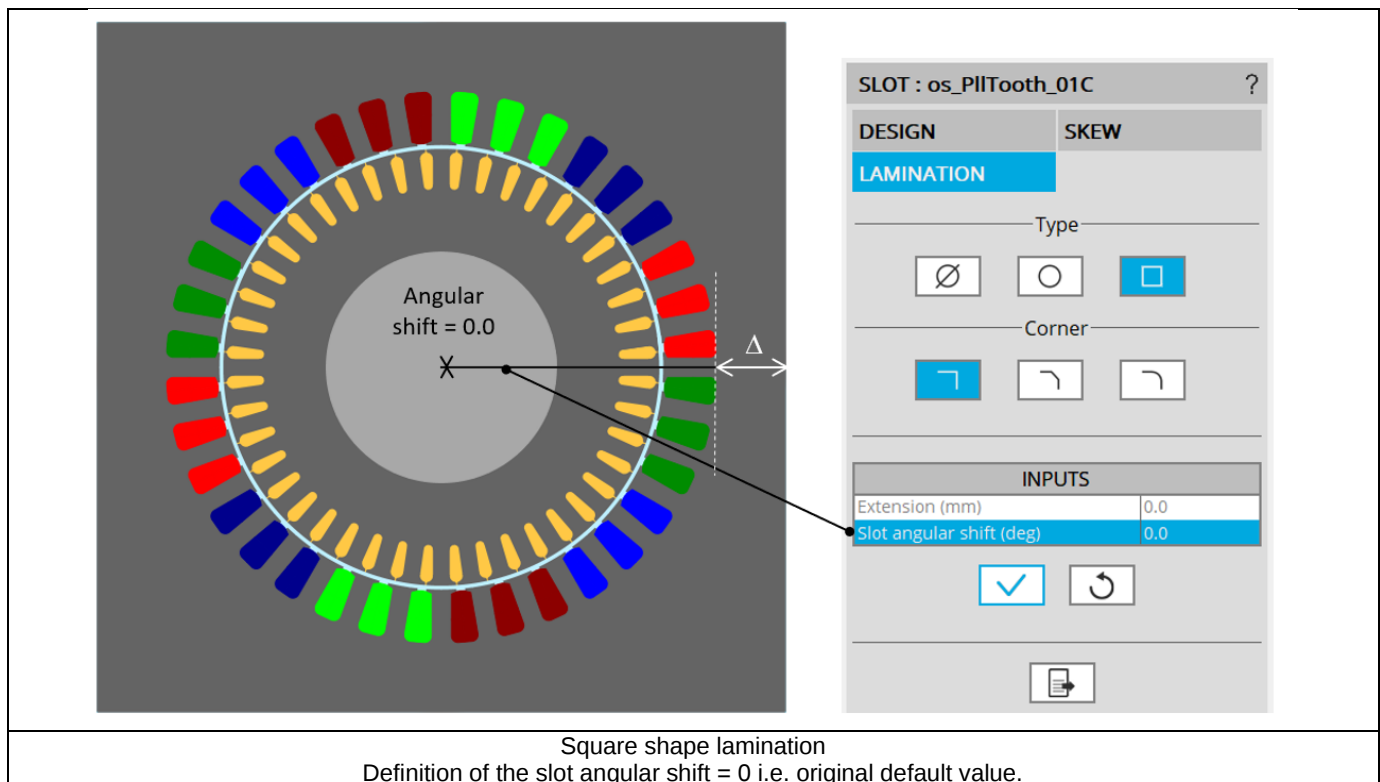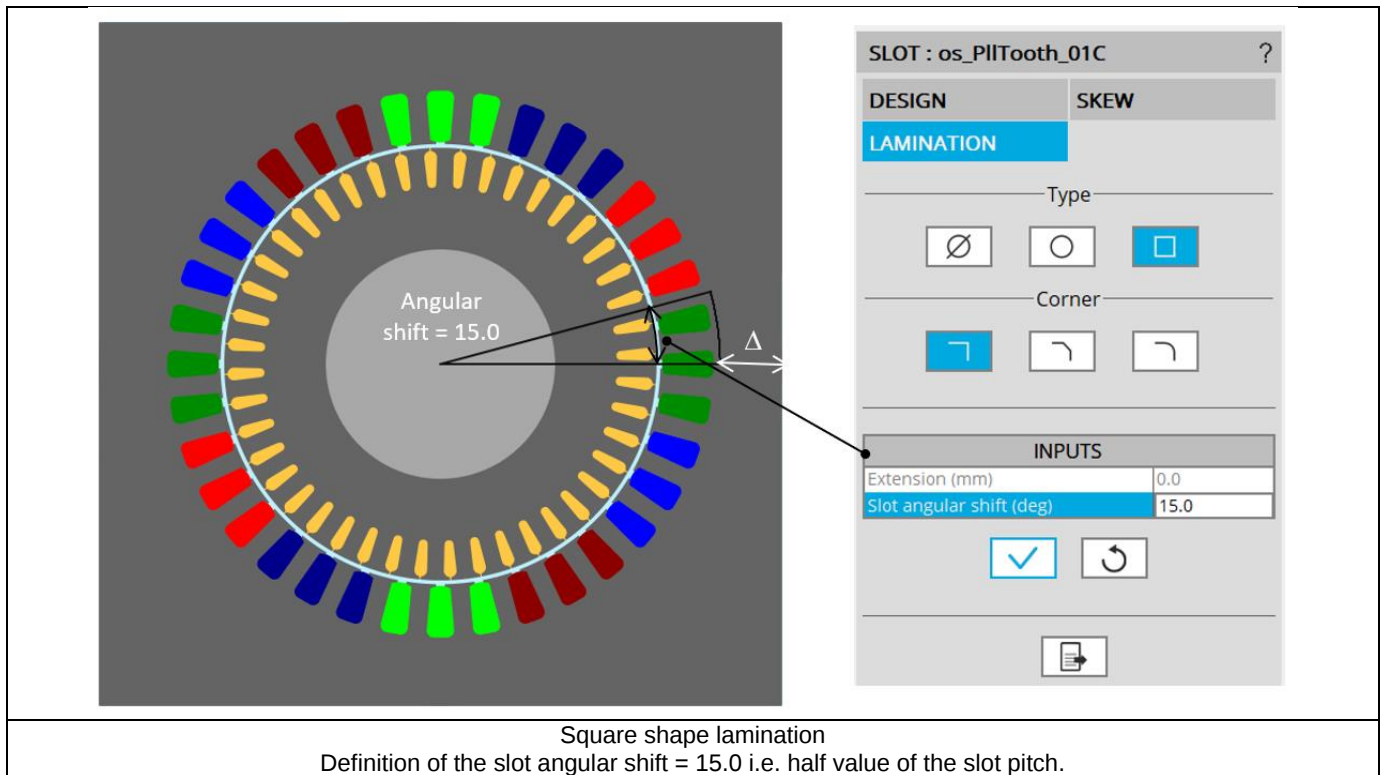


1.9 Winding

Please refer to the user help guide:

“.MotorFactory_2022.1_3Phase_Winding” which is dedicated to the 3-Phase winding design General user information.

For both types of winding, whether classical or hairpin, the home page characteristics are the same. The following picture illustrates the main areas of the home page which is displayed for the classical winding.

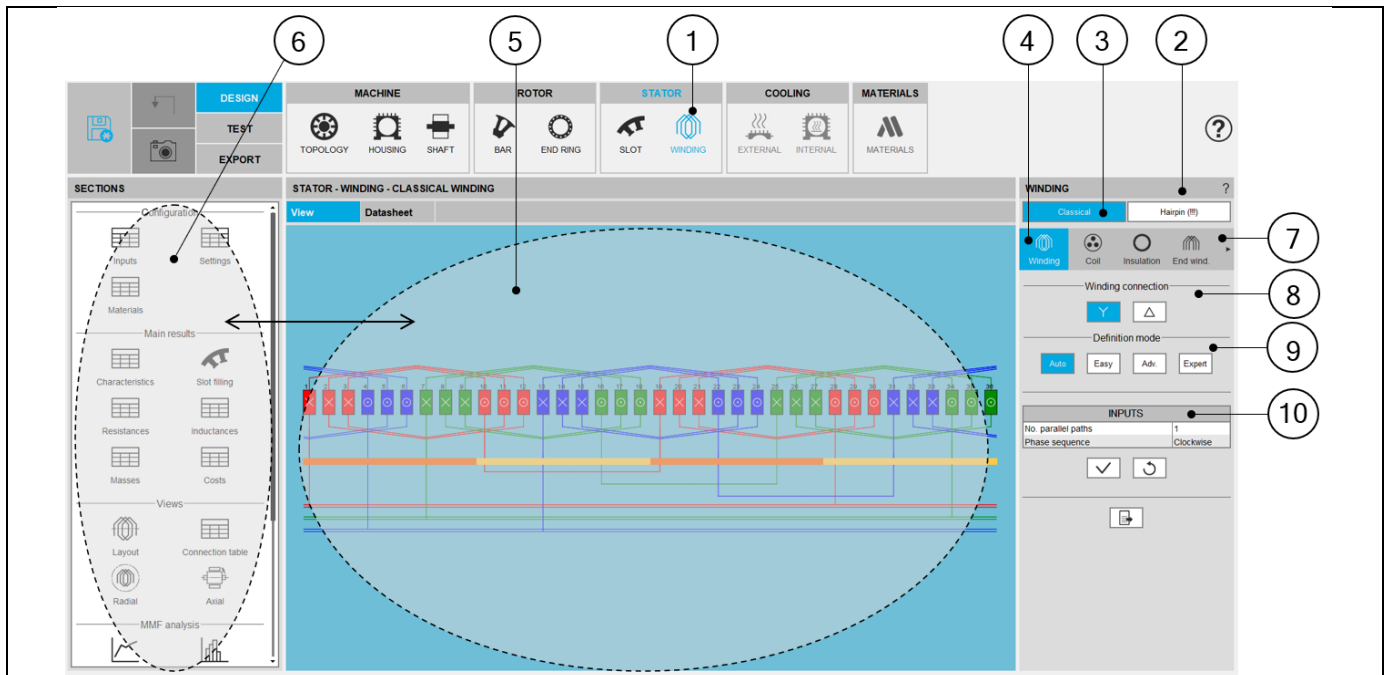

WINDING design area – Classical winding - Overview

1	Selection of the STATOR subset: WINDING panel (Click on the icon WINDING)
2	All the required user inputs to define the winding are available in the “WINDING” panel (right part).
3	Selection of the classical winding design (Highlighted in blue)
4	Winding settings allow describing the winding architecture
5	Once a winding is defined, the corresponding results are automatically displayed in the form of a winding report. Visualization of the winding characteristics (inputs, settings, materials, etc) are possible. Scrollbars allow browsing the whole document rapidly and giving an overview of all the results. Using scrollbars, complete data can be accessed and visualized.
6	Shortcuts for displaying the corresponding section of the winding report.
7	A section scrolling bar allows choosing the section in which user inputs are defined. Scrolling selection bar where Winding architecture, Coil, Insulation, End-winding, X-Factor and Potting sections can be selected
8	Choice of the winding connection: Y (Wye) or Δ (Delta)
9	Four modes of winding allow to define and build the winding architecture .
Auto	Automatic mode, used as default.
Easy	Easy mode, to choose solution among those FluxMotor® proposes.
Adv.	Advanced mode, to allow the user to define any specific input parameters.
Expert	Expert mode, to set the connection table.
10	User input parameter fields to enter the values according to the considered mode.

Scrolling selection bar – Winding environment

1	Scrolling selection bar where Winding, Coil, End-winding, X-Factor and Potting sections can be selected
2	Section data can be reached thanks to shortcuts
3	Arrow allows scrolling the bar to reach other sections (on the right or the left) when needed
4	The bar slides on the right to allow reaching Potting section


Note: This mode of section selection is applied for hairpin winding environment as well.

1.10 External cooling

1.10.1 Overview

This step allows defining the thermal modeling of the cooling of the external part of the frame.

This area is unlocked only once a housing is defined, in the MACHINE subset, HOUSING design area.

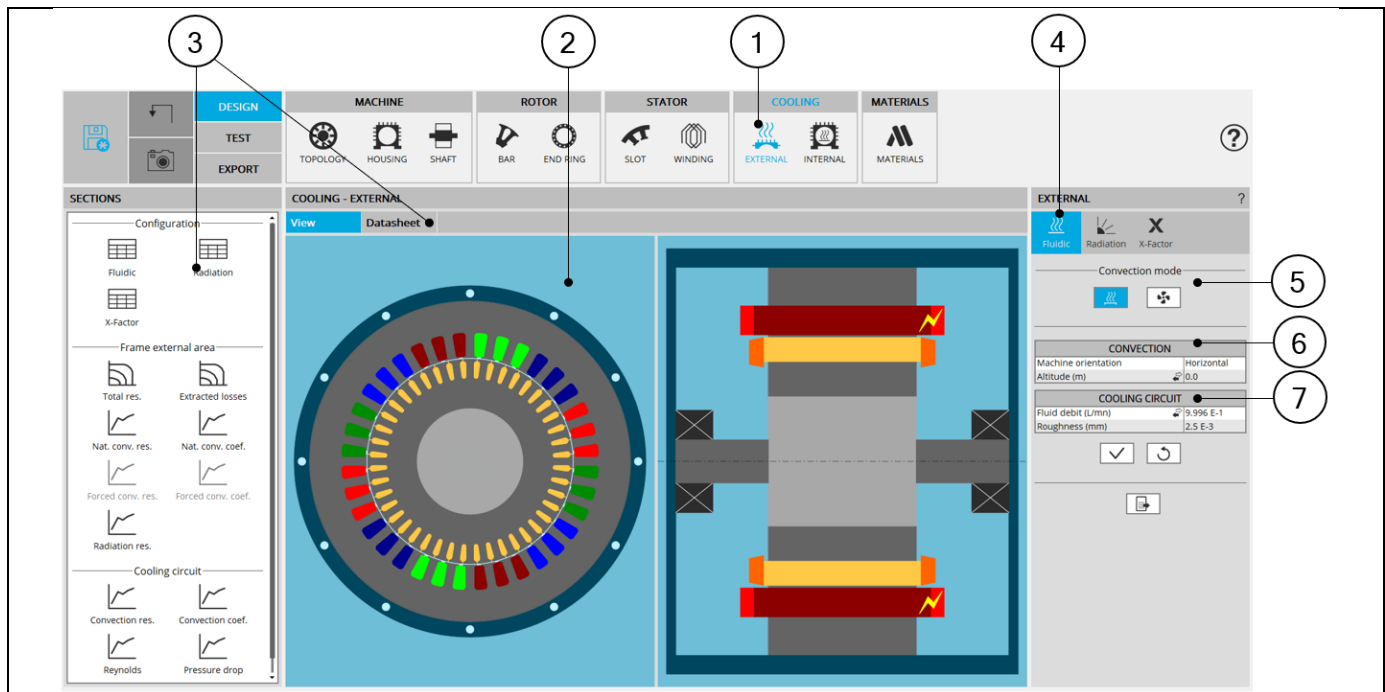

EXTERNAL COOLING design area - Overview

1	Selection of the COOLING subset: EXTERNAL panel (Click on the icon EXTERNAL)
2	Once the external cooling parameters are defined, corresponding results are automatically displayed in the form of a report.
3	Visualization of the external cooling characteristics (inputs, and corresponding results) is possible in a datasheet. Scrollbars allow browsing the whole document rapidly and having an overview of all the results. Using scrollbars, complete data can be accessed and visualized. Shortcuts for displaying the corresponding chapter of the external cooling report.
4	External cooling settings allow describing the external cooling parameters
5	Choice of the external convection mode: natural or forced
6	Inputs defining the convection (forced or natural, corresponding to the choice above)
7	Inputs defining the fluid flow in the cooling circuit. This table is available only when a cooling circuit has been defined by the user in the MACHINE subset, HOUSING panel, CIRCUIT setting.

1.10.2 Advice for use

1.10.2.1 Hypothesis on fluidic computations

Due to the hypothesis made in fluidic computations, some non-continuity can be observed in the fluid convection coefficient evolution, especially in the airgap and on the frame. These non-linearities and possible non-continuities are related to the change from laminar to turbulent fluid flow.

1.10.2.2 Validity domain of the fluidic computations

The fluidic computation embedded in FluxMotor® uses analytical laws. For some specific fluid properties, extreme temperatures, and very low forced cooling velocity, the computations made can be out of this validity domain.

In this case, some errors will occur, asking to check the fluid properties, and the velocity involved in the forced convection.

For advanced usages that the hypothesis on fluid flow does not cover, it is advised to set a “user convection coefficient” manually for these specific regions.

1.10.2.3 Frame convection and cooling circuit convection

Frame convection and cooling circuit convection are key parameters to understand the thermal behavior of the machine.

FluxMotor® provides some internal models to estimate the convection occurring in the cooling circuit and on the frame.

It must be kept in mind that the FluxMotor® functions are provided to be used in predesign steps: these convection coefficients are given to illustrate general tendencies but will differ to the accurate convection occurring on the machine. For advanced uses, it is advised to consider these coefficients carefully, and to do additional CFD computation to improve the results quality.

The FluxMotor® model has been validated for machines surrounded by air. The user can select other external fluids, but this go beyond the validation done on the software.

1.10.2.4 Temperature considered for fluidic computations

Some fluidic computations are based on two different temperatures: the temperature of the fluid, and the temperature of the wall from where the convection occurs.

This explains that the convection results shown in the design environment can be slightly different from the results obtained in the test environment.

In the design environment, the fluid and the wall are considered to be at the same evaluation temperature, but in the test the wall and the fluid temperatures are evaluated during the solving and are different in most of the cases.


1.10.3 Fluidic – Inputs

The tools available in the fluidic tab allow defining the parameters that drive the convection phenomenon cooling the frame:

- On the external surfaces of the frame and of the end caps
- In the cooling circuit, when a cooling circuit is defined by the user in the MACHINE subset, HOUSING panel, CIRCUIT setting.

Two choices are available to define the convection occurring on the external surface of the frame and of the end caps. Natural or Forced.

By default, Convection mode is set to “Natural”.

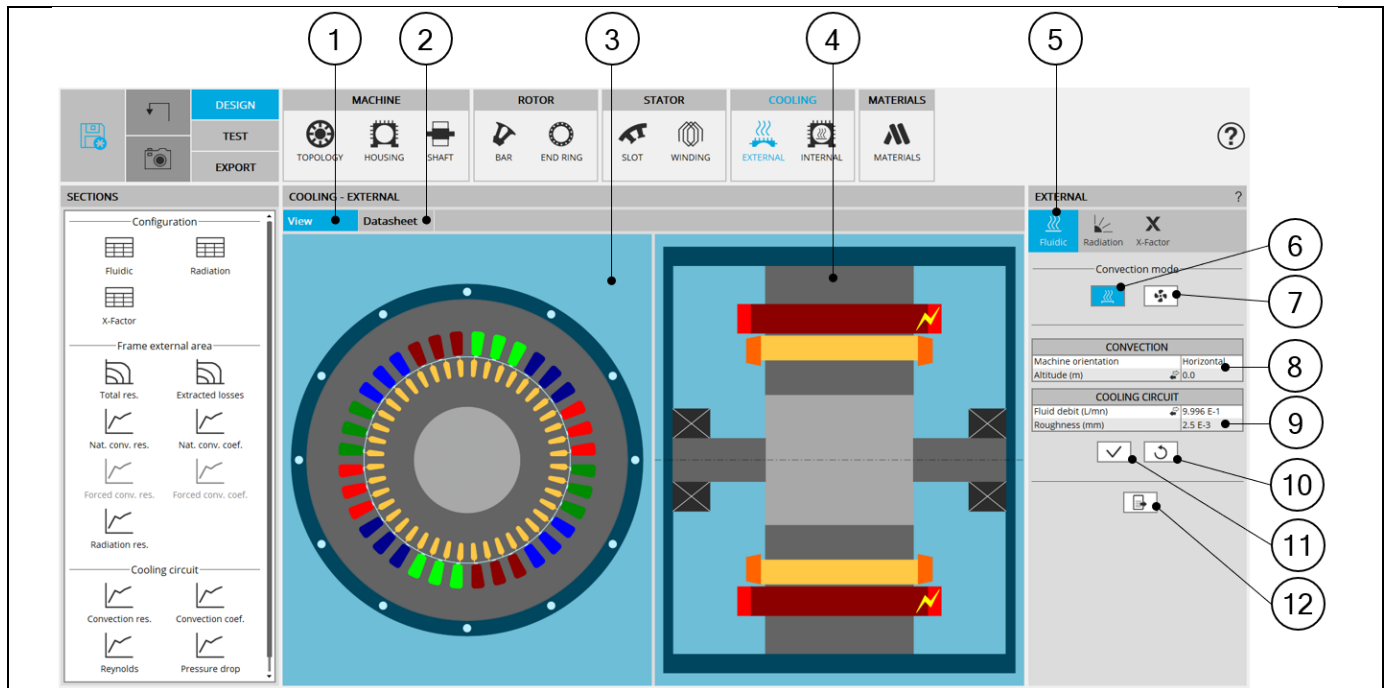

External cooling - Fluidic design area

1	Display the axial and radial view of the machine.
2	Display the external cooling datasheet, showing the main thermal parameters of the frame cooling.
3	Radial view of the motor, where specific exchange areas can be highlighted depending on the selected input.
4	Axial view of the motor, where specific exchange areas can be highlighted depending on the selected input.
5	The section fluidic is selected.
6	Selected button to set that the external areas of the frame and the end caps are cooled by natural convection (no forced fluid flow).
7	Selected button to set that the external areas of the frame and the end caps are cooled by forced convection (forced fluid flow around the machine).
8	Input related to the fluidic corresponding to the selected convection mode.
9	Input related to the cooling circuit, when a cooling circuit exists.
10	Button to restore default input values.
11	Button to apply inputs. Pressing the enter key twice applies inputs too.
12	Icon to export external cooling data into *.txt or *.xlsx files.

1.10.3.1 Natural convection

This convection mode corresponds to no forced fluid velocity around the machine. When selecting this mode, the only convection modeled is the fluid convection movement due to the difference of fluid temperatures (giving a difference of fluid density) close to the frame compared with the fluid far from the frame.

For instance, for a totally enclosed machine, cooled by natural convection in air, the frame will be hotter than the air close to it. This will warm the air surrounding the frame, feeding a natural « convective pump » due to the difference of air densities close and far from the frame (the hotter air having a lower density).

Natural convection - Inputs	
1	Machine orientation. The resulting orientation can be seen in the axial view of the machine. The machine orientation has an impact only on the natural convection occurring on the external surface of the frame and of the end caps
2	Altitude or Pressure (depending on the input mode selected by the user). The pressure has an impact on the gas properties, changing the convection (natural and forced) occurring inside and outside the frame. This pressure can be set directly as a pressure, or as an altitude of use of the machine depending on the user choice. When selecting the altitude, an internal model computes the equivalent atmospheric pressure to consider for the convection computations. Notes: • This input (altitude or pressure) has an impact on gas involved in both external and internal convection phenomenon. • The convection model for liquid is based on the hypothesis of non-compressible fluid. When the external or internal fluid is a liquid (meaning it is not a gas), this input is ignored for the corresponding convection phenomenon.
3	Fluid debit or Fluid velocity (depending on the input mode selected by the user). This input exists only when a cooling circuit has been defined by the user in the MACHINE subset, HOUSING panel, CIRCUIT setting. It corresponds to the fluid flow debit or velocity existing in the cooling circuit. This input will be considered for every thermal computation, including the tests (and not only for the model evaluation in the external cooling design environment).
4	The roughness of the cooling circuit pipe is only considered to compute the regular pressure losses in the cooling circuit and does not affect the computation of the temperatures.

1.10.3.2 Forced convection

This convection mode allows adding forced convection in addition to the natural convection that always exists. When selecting this mode, the effect of the forced fluid flow around the machine is detailed separately of the natural convection in the results.

The resulting convection occurring on the machine is a mix of natural convection and forced convection.

Natural convection - Inputs	
1	Machine orientation. The resulting orientation can be seen in the axial view of the machine. The machine orientation has an impact only on the natural convection occurring on the external surface of the frame and of the end caps
2	Flow origin. This describes the origin of the fluid flow cooling the external surfaces of the frame and of the end caps. The flow can come from the Connection Side or from the Opposite Connection Side. Arrows are displayed in the axial view of the machine to illustrate the user choice.
3	Fan tip speed ratio or Constant fluid speed or Forced convection coefficient. (depending on the input mode selected by the user). This input describes the forced convection phenomenon existing on the outer surfaces of the frame and of the end caps. Please refer to additional information below.
4	Altitude or Pressure (depending on the input mode selected by the user). The pressure has an impact on the gas properties, changing the convection (natural and forced) occurring in and out of the frame. This pressure can be set directly as a pressure, or as an altitude of use of the machine depending on the user choice. When selecting the altitude, an internal model computes the equivalent atmospheric pressure to consider for the convection computations. Notes: - This input (altitude or pressure) has an impact on gas involved in both external and internal convection phenomenon. - The convection model for liquid is based on the hypothesis of non-compressible fluid. When the external or internal fluid is a liquid (meaning it is not a gas), this input is ignored for the corresponding convection phenomenon.
5	Fluid debit or Fluid velocity (depending on the input mode selected by the user). This input exists only when a cooling circuit has been defined by the user in the MACHINE subset, HOUSING panel, CIRCUIT setting. It corresponds to the fluid flow debit or velocity existing in the cooling circuit. This input will be considered for every thermal computation, including the tests (and not only for the model evaluation in the external cooling design environment).
6	Roughness: The roughness of the cooling circuit pipe is only considered to compute the regular pressure losses in the cooling circuit and does not affect the computation of the temperatures.

EXTERNAL ?

Fluidic
 Radiation
 X-Factor

Convection mode

CONVECTION

Machine orientation	Horizontal
Flow origin	C.S.
Fan tip speed ratio	2.0
Altitude (m)	0.0


COOLING CIRCUIT

Fluid debit (L/mn)	9.996 E-1
Roughness (mm)	2.5 E-3

Natural convection - Inputs

	Natural convection - Inputs
1	Fan tip speed ratio or Constant fluid speed or Forced convection coefficient. (depending on the input mode selected by the user). This input describes the forced convection phenomenon existing on the outer surfaces of the frame and of the end caps. The fan tip speed ratio describes the ratio between the fluid velocity and the tip speed of the rotor. This describes the behavior of a shaft mounted fan which rotation depends on the speed of the rotor. Then, when using this input, the external fluid velocity along the frame will be proportional to the rotation speed of the rotor
2	The user set the ratio between the fan blade tip speed (the tip of the blades being considered at the frame external radius, without considering the possible fins and the velocity of the fluid projected by the fan). The default value is 2. This corresponds to average fans, where the tip speed of the fan blade is two time higher than the average speed of the fluid projected by the fan. Lower this ratio will be, more efficient will be the cooling (because with a lower ratio, the coolant velocity will be higher at a given rotation speed of the rotor) Constant fluid speed input can be used to model a fixed coolant velocity, whatever the rotor speed is. It allows modeling an external cooling system blowing air on the machine without dependency of the machine. Forced convection coefficient input allows experts to directly force in the model a forced convection coefficient. This coefficient describes only the “forced” component of the convection. This forced convection set by the user will be added to the natural convection by an internal computation. The impact of the natural and forced components of the cooling can be seen in the outputs.

1.10.4 Radiation – Inputs

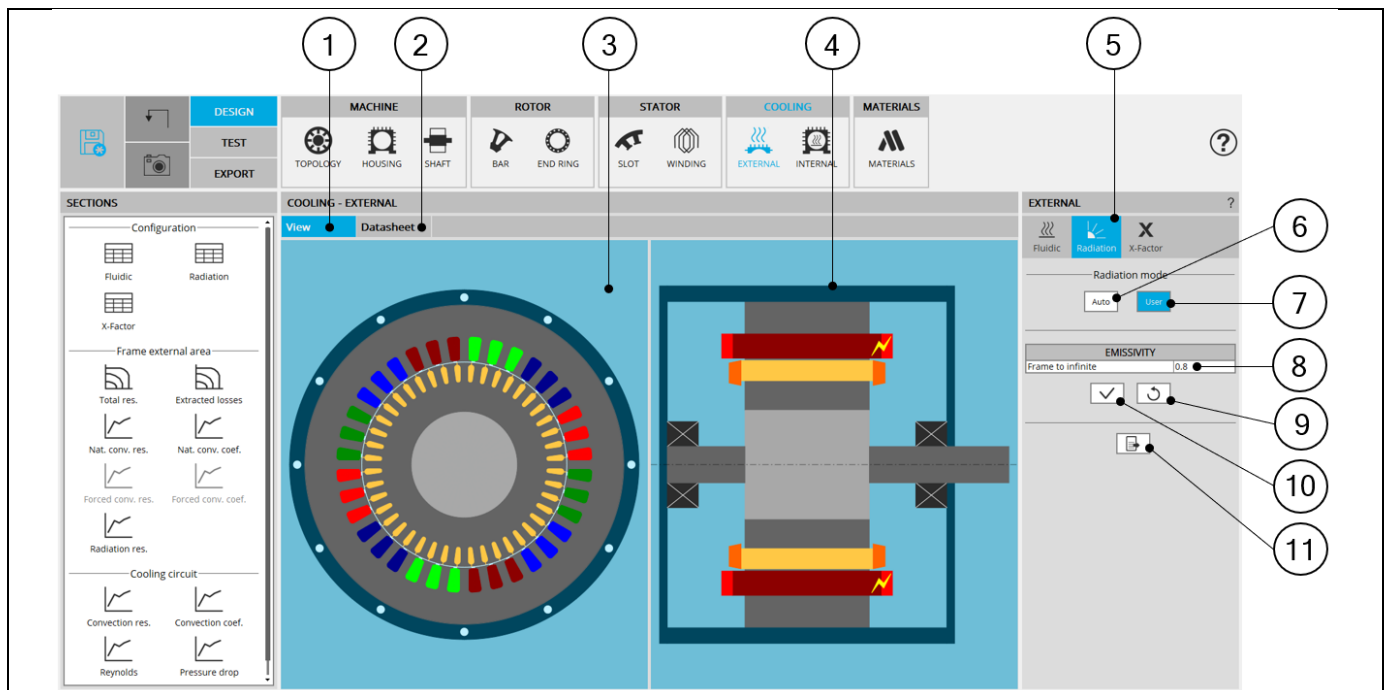

External cooling - Radiation design area

1	Display the axial and radial view of the machine.
2	Display the external cooling datasheet, showing the main thermal parameters of the frame cooling.
3	Radial view of the motor, where specific exchange areas can be highlighted depending on the selected input.
4	Axial view of the motor, where specific exchange areas can be highlighted depending on the selected input.
5	The section radiation is selected.
6	Button to set the external emissivity of the frame by automatic process.
7	Selected button, to set the external emissivity of the frame manually
8	Input related to the radiation corresponding to the selected radiation mode. In user mode, only the Frame to infinite emissivity must be define. The default value is 0.8.
9	Button to restore default input values.
10	Button to apply inputs. Pressing the enter key twice applies inputs too.
11	Icon to export external cooling data into *.txt or *.xlsx files.

1.10.5 X-Factors – Inputs

1.10.5.1 Overview


The X-factor panel allows the user to defined calibration factors to tune the thermal modeling on specific resistances. The adjustment factors set in this panel are considered in the results shown in “external cooling” environment, and in the test environment.

The X-factor panel also contains a set of parameters driving the external cooling (coolant temperatures and rotor speed) allowing the user to evaluate the thermal model embedded.


External cooling – X-factor area

1	Display the axial and radial view of the machine
2	Display the external cooling datasheet, showing the main thermal parameters of the frame cooling.
3	Radial view of the motor, where specific exchange areas can be highlighted depending on the selected input.
4	Axial view of the motor, where specific exchange areas can be highlighted depending on the selected input.
5	The section X-Factor is selected.
6	Table of the calibration factors allowing the user to tune the thermal modeling.
7	Input table used for evaluating the external cooling, driving the results displayed in the external cooling datasheet.
8	Button to restore default input values.
9	Button to apply inputs. Pressing the enter key twice applies inputs too.
10	Icon to export external cooling data into *.txt or *.xlsx files.

1.10.5.2 Calibration factors

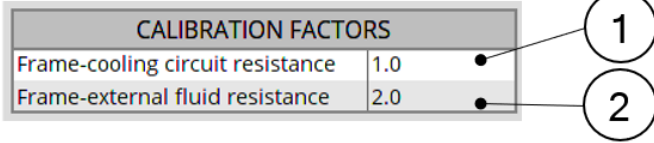	
External cooling – Calibration factors input table	
1	Frame-cooling circuit resistance. This calibration factor is applied on the thermal resistance linking the frame and its cooling circuit. This X-factor exists only when a cooling circuit is defined by the user in the MACHINE subset, HOUSING panel, CIRCUIT setting.
2	Frame-external fluid resistance. This calibration factor is applied on every resistance linking the frame and the external fluid: • Conduction resistances through the frame and end cap thicknesses • Natural and forced convection resistances • Radiation resistances from the external surfaces of the frame and of the end caps, to the infinite

1.10.5.3 Model evaluation

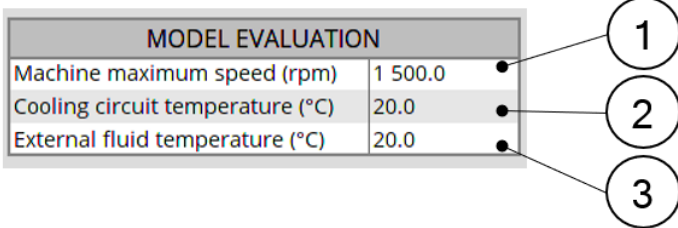	
External cooling – Model evaluation input table	
1	Machine maximum speed. It is the maximum rotation speed for which the forced convection is evaluated in the external cooling datasheet
2	Cooling circuit temperature. It is the temperature used in external cooling panel to evaluate the convection occurring in the cooling circuit. All the results shown for the cooling circuit in external cooling panel and datasheet use this temperature as the temperature of the coolant all along the circuit. This parameter only exists when a cooling circuit has been defined by the user in the MACHINE subset, HOUSING panel, CIRCUIT setting. Note: This temperature is only used for the model evaluation in the external cooling panel. This temperature does not affect the test computations, where the cooling circuit coolant inlet temperature is defined in the settings of the test.
3	External fluid temperature. It is the temperature used in external cooling panel to evaluate the convection and the radiation occurring on external surfaces of the frame and of the end caps. All the results shown for frame and end caps cooling in external cooling panel used this temperature as the temperature of the external fluid at the infinite. The curves and maps are plotted for a temperature of the frame going from this reference temperature to 150 Kelvin above this reference temperature. Note: This temperature is only used for the model evaluation in the external cooling panel. This temperature does not affect the test computations, where the external fluid temperature is defined in the settings of the test.

1.10.6 External cooling outputs

1.10.6.1 Frame external area

1) Frame to external fluid total thermal resistance in temperature-speed area

This map shows the global thermal resistance used in FluxMotor® model between the frame and the external fluid in a temperature - speed area.

The frame temperature, shown on the X-axis, impacts the natural convection and radiation occurring of each of the frame surfaces (higher is the frame temperature and higher is the temperature difference between the frame and external fluid at the infinite). The map is plotted for a frame temperature going from the external fluid temperature to 150 Kelvin above this reference temperature.

The machine rotation speed, shown on the Y-axis, can impact the forced convection when the user chooses a tip speed ratio to define the force convection.

The global resistance between the frame and the external fluid shown on this graph corresponds to the thermal resistance network shown below.


Three main paths extract the heat from the machine to the external fluid, corresponding to three main components: the straight part of the frame, and the two end caps.

Note: The dimensions of the frame, the Connection Side end cap and the Opposite Connection Side end cap and their physical properties can be defined separately.


Each of these paths extracting heat of the machine is composed of several thermal resistances in series:

- The conduction through the material composing the part
- The convection and radiation occurring from the external surfaces of the frame.

In this network, the convection resistances are mixes of natural and forced components of the convection phenomenon.

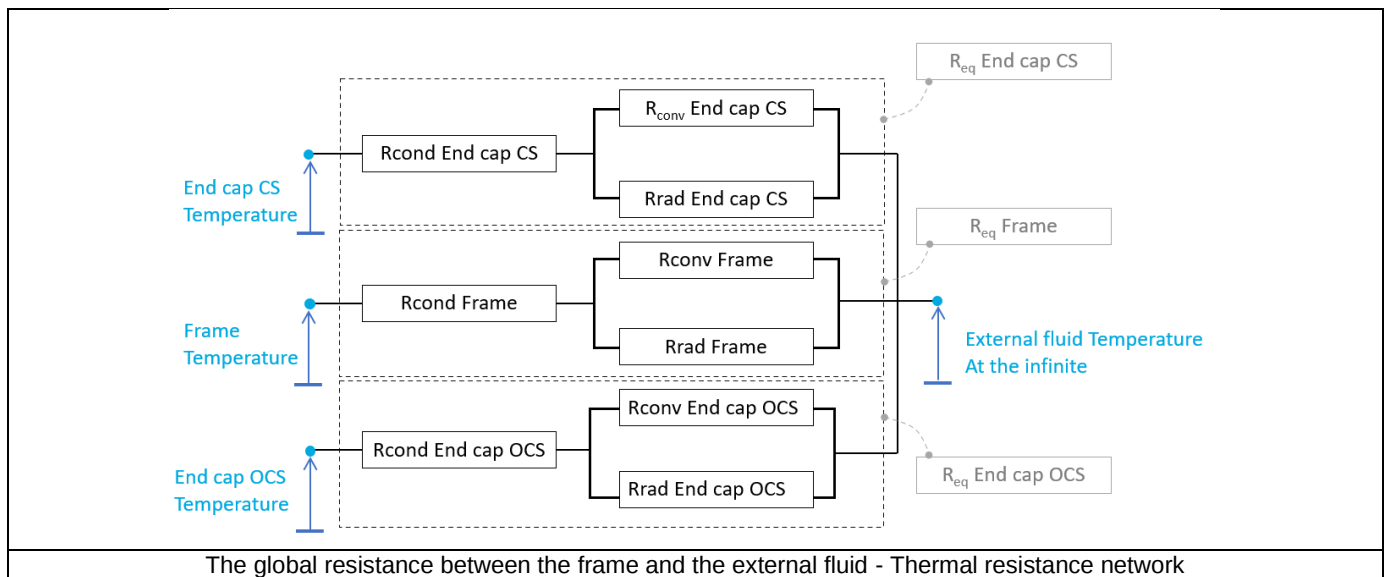

The equivalent thermal resistances defined above are integrated in the global thermal network. The part of this network corresponding to the end parts of the machine is described below.

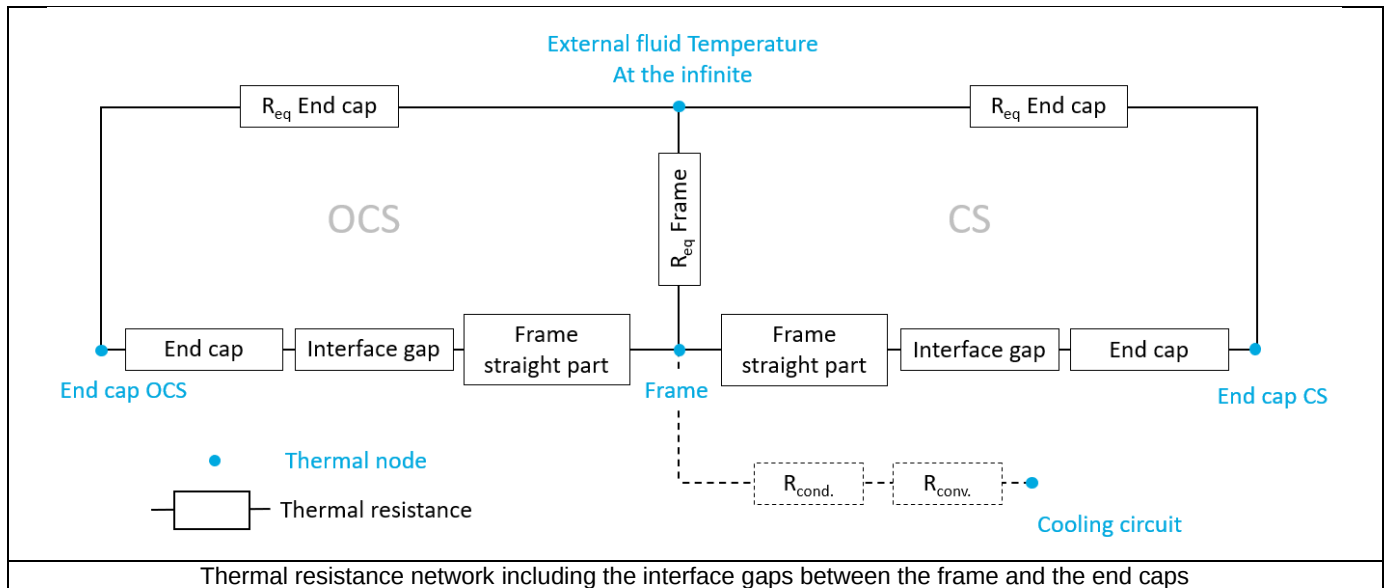

2) Losses extracted to external fluid in temperature-speed area

This graph shows the potential of the frame to extract losses in a temperature-speed area.

It shows, for a given frame temperature and a given rotation speed of the machine, how much losses are extracted from the frame to the external fluid, considering that the external fluid is at its reference temperature set by the user in the X-factor settings of External cooling panel.

The map is plotted for a frame temperature going from the external fluid temperature to 150 Kelvin above this reference temperature.

3) Frame natural convection versus temperature (Resistance and convection coefficient)

These curves show the natural convection coefficients and resistances existing on each part composing the frame:

- The straight part of the frame
- The Connection Side end cap
- The Opposite Connection Side end cap

These curves are plotted for a frame temperature going from the external fluid temperature set by the user in X-factor settings of External cooling panel, to 150 Kelvin above this reference temperature.

4) Frame forced convection versus speed (Resistance and convection coefficient)

These curves show the forced convection coefficients and resistances existing on each part composing the frame:

- The straight part of the frame
- The Connection Side end cap
- The Opposite Connection Side end cap

The curves are plotted for a range of rotor speed going from zero to the maximum speed set by the user in the X-factor settings of External cooling panel.

5) Frame radiation versus temperature

These curves show the radiation resistances existing on each part composing the frame:

- The straight part of the frame
- The Connection Side end cap
- The Opposite Connection Side end cap

These curves are plotted for a frame temperature going from the external fluid temperature set by the user in X-factor subset of External cooling panel, to 150 Kelvin above this reference temperature.

1.10.6.2 Cooling circuit

1) Cooling circuit convection versus fluid velocity or debit (Resistance and convection coefficient)

These curves show the convection coefficient and resistances existing in the cooling circuit versus the fluid velocity or debit. The convection coefficient and resistance are plotted for speed or debit until the nominal value set by the user in the "Fluidic" settings of External cooling panel.

These curves exist only when a cooling circuit is defined by the user in the MACHINE subset, HOUSING panel, CIRCUIT setting.

2) Cooling circuit Reynolds number versus fluid velocity or debit

This curve shows the Reynolds number existing in the cooling circuit versus the coolant speed or debit. The Reynolds number is plotted for speed or debit until the nominal value set by the user in the "Fluidic" settings of External cooling panel.

This curve exists only when a cooling circuit is defined by the user in the MACHINE subset, HOUSING panel, CIRCUIT setting.

3) Cooling circuit regular pressure drop versus fluid velocity or debit

This curve shows the regular pressure loss existing along the cooling circuit versus the coolant speed or debit. The computation of the regular pressure loss is based on the roughness set by the user, and the Reynolds number in the pipe.

The regular pressure loss is plotted for speed or debit until the nominal value set by the user in the "Fluidic" settings of External cooling panel.

This curve exists only when a cooling circuit is defined by the user in the MACHINE subset, HOUSING panel, CIRCUIT setting

Note: only the regular component of the pressure loss is displayed. The singular pressure losses, due to bend, pumps, section increases, or decreases

1.11 Internal cooling

1.11.1 Overview

This step allows defining the thermal modeling of the internal cooling, meaning the complex thermal transfers occurring inside the machine.

This panel can be reached only once a housing, a shaft and bearings are defined.

- The housing can be defined in the MACHINE subset, HOUSING panel, FRAME settings.
- The shaft can be defined in the MACHINE subset, SHAFT panel, and SHAFT settings.
- Bearings can be defined in the MACHINE subset, SHAFT panel, and BEARING settings.

INTERNAL COOLING design area - Overview	
1	Selection of the COOLING subset: INTERNAL panel (Click on the icon INTERNAL)
2	Once the internal cooling parameters are defined, corresponding results are automatically displayed in form of datasheet. Visualization of the internal cooling characteristics (inputs, and corresponding results) is possible. Scrollbars allow browsing the whole document rapidly and having an overview of all the results. Using scrollbars, complete data can be accessed and visualized.
3	Shortcuts for displaying the corresponding chapter of the internal cooling datasheet.
4	Internal cooling settings allow describing the internal cooling parameters.
5	Choice of the internal convection mode: natural or forced.
6	Inputs defining the convection (forced or natural, corresponding to the choice above).

1.11.2 Advice for use

1.11.2.1 Hypothesis on fluidic computations

Due to the hypothesis made in fluidic computations, some non-continuity can be observed in the fluid convection coefficient evolution, especially in the airgap and on the frame. These non-linearities and possible non-continuities are related to the change from laminar to turbulent fluid flow.

1.11.2.2 Validity domain of the fluidic computations

The fluidic computation embedded in FluxMotor® uses analytical laws. For some specific fluid properties, extreme temperatures, and very low forced cooling velocity, the computation can be out of this validity domain.

In such cases, some errors will occur, asking to check the fluid properties, and the velocity involved in the forced convection.

For advanced usages, not covered by our hypothesis on fluid flow, it is advised to set a “user convection coefficient” manually for these specific regions.

1.11.2.3 Natural convection on end windings

When choosing to model that the end spaces are cooled with natural convection, FluxMotor® model uses a quite low rotor tip speed ratio (a value of 5) to describe the fluid velocity far from the rotating components.

This can lead to overestimates the cooling of the end winding on high speed machines. This model will be improved for future versions.

When a tip speed ratio of 5 seems to overestimate the end winding cooling, it is advised to switch to forced convection mode.

This mode allows forcing some higher tip speed ratios for areas far from the rotor, this reducing the efficiency of the cooling on the end winding.

1.11.2.4 Temperatures considered for fluidic computations

Some fluidic computations are based on two different temperatures: the temperature of the fluid, and the temperature of the wall from where the convection occurs.

This explains that the convection results shown in the design environment can be slightly different from the results obtained in the test environment.

In the design environment, the fluid and the wall are at the evaluation temperature, but in the test the wall and the fluid temperatures are evaluated during the solving and are different in most of the cases.

1.11.2.5 Interface thickness usage

The temperatures obtained on a machine highly depend on the interface thicknesses set between each part of the machine. The default interface gap values are set to correspond to classical existing values.

However, keep in mind that the temperatures seen on a real design will deeply depends of the interface qualities, linked to the quality of the mounting process.

Especially, for machines with high density of losses and efficient cooling systems, like water jacket cooled machines, the interface thickness between the frame and the stator yoke is one of the main thermal resistances in the heat extraction. The user must be very careful on the value used for this interface thickness.

The thermal resistances corresponding to the interface thicknesses are computed considering that the interfaces are made of air at 273.15 Kelvin, and at the atmospheric pressure at sea level, 1.013E5 Pa.

1.11.2.6 Radiation from the shaft

No radiation is considered from the shaft in FluxMotor® model.


1.11.3 Fluidic – Inputs

The tools available in the fluidic tab allow defining the parameters that drive the convection phenomenon in the end spaces, involving the surfaces of the frame (internal surface), the end cap (internal surface), the shaft, the rotor and stator ends, and the end winding or potting.

Two choices are available to define the convection occurring on the external surface of the frame and of the end caps. Natural or Forced.

By default, Convection mode is set to “Natural”.

Note: No inputs exist to define the convection in the airgap, as the convection in the airgap mainly depends of the rotation speed of the rotor and does not depend of the cooling strategy affecting the end spaces.

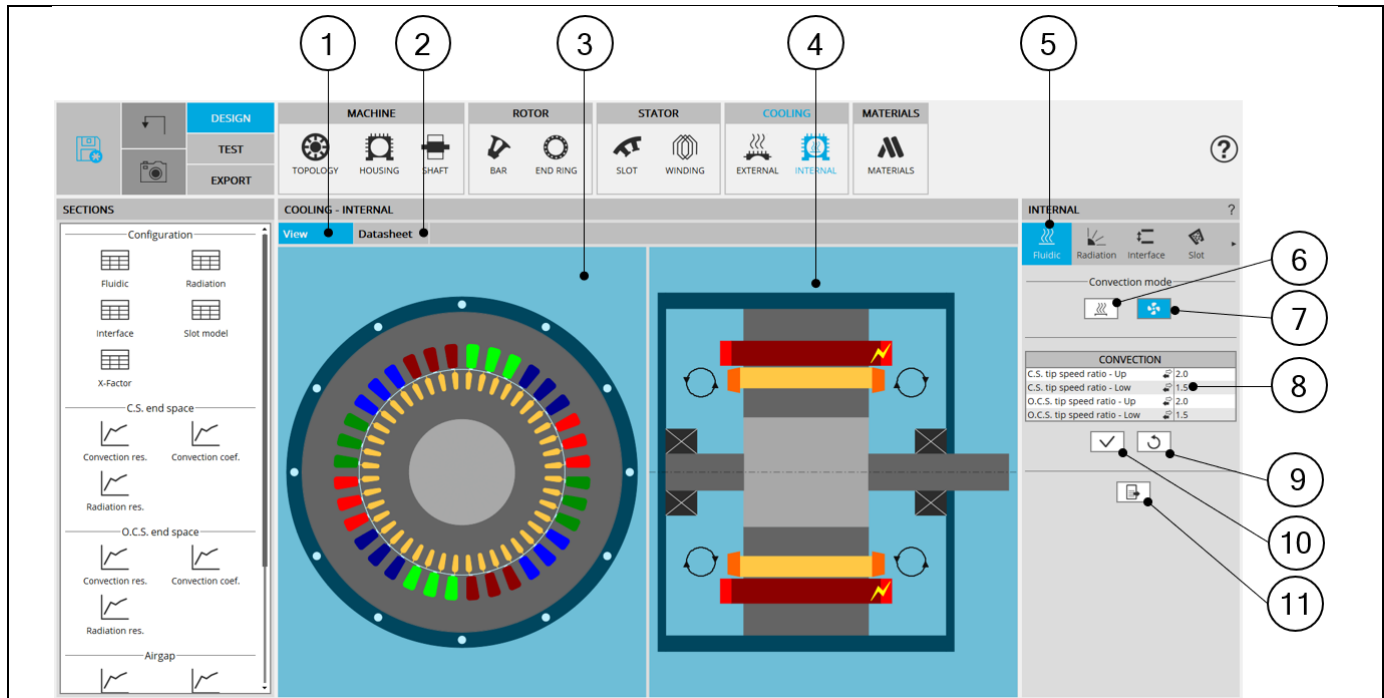

Internal cooling - Fluidic design area

1	Display the axial and radial view of the machine.
2	Display the internal cooling datasheet, showing the thermal parameters defining the internal heat exchanges.
3	Radial view of the motor, where specific exchange areas can be highlighted depending on the selected input.
4	Axial view of the motor, where specific exchange areas can be highlighted depending on the selected input.
5	The section “Fluidic” is selected.
6	Selected button to set that natural convection occurs in the end spaces (no specific fluid flow modeled in addition to the rotation of the machine).
7	Selected button to set that forced convection occurs in the end spaces (a specific fluid flow on each area of the end caps can be specify by the user, that can be linked to the machine rotation speed or not).
8	Input related to the fluidic corresponding to the selected convection mode.
9	Button to restore default input values.
10	Button to apply inputs. Pressing the enter key twice applies inputs too.
11	Icon to export internal cooling data into *.txt or *.xlsx files.

1.11.3.1 Natural convection

This convection mode models that no specific forced fluid flow exists in the end caps in addition to the natural fluid movement induced by the machine rotation speed.


The modeled convection exchanges, corresponds to the sum of two phenomena:

- The differences of fluid temperature existing in different volumes of the end spaces (giving a difference of fluid density) creating some fluid natural swirling in the end spaces.
- The fluid movement induced by the rotation speed of the machine.

FluxMotor® internal natural convection model is based on classical correlations for end spaces, considering different fluid velocities for the parts close to the rotating parts, and far from the rotating parts.

Therefore, there is no user input to define in this mode.

Note: The natural convection mode is well adapted to model every enclosed machine without internal fans. When internal fans, or rotor fins exist, it is advised to switch to forced convection mode.

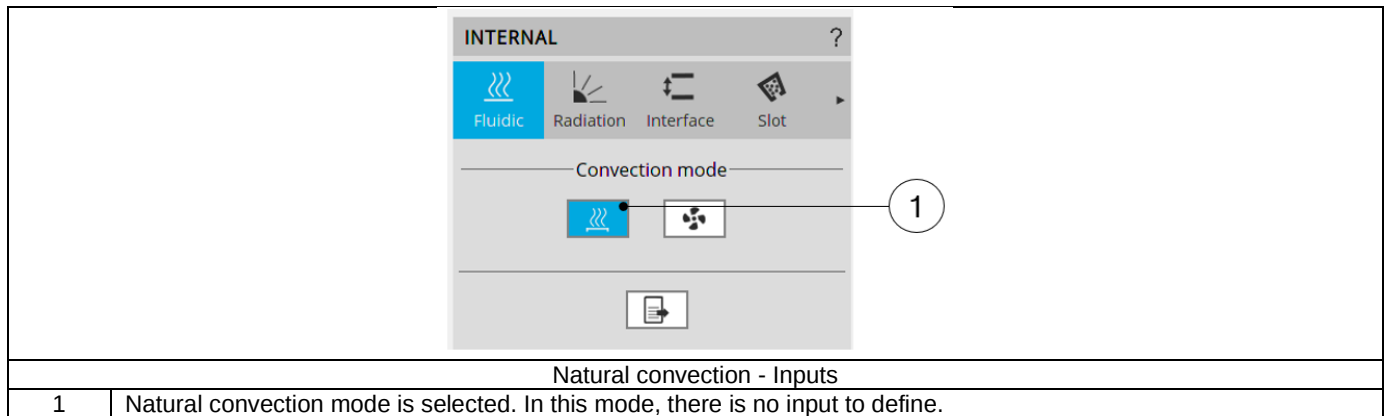

1.11.3.2 Forced convection

This convection mode allows forcing the convection model used for every region of the end spaces.



It can be used to model:

- Increased convection effects due to rotor fins of shaft mounted internal fans.
- A fan internally forcing constant ventilation whatever the rotation speed of the machine.
- Some forced convection coefficients in the end spaces.

The end spaces are divided in four areas, corresponding to four inputs the user must defined in forced convection mode:

- The « Upper » Connection Side region, corresponding to the Connection Side convection areas far from the rotating parts.
- The « Lower » Connection Side region, corresponding to the Connection Side convection areas close to the rotating parts.
- The « Upper » Opposite Connection Side region, corresponding to the Opposite Connection Side convection areas far from the rotating parts.
- The « Lower » Opposite Connection Side region, corresponding to the Opposite Connection Side convection areas close to the rotating parts.


When selecting one of these four inputs, the corresponding exchange areas are highlighted in the axial view of the machine. See below illustrations.

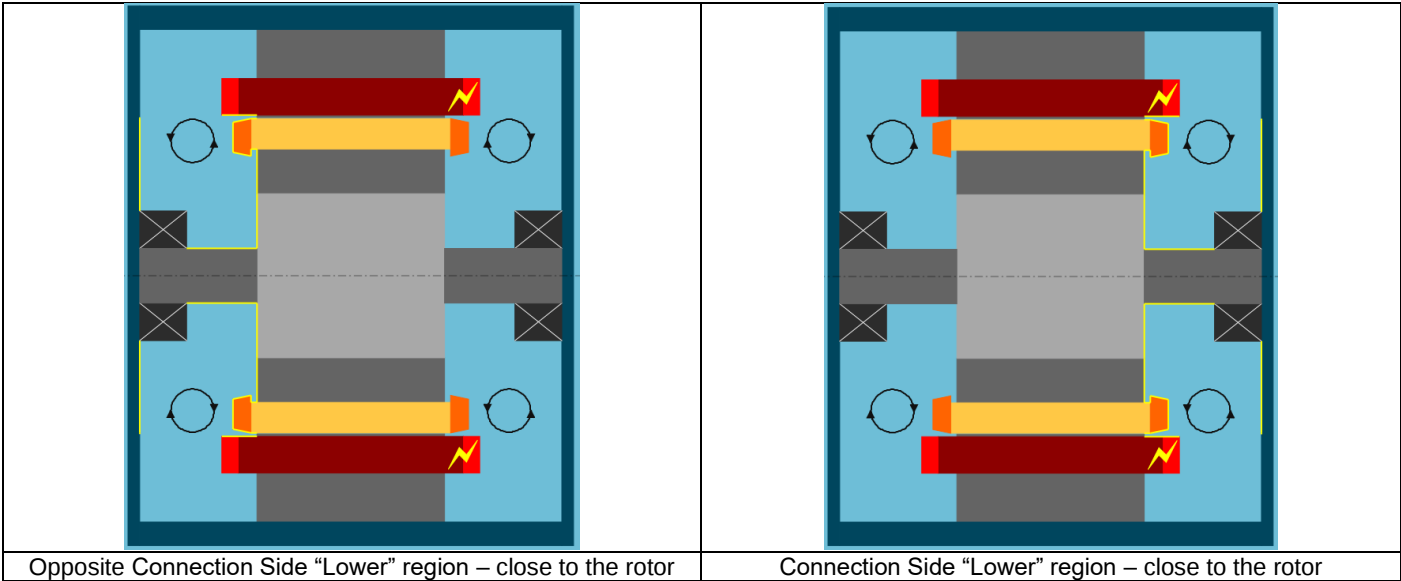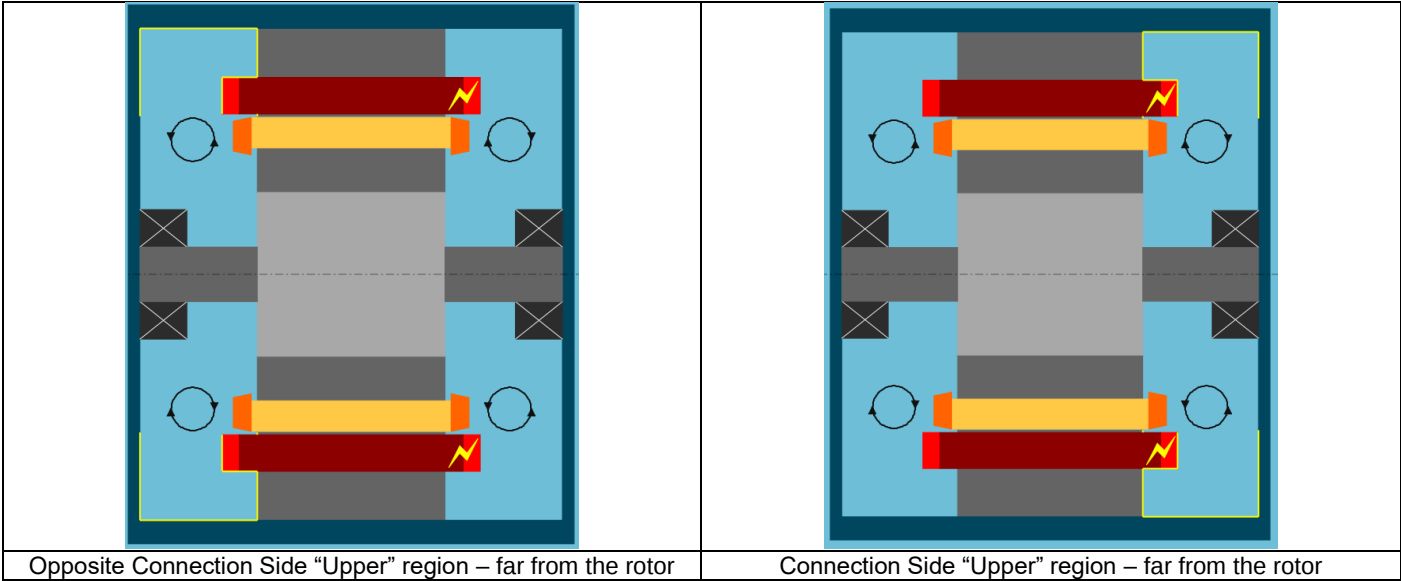

For all the four represented regions, the convection can be modeled with three different input ways:

- A tip speed ratio
- A fluid speed
- A convection coefficient


The user can select the inputs mode of each region using the dedicated arrow or clicking on the input mode to change.

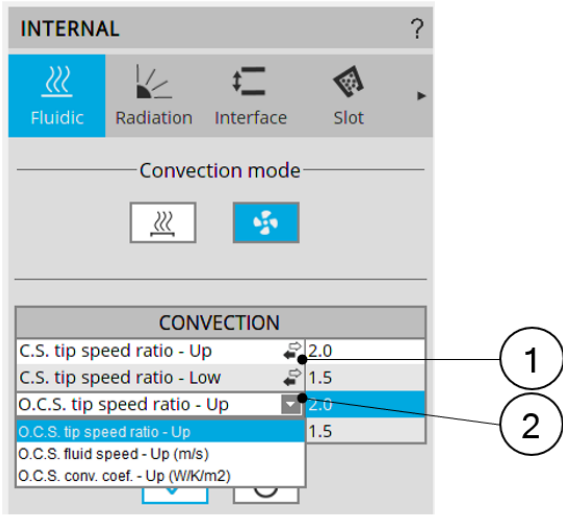

Forced convection – Selection of input modes

1	Click on the arrow, or directly on the input mode, to show the drop-down menu allowing the input mode selection
2	Drop down menu allows choosing an input mode for the dedicated convection region.

The « Tip speed ratio » input mode allows setting a fluid velocity proportional to the rotor tip speed.

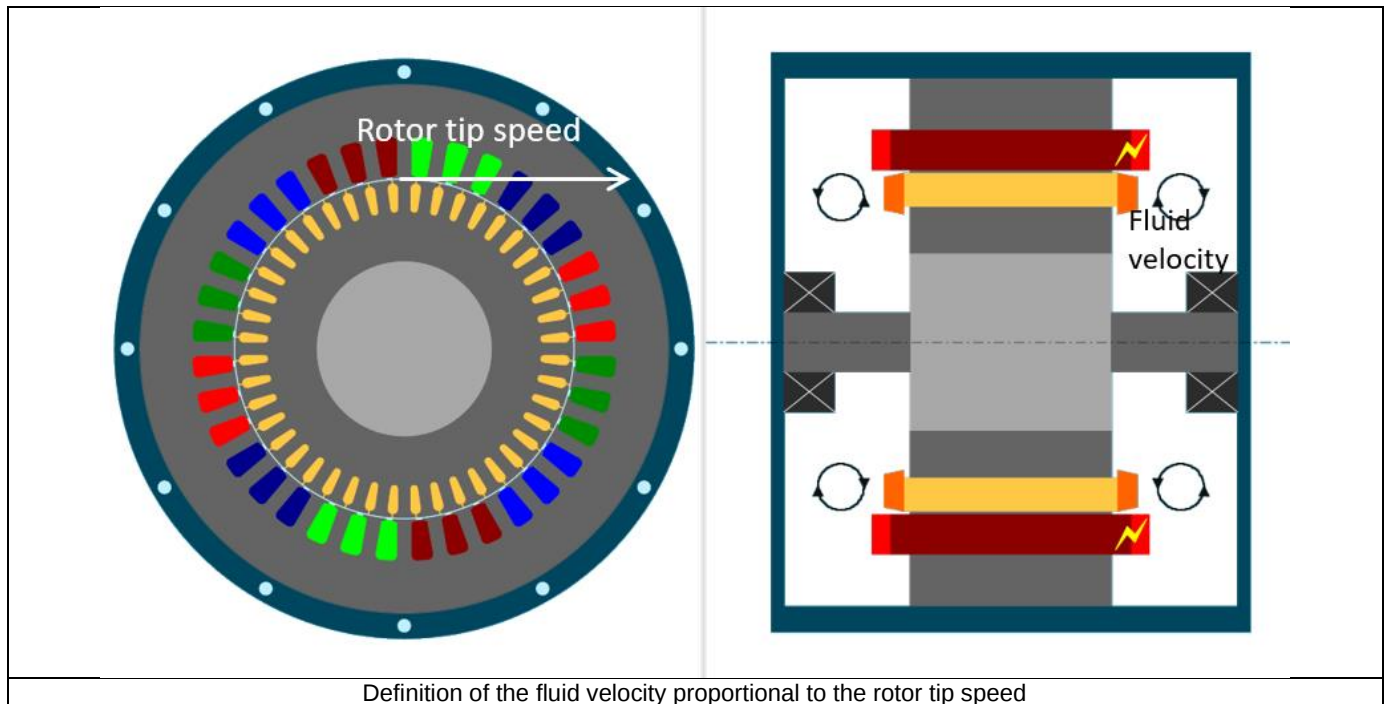

This can be used to model a shaft mounted fan, or rotor fins.

The default values of tip speed ratios are 2 for the regions far from the rotor.

A tip speed ratio of 2 for an « Upper » region (meaning a region far from the rotor) corresponds to a shaft mounted fan, or rotor fins, that blows air to this region with an average efficiency.

For « Upper » region of a side without fan or fins, it is advised to set a rotor tip speed ratio of 5. This corresponds to the FluxMotor® natural convection model.

The default value of tip speed ratio is of 1.5 for the regions close to the rotor.
In fact, for these regions, the considered fluid speed is the relative speed between the fluid velocity and the rotating parts speed, meaning that in these regions the convection is highly related to the rotation speed.

The « Constant fluid speed » input mode can be used to model a constant ventilation speed.

The «Convection coefficient » input mode allows directly forcing a convection coefficient in the corresponding region.

Notes:

- For any chosen input mode, the end spaces are considered as totally enclosed. No fluid exchange exists between the end space fluid (the « internal fluid ») and the « external fluid ».
The cooling strategy corresponding to blow an external fluid at a fixed temperature into and through the machine cannot be modeled in the current version of FluxMotor®.
- In both input modes « Tip speed ratio » and « Constant fluid speed », the fluid speed is applied to classical correlations depending on the nature of the sub region (end winding, frame, rotor part...).
In the « Convection coefficient » input mode, the same convection coefficient is applied in all sub regions (end winding, rotor end, end cap, frame...) of the regions for which the coefficient is chosen.

INTERNAL

Fluidic

Radiation

Interface

Slot

Convection mode

CONVECTION

C.S. tip speed ratio - Up	2.0	
C.S. tip speed ratio - Low	1.5	
O.C.S. tip speed ratio - Up	2.0	
O.C.S. tip speed ratio - Low	1.5	

✓

↺

1

2

3

4

5


Forced convection - Inputs	
1	Forced convection mode is selected
2	Input related to the Connection Side "Upper" region, here set as a tip speed ratio
3	Input related to the Connection Side "Lower" region, here set as a tip speed ratio
4	Input related to the Opposite Connection Side "Upper" region, here set as a tip speed ratio
5	Input related to the Opposite Connection Side "Lower" region, here set as a tip speed ratio

1.11.4 Radiation – Inputs

This panel allows describing the parameters defining the radiation phenomenon existing in the machine.

Mainly, two radiation phenomena exist in the machine:

- From the end windings, rotor and stator ends to the frame and the end caps.
- Between the rotor and the stator, in the airgap.

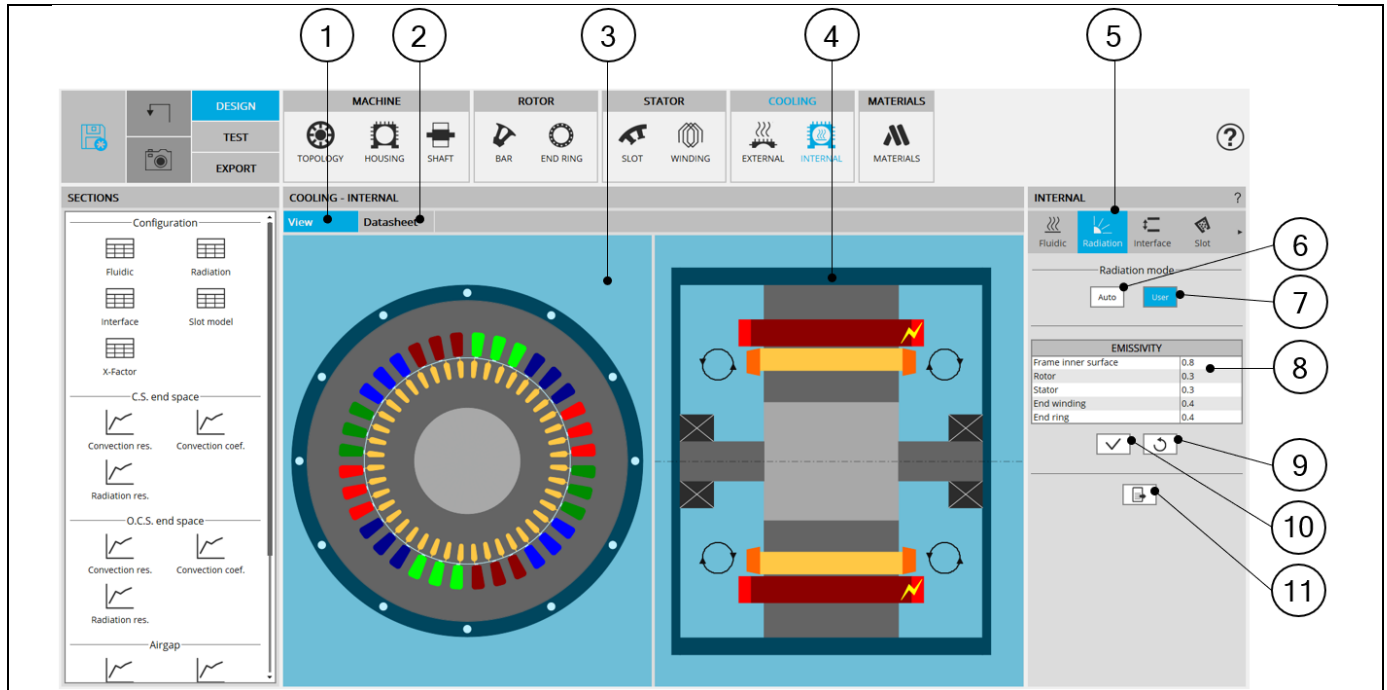

Internal cooling - Radiation design area

1	Display the axial and radial view of the machine.
2	Display the internal cooling datasheet, showing the thermal parameters defining the internal heat exchanges.
3	Radial view of the motor, where specific exchange areas can be highlighted depending on the selected input.
4	Axial view of the motor, where specific exchange areas can be highlighted depending on the selected input.
5	The section "Radiation" is selected.
6	Button to set the internal emissivity automatically by internal process
7	Selected button, to set the internal emissivities manually
8	Input related to the radiation corresponding to the selected radiation mode. In user mode, the following emissivities must be set: • The frame inner surface emissivity, with a default value of 0.8 • The rotor and stator emissivity, with a default value of 0.3. These emissivities are used for the radiation occurring in the airgap, and from the rotor end and stator end to each end space. • The end winding emissivity, with a default value of 0.4. This emissivity is applied to non-potted end-windings only. The assumption is made that the potted end-windings do not radiate any power. • The end ring emissivity, with a default value of 0.4.
9	Button to restore default input values.
10	Button to apply inputs. Pressing the enter key twice applies inputs too.
11	Icon to export internal cooling data into *.txt or *.xlsx files.

1.11.5 Interface – Inputs

This panel allows describing imperfect contacts between the different components of the machine.

The imperfect contacts are here modeled as a parasitic airgap between two parts, through which the heat must be conducted through to go from one part to the other.

The interface gaps are composed of air at the atmospheric pressure, at 20 °C, equivalent to 293.15K. For more information on material properties, please refer to FluxMotor® material database ("Materials application").

Mainly, the imperfect contacts existing in a machine are:

- Each interface/mounting of a laminated part on a solid material
 - Between the magnetic circuit and the frame
 - Between the magnetic circuit and the bar
 - Between the magnetic circuit and the shaft
- The imperfect contact between the magnetic circuit and the liner surrounding the slot.
- The imperfect contact between the frame (straight part) and the two end caps
- The bearings: An interface gap thickness is used to compute the thermal resistance of each bearing. These values of contact thickness are used in computations for both bearings (Connection Side and Opposite Connection Side).

Internal cooling - Interface design area	
1	Display the axial and radial view of the machine.
2	Display the internal cooling datasheet, showing the thermal parameters defining the internal heat exchanges.
3	Radial view of the motor, where specific exchange areas can be highlighted depending on the selected input.
4	Axial view of the motor, where specific exchange areas can be highlighted depending on the selected input.
5	The section "Interface" is selected.
6	Button to set the interface gaps automatically by internal process.
7	Selected button, to set user interface gaps.
8	Parasitic interface thicknesses corresponding to the selected interface mode. In user mode, the following thicknesses must be set: • CS end cap-frame interface thickness, with a default value of 15 micrometers. • OCS end cap-frame interface thickness, with a default value of 15 micrometers. • Magnetic circuit – frame interface thickness, with a default value of 30 micrometers. • Magnetic circuit – slot interface thickness, with a default value of 100 micrometers. This corresponds to the imperfect contact between the liner and the iron core. • Magnetic circuit – shaft interface thickness, with a default value of 15 micrometers. • Magnetic circuit – bar interface thickness, with a default value of 15 micrometers. • CS Bearings equivalent interface thickness, with a default value of 15 micrometers. • OCS Bearings equivalent interface thickness, with a default value of 15 micrometers.
9	Button to restore default input values.
10	Button to apply inputs. Pressing the enter key twice applies inputs too.
11	Icon to export internal cooling data into *.txt or *.xlsx files.


1.11.6 Slot model – Inputs

The thermal exchanges from the conductors to the stator core are complex phenomena for which FluxMotor® embeds a dedicated model.

This panel allows choosing the conduction model from the conductors to the stator core.

By default, a FluxMotor® model is proposed. This model uses the slot fill factor, the conductor shape, and the conductivities of the materials inside the slot, to compute two equivalent conductivities:

- The radial and orthoradial conductivity of the winding, used to compute thermal exchanges from the winding to the stator core.
- The axial conductivity of the winding used to compute thermal exchanges from the in-slot winding to the end windings.

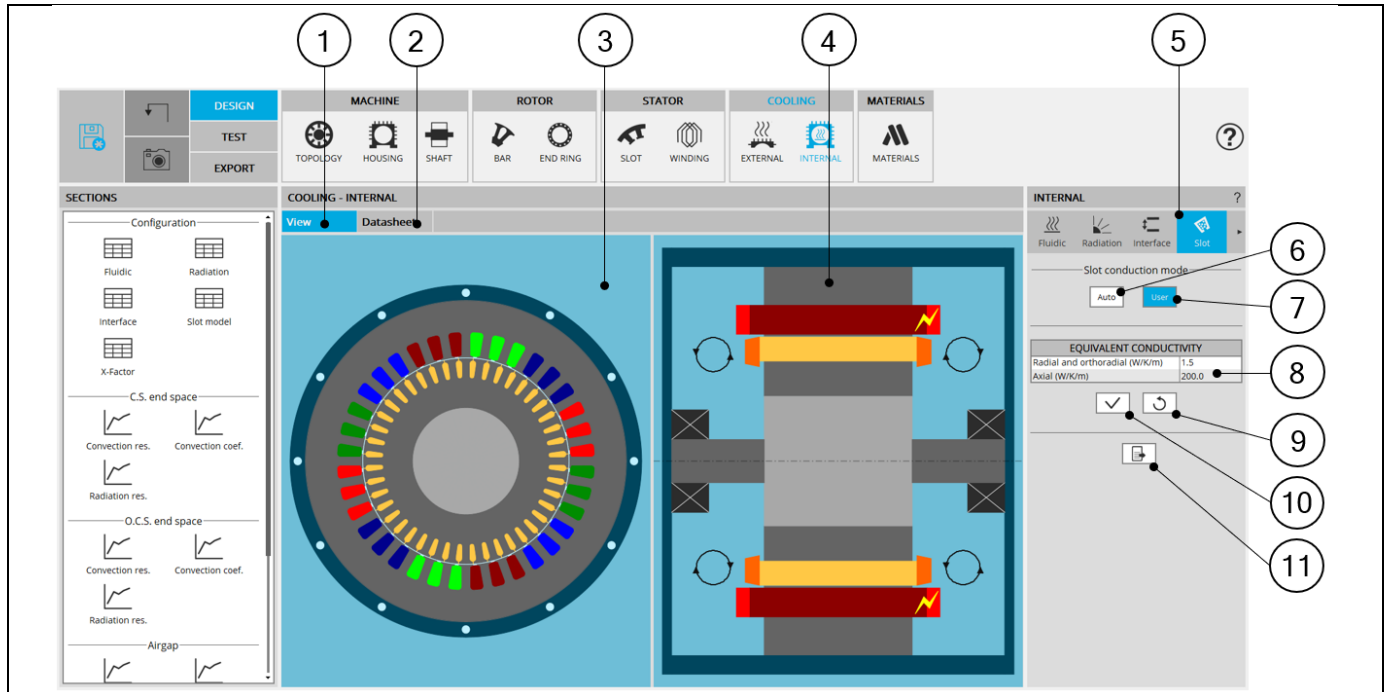

Internal cooling – slot model design area

1	Display the axial and radial view of the machine.
2	Display the internal cooling datasheet, showing the thermal parameters defining the internal heat exchanges.
3	Radial view of the motor, where specific exchange areas can be highlighted depending on the selected input.
4	Axial view of the motor, where specific exchange areas can be highlighted depending on the selected input.
5	The section "Slot model" is selected.
6	Button to set the slot conductivities automatically by internal process.
7	Selected button, to set the user slot conductivities.
8	Equivalent conductivities, to be set only when the User mode has been chosen. In user mode, the following inputs must be set: • The radial and orthoradial conductivity of the winding, used to compute thermal exchanges from the winding to the stator core. The default value is 1.5 W/ (K.m). • The axial conductivity of the winding used to compute thermal exchanges from the in-slot winding to the end windings. The default value is 200 W/ (K.m)
9	Button to restore default input values.
10	Button to apply inputs. Pressing the enter key twice applies inputs too.
11	Icon to export internal cooling data into *.txt or *.xlsx files.


1.11.7 X-Factors

The X-Factor panel allows the user to defined calibration factors to tune the thermal modeling on specific resistances.

The calibration factors set in this panel are considered in the results shown in COOLING subset, INTERNAL panel environment, and in the TEST environment.


The X-Factor panel also contains a set of parameters defining the internal cooling (coolants temperature and rotor speed) allowing the user to evaluate the thermal model embedded.

The effect on every X-Factor value can be directly seen in the outputs displayed in internal cooling panel.

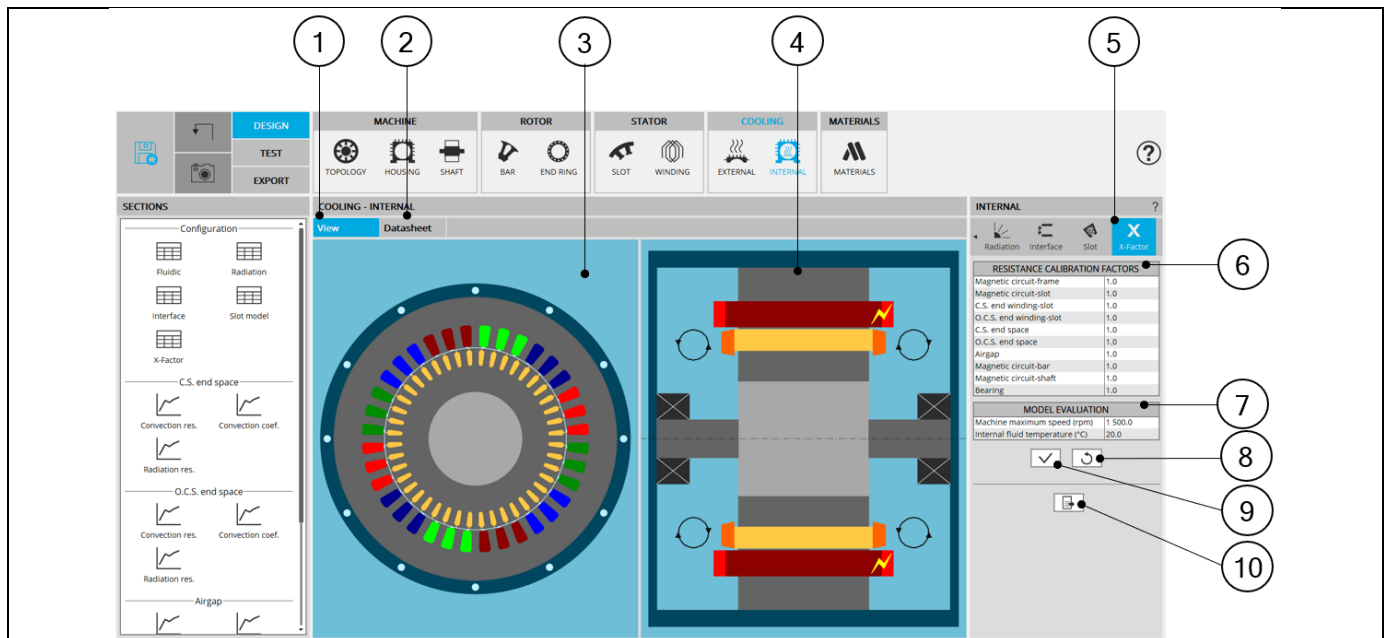

Internal cooling – X-Factor design area

1	Display the axial and radial view of the machine.
2	Display the internal cooling datasheet, showing the thermal parameters defining the internal heat exchanges.
3	Radial view of the motor, where specific exchange areas can be highlighted depending on the selected input.
4	Axial view of the motor, where specific exchange areas can be highlighted depending on the selected input.
5	The section X-Factors is selected.
6	Table of the calibration factors allowing the user to tune the thermal modeling. Each X-factor tunes a set of resistances. The mapping showing the impact of each X-factor is explained in the below dedicated section.
7	Input table used for the evaluation of the internal cooling, defining the results displayed in the internal cooling datasheet.
8	Button to restore default input values.
9	Button to apply inputs. Pressing the enter key twice applies inputs too.
10	Icon to export internal cooling data into *.txt or *.xlsx files.

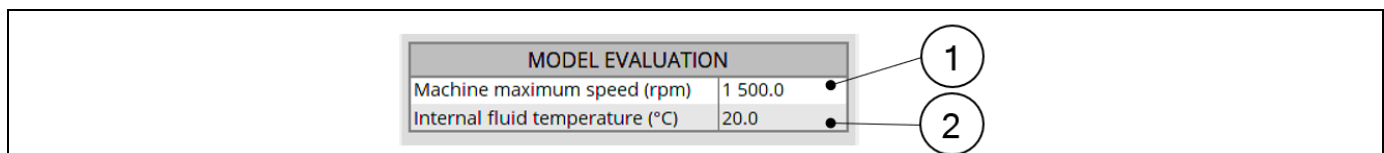

External cooling – Model evaluation input table

1	Machine maximum speed. It is the maximum rotation speed for which the convection curves will be evaluated in the internal cooling datasheet.
2	Internal fluid temperature It is the temperature used in internal cooling panel to evaluate the convection and the radiation occurring inside the machine. All the results shown in internal cooling panel used this temperature as the temperature of the internal fluid enclosed in the machine. Most of the curves shown in Internal cooling panel are plotted for a range of temperature going from this reference temperature to 150 Kelvin above it. Note: This temperature is only used for the model evaluation in the internal cooling panel. This temperature does not affect the test computations, where the internal fluid temperature is found by the non linear solving during the solving of the test.

1.11.7.1 X-factor mapping

Each X-factor impacts a specific set of resistances, among the most important thermal resistances of the thermal modeling of a machine.

RESISTANCE CALIBRATION FACTORS	
1	Magnetic circuit-frame 1.0
2	Magnetic circuit-slot 1.0
3	C.S. end winding-slot 1.0
4	O.C.S. end winding-slot 1.0
	C.S. end space 1.0
	O.C.S. end space 1.0
	Airgap 1.0
	Magnetic circuit-bar 1.0
	Magnetic circuit-shaft 1.0
	Bearing 1.0

Internal cooling – Calibration factors input table – Part 1	
1	Magnetic circuit-frame. This calibration factor tunes the total resistance between the stator yoke and the frame. This total resistance is composed of two resistances in series: - The conduction through the stator yoke until its border, computed by finite elements - The conduction through the imperfect interface between the stator magnetic circuit and the frame
2	Magnetic circuit-slot. This calibration factor tunes each of the thermal resistances linking the stator core to the winding. Each of these resistances consists of several resistances in series: - The conduction through the stator core until the slot border, computed by finite elements - The conduction through the imperfect interface between the magnetic circuit and the liner - The conduction through the slot (using the equivalent conductivity defined in the settings “Slot model” of the “Internal cooling” panel).
3	Connection Side end winding – slot. This calibration factor tunes the conduction resistance between the slots (meaning In-slot winding) to the Connection Side end winding.
4	Opposite Connection Side end winding – slot. This calibration factor tunes the conduction resistance between the slots (meaning In-slot winding) to the Opposite Connection Side end winding.

5 RESISTANCE CALIBRATION FACTORS <table border="1" style="margin: 0 auto; border-collapse: collapse;"> <tr><td>Magnetic circuit-frame</td><td>1.0</td></tr> <tr><td>Magnetic circuit-slot</td><td>1.0</td></tr> <tr><td>C.S. end winding-slot</td><td>1.0</td></tr> <tr><td>O.C.S. end winding-slot</td><td>1.0</td></tr> <tr><td>C.S. end space</td><td>1.0</td></tr> <tr><td>O.C.S. end space</td><td>1.0</td></tr> <tr><td>Airgap</td><td>1.0</td></tr> <tr><td>Magnetic circuit-bar</td><td>1.0</td></tr> <tr><td>Magnetic circuit-shaft</td><td>1.0</td></tr> <tr><td>Bearing</td><td>1.0</td></tr> </table> 6		Magnetic circuit-frame	1.0	Magnetic circuit-slot	1.0	C.S. end winding-slot	1.0	O.C.S. end winding-slot	1.0	C.S. end space	1.0	O.C.S. end space	1.0	Airgap	1.0	Magnetic circuit-bar	1.0	Magnetic circuit-shaft	1.0	Bearing	1.0
Magnetic circuit-frame	1.0																				
Magnetic circuit-slot	1.0																				
C.S. end winding-slot	1.0																				
O.C.S. end winding-slot	1.0																				
C.S. end space	1.0																				
O.C.S. end space	1.0																				
Airgap	1.0																				
Magnetic circuit-bar	1.0																				
Magnetic circuit-shaft	1.0																				
Bearing	1.0																				
Internal cooling – Calibration factors input table – Part 2																					
5	Connection Side end space. This calibration tunes all the resistances involved in thermal exchanges with or through the Connection Side end space fluid: • The thermal resistances from each part composing the stator and the rotor to the Connection Side end space fluid (each of these resistances being composed of conduction through the machine depth added to convection at the rotor and stator ends) • The convection resistance between the Connection Side end winding and the Connection Side end space fluid. • The thermal resistance between the Connection Side end space fluid and the frame and end cap surfaces on the Connection Side. • The radiation resistances from the stator end, rotor end, and end winding, to the frame and the end cap surfaces on the Connection Side.																				
6	Opposite Connection Side end space. This X-factor tunes every resistance involved in thermal exchanges with or through the Opposite Connection Side end space fluid: • The thermal resistances from each part composing the stator and the rotor to the Opposite Connection Side end space fluid (each of these resistances being composed of conduction through the machine depth added to convection at the rotor and stator end) • The convection resistance between the Opposite Connection Side end winding and the Opposite Connection Side end space fluid. • The thermal resistance between the Opposite Connection Side end space fluid and the frame and end cap surfaces on the Opposite Connection Side. • The radiation resistances from the stator end, rotor end, and end winding, to the frame and the end cap surfaces on the Opposite Connection Side.																				


RESISTANCE CALIBRATION FACTORS	
Magnetic circuit-frame	1.0
Magnetic circuit-slot	1.0
C.S. end winding-slot	1.0
O.C.S. end winding-slot	1.0
C.S. end space	1.0
O.C.S. end space	1.0
Airgap	1.0
Magnetic circuit-bar	1.0
Magnetic circuit-shaft	1.0
Bearing	1.0

Internal cooling – Calibration factors input table – Part 3	
7	Airgap. This calibration factor tunes every resistance involved in thermal exchanges with or through the airgap fluid: • The conduction through the stator yoke and slot until the airgap border, computed by finite elements • The conduction through the rotor yoke and magnets until the airgap border, computed by finite elements • The convection from the airgap border to the airgap fluid. • The radiation from every rotor component having a border along the airgap, to every stator component having a border along the airgap
8	Magnetic circuit-bar. For every existing bar, this calibration factor tunes the total resistance existing between this bar and every component of the rotor magnetic circuit around it. Each of these resistances are composed of three resistances: • The conduction through the rotor yoke until the bar border, computed by finite elements • The conduction through the imperfect interface between the rotor magnetic circuit and the considered bar. • The conduction through the bar until its border, computed by finite elements
9	Magnetic circuit-shaft. This calibration factor tunes the total resistance between the rotor yoke and the shaft. This total resistance is composed of two resistances in series: • The conduction through the rotor yoke until its border, computed by finite elements • The conduction through the imperfect interface between the rotor magnetic circuit and the shaft
10	Bearings. This calibration factor tunes the resistances existing across the Connection Side bearing and the Opposite Connection Side bearing. These resistances are the resistances computed directly from the bearing equivalent airgap thickness set by the user in INTERFACE settings.

The following picture gives an example of a simple thermal circuit, including the main resistances corresponding to the default induction machine, where a frame, a shaft and bearings have been added.

The numbers on every resistance show what X-factor impacts this resistance value.

To keep the scheme simple, the radiation resistances are not represented there.

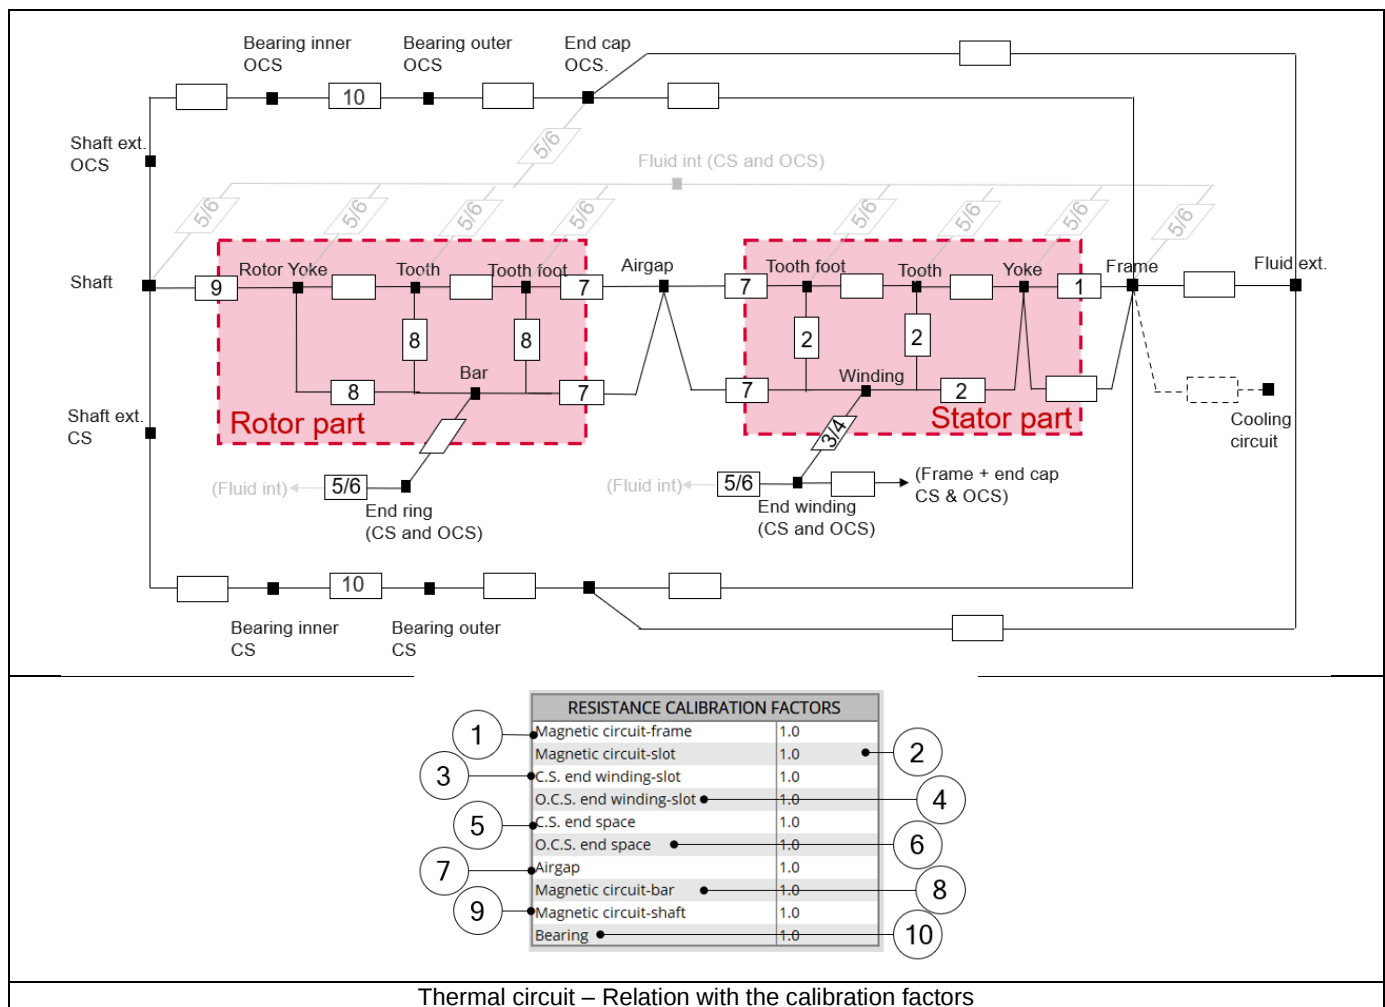

1.11.8 Internal cooling outputs

1.11.8.1 End-space

Three plots exist for each end space, showing the convection coefficients and resistances in the end space, and the radiation resistances through the end space. The result structure is the same for Connection Side and Opposite Connection Side.

1) End-space convection (Coefficient and resistance)

These curves show the convection coefficients and resistances existing for each component having an exchange surface with the considered end space:

- The frame inner surface (including the surfaces of the end cap and of the straight extension of the frame)
- The stator and rotor ends
- The end winding
- The shaft

The curves are plotted for a range of rotor speed going from zero to the maximum speed set by the user in the X-Factor settings of COOLING subset, INTERNAL panel, and for the temperature of the internal fluid specified in the X-Factor settings.

2) End space radiation

These curves show the radiation resistances existing in the considered end space:

- From the end winding to the frame. This resistance exists only when the end winding is not potted on the considered side.
- From the rotor end to the frame.

No radiation resistance is considered from the stator ends to the frame, the end winding blocking the radiations between both surfaces. These curves are plotted for active part temperatures going from the internal fluid temperature set by the user in X-Factor subset of COOLING subset, INTERNAL panel, to 150 Kelvin above this reference temperature.

1.11.8.2 Airgap

1) Airgap convection (Coefficient and resistance)

These curves give an overview of the total convection resistances existing when summing all exchange areas on the borders on the rotor side, and on the stator side. Two curves exist, showing the total convection resistance from the stator border and the airgap fluid, and from the rotor border to the airgap fluid.

The curves are plotted for a range of rotor speed going from zero to the maximum speed set by the user in the X-Factor settings of COOLING subset, INTERNAL panel, and for the temperature of the internal fluid specified in the X-Factor settings.

2) Airgap radiation

This curve shows an estimation of the overall radiation resistance between the stator and the rotor. To plot this curve, one of the borders is considered at the temperature of the internal fluid specified in the X-Factor settings, and the temperature of the hottest border take a range of temperature value from this reference temperature until 150 Kelvin above it.

1.11.8.3 Interface conduction resistances

This table shows the thermal resistances equivalent to the interface thicknesses set in the Interface settings.

Note: The resistances computed here do not consider the conduction through the material around the gaps. For instance, the resistance « magnetic circuit-frame » computed here does not take into account the conduction through the stator magnetic circuit or through the frame, but only the thermal resistance corresponding to the conduction through the parasitic thickness of air contained between the magnetic circuit and the frame.

1.11.8.4 Slot model characteristic

This table reminds to the user the slot fill factors and the thermal conductivities of the material composing the winding and the insulation, and then shows the equivalent axial and radial thermal conductivities of the slot.

The shown conductivities depend on the input mode selected by the user in Slot model settings.

In automatic mode, it is the conductivities computed by the FluxMotor® model.

In user mode, these are the conductivities set manually by the user.

The thermal resistance between the in-slot winding and each of the end windings is computed at the end of the table, based on the slot axial equivalent conductivity.


1.12 Materials

1.12.1 Overview

MATERIALS design area

1	Selection of the Material subset: MATERIALS panel (Click on the icon MATERIALS)
2	Visualization of the machine regions.
3	Direct access to open material manager. It allows seeing properties of materials.
4	Area to assign materials to machine regions (frame, shaft, bearings). See additional information below.
5	Area to assign materials to rotor regions (magnets, magnetic circuit). See additional information below.
6	Area to assign materials to Stator regions (magnetic circuit, coil conductor, insulators). See additional information below.
7	Area to assign materials to Cooling fluids (internal fluid, external fluid). See additional information below.
8	Button to restore default materials. Default materials are those defined as favorite materials in Material manager. See "Materials" application for more information.
9	Button to validate assignment of materials. Pressing the Enter key twice applies inputs too.
10	Icon to export material data into *.txt or *.xlsx files.

1.12.2 Rotor inputs / outputs

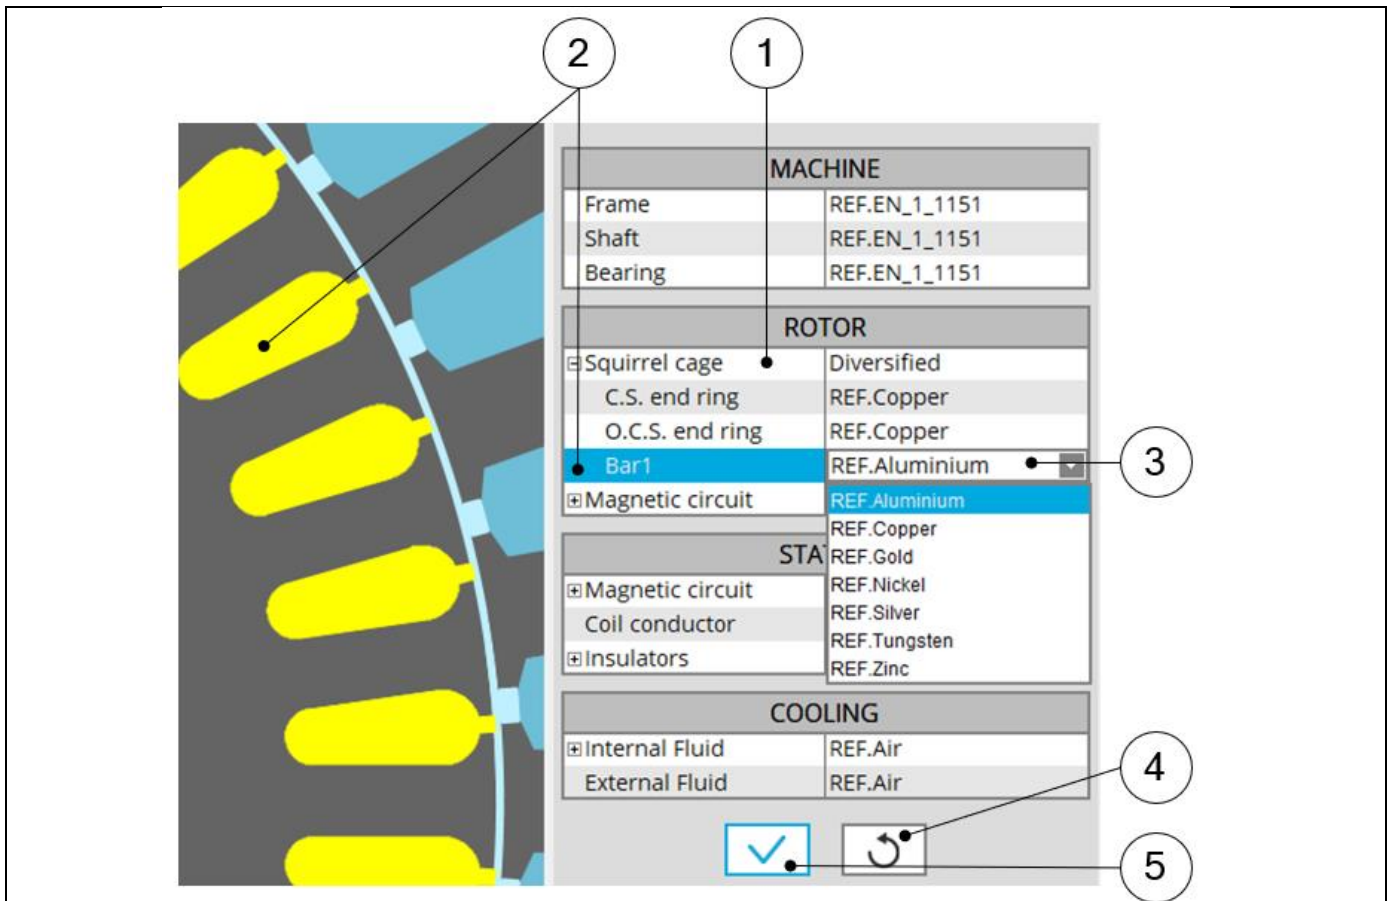

Assign BAR material to the rotor

1	Expand the section dedicated to squirrel cage. Several bar materials can be assigned to the squirrel cage. Here the cage can be composed of three materials, for the bar, and each end ring. For specific bar topology (for example double cage), each cage can have its own material.
2	By selecting a region name (Squirrel cage for example) the corresponding face(s) region(s) is (are) highlighted.
3	Expand the material list to choose a conductor material which gets assigned to the selected squirrel cage
4	Button to restore default materials. Default materials are those defined as favorite materials in Material manager. See "Materials" application for more information.
5	Button to validate assignment of materials. Pressing the Enter key twice applies inputs too.

1.12.3 How to assign materials – Example for rotor lamination

MACHINE

Frame	REF.EN_1_1151
Shaft	REF.EN_1_1151
Bearing	REF.EN_1_1151

ROTOR

⊕ Squirrel cage	Diversified
⊕ Magnetic circuit	REF.M330_35A
• Yoke	
• Tooth	
• Tooth foot	

STATOR

⊕ Magnetic circuit	REF.M330_35A
• Coil conductor	REF.Copper
⊕ Insulators	REF.Nomex_130


COOLING

⊕ Internal Fluid	REF.Air
• External Fluid	REF.Air

Assign materials to the rotor magnetic circuit

1	Expand the section dedicated to the magnetic circuit. Different materials (LAMINATION type or SOLID type) can be assigned to it.
2	The magnetic circuit can be subdivided into several parts. (yoke, tooth, tooth foot)
3	By selecting a region name (Yoke for example) the corresponding face region is highlighted.
4	Expand the material list to choose a material which gets assigned to the magnetic circuit. Only one material can be assigned to the rotor magnetic circuit. In our example it is not possible to assign different materials to sub regions like yoke and tooth.
5	Button to restore default materials. Default materials are those defined as favorite materials in Material manager. See "Materials" application for more information.
6	Button to validate assignment of materials. Pressing the enter key twice applies inputs too.

1.12.4 How to assign materials – Example for stator lamination

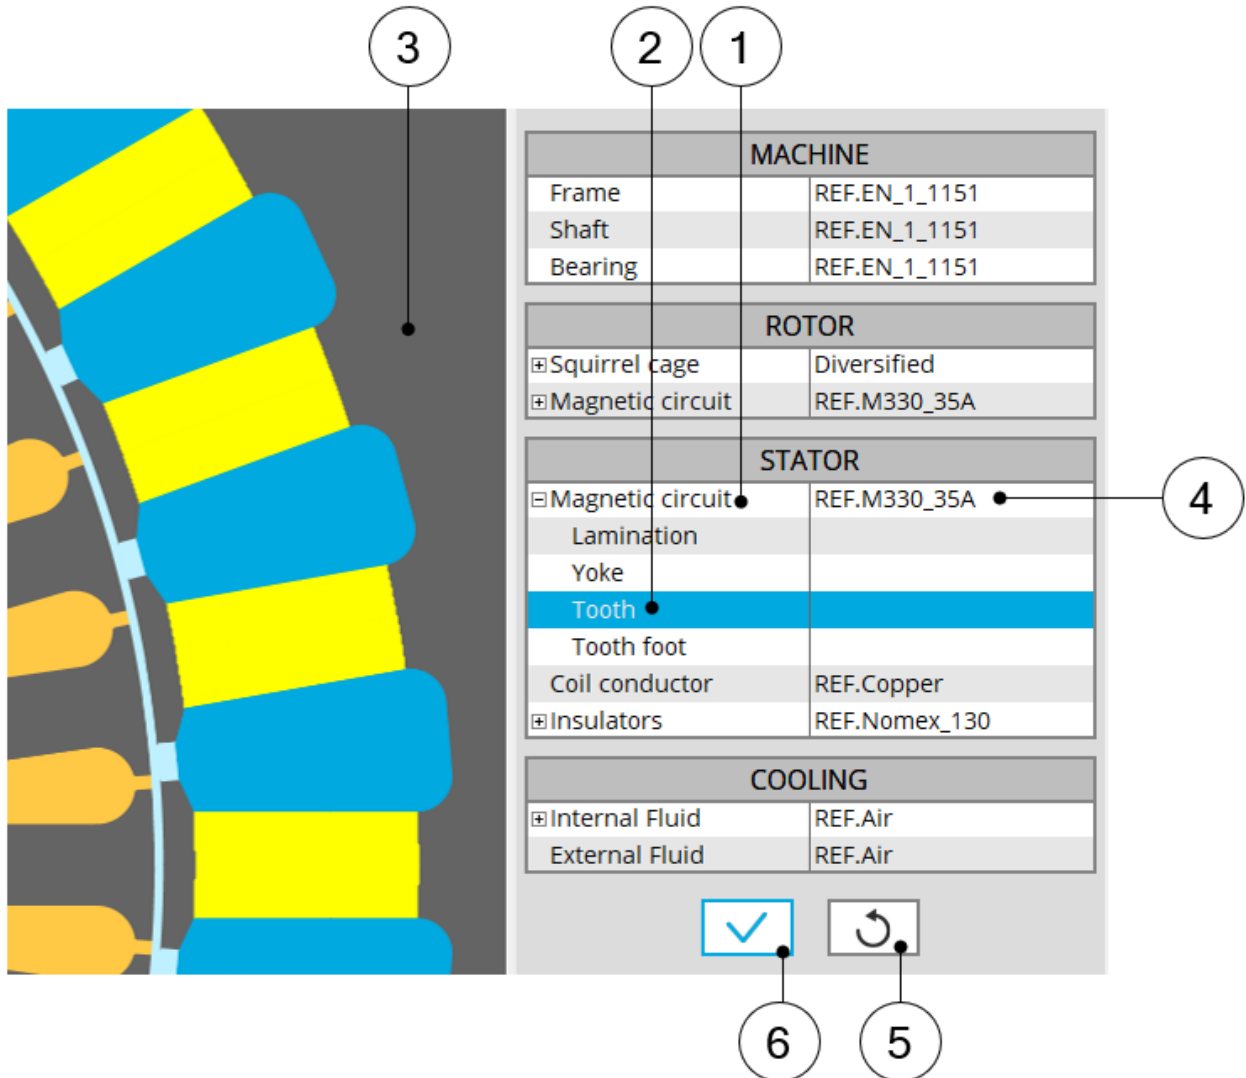

MACHINE

Frame	REF.EN_1_1151
Shaft	REF.EN_1_1151
Bearing	REF.EN_1_1151

ROTOR

⊕ Squirrel cage	Diversified
⊕ Magnetic circuit	REF.M330_35A

STATOR

⊖ Magnetic circuit	REF.M330_35A
Lamination	
Yoke	
Tooth	
Tooth foot	
Coil conductor	REF.Copper
⊕ Insulators	REF.Nomex_130

COOLING

⊕ Internal Fluid	REF.Air
External Fluid	REF.Air

Buttons: [Checkmark] [Reset]

Assign materials to the stator magnetic circuit

1	Expand the section dedicated to the magnetic circuit. Different materials (LAMINATION type or SOLID type) can be assigned to it.
2	The magnetic circuit of the stator can be subdivided into several parts (Yoke, Tooth, Tooth foot etc.).
3	By selecting a region name (Tooth for example) the corresponding face region is highlighted.
4	Expand the material list to choose a material to assign to the magnetic circuit. Only one material can be assigned to the stator magnetic circuit. In our example, it is not possible to assign different materials to sub regions like Yoke, Tooth and Tooth foot for example.
5	Button to restore default materials. Default materials are those defined as favorite materials in Material database. See "Materials" application for more information.
6	Button to validate assignment of materials. Pressing the enter key twice applies inputs too.

For more information about the rules leading to the building of parts like slots, please refer to Part Factory application.

1.12.5 Materials for the winding

All the materials are selected in the material database.

Conductor materials are selected in the “Electrical Conductor” type material family.

Insulator materials are selected in the “Electrical Insulator” type material family.

Thicknesses of insulations are defined inside the winding settings panel – COIL tab.

Insulation materials are considered only if a corresponding thickness is defined.

Building the winding architecture – Choice of winding MATERIALS - Conductor and insulation	
1	Conductor materials
2	Wire insulation
3	Conductor insulation
4	Coil insulation
5	Liner
6	Phase separator
7	Impregnation inside the slot
8	Material used for encapsulating the end-windings (potting)
9	Button to validate assignment of materials. Pressing the enter key twice applies inputs too.
10	Button to restore default materials. Default materials are those defined as favorite materials in Material database. See “Materials” application for more information.
*	Insulators: If all the above choices are same material, then the corresponding material name is written in the insulators field. Otherwise “Diversified” is written in the insulators field which means there are different materials.

1.12.6 Material datasheet

MATERIALS design area

Machine	REF.EN_1_1151	Shaft	REF.EN_1_1151	Bearing	REF.EN_1_1151
Rotor					
Squirrel cage	Diversified	Magnetic circuit	REF.M330_35A		
Rotor - Squirrel cage					
C.S. end ring	REF.Copper	O.C.S. end ring	REF.Copper	Bar1	REF.Aluminium
Stator					
Magnetic circuit	REF.M330_35A	Coil conductor	REF.Copper	Insulators	Diversified
Stator - Insulators					
Wire					
Liner	REF.Nomex_130	Conductor	REF.Nomex_130	Coil	REF.Nomex_130
Potting	REF.Epoxy	Phase separator		Impregnation	REF.Epoxy
Cooling					
Internal Fluid	REF.Air	External Fluid	REF.Air		

Masses		Rotor (kg)		Stator (kg)	
Total	37.676		9.175		28.501
Rotor					
Shaft (kg)	2.827	Squirrel cage (kg)	1.198	Magnetic circuit (kg)	4.776
Rotor - Squirrel cage					
C.S. end ring (kg)	3.645 E-1	O.C.S. end ring (kg)	3.645 E-1	Bar1 (kg)	4.691 E-1
Stator					
Magnetic circuit (kg)	9.519	Frame (kg)	14.149	Winding (kg)	4.834
Stator - Winding					
Electrical conductor (kg)	4.747	Total insulation (kg)	8.721 E-2		

Moments of inertia	

MATERIALS	
MACHINE	
Frame	REF.EN_1_1151
Shaft	REF.EN_1_1151
Bearing	REF.EN_1_1151
ROTOR	
Squirrel cage	Diversified
Magnetic circuit	REF.M330_35A
STATOR	
Magnetic circuit	REF.M330_35A
Coil conductor	REF.Copper
Insulators	Diversified
COOLING	
Internal Fluid	REF.Air
External Fluid	REF.Air

1	Selection of the STATOR subset: MATERIALS panel (Click on the icon MATERIALS)
2	Shortcuts to reach material datasheet sections
3	Material datasheet where materials, masses, moment of inertia and costs are displayed
4	Icon to export stator material data into *.txt or *.xlsx files.

2 INDUCTION MACHINES – SQUIRREL CAGE – OUTER ROTOR

2.1 Home page view

The Motor Factory – DESIGN area is the first environment of Motor Factory. It is composed of four main zones. This is the guideline to design your machine.

1

2

3

4

DESIGN

TEST

EXPORT

MACHINE

ROTOR

STATOR

MATERIALS

TOPOLOGY

SHAFT

HOUSING

BAR

END RING

SLOT

WINDING

MATERIALS

?

RADIAL VIEW


5

Zones of Motor Factory – DESIGN area view	
Zone 1 MACHINE	General data definition of the machine depending on the considered type of machine • Topology with overall dimensions, No. slots, No. poles, No. bars, • Shaft, type, and dimensions • Housing
Zone 2 ROTOR	Access this main functions to design the ROTOR and its corresponding subsets: • Bars and End-ring
Zone 3 STATOR	Access this main functions to design the STATOR and its corresponding subsets: • Slot and Winding
Zone 4 MATERIALS	Area to select all the materials needed to build the machine, rotor, and stator.
Zone 5 VIEW	Visualization of the motor radial view. The winding (automatically defined) is shown. Note: Graphic functions like export picture and zoom are available on this view by right clicking on mouse (right part of the panel). See system functions, graphic management to get more information.

2.2 Topology

2.2.1 Overview

The first step of the design consists of defining structural data of the machine. However, at any time, it is possible to reach and modify the structural data from the Motor Factory design environment. Here is the process to modify the structural data from the general data panel.

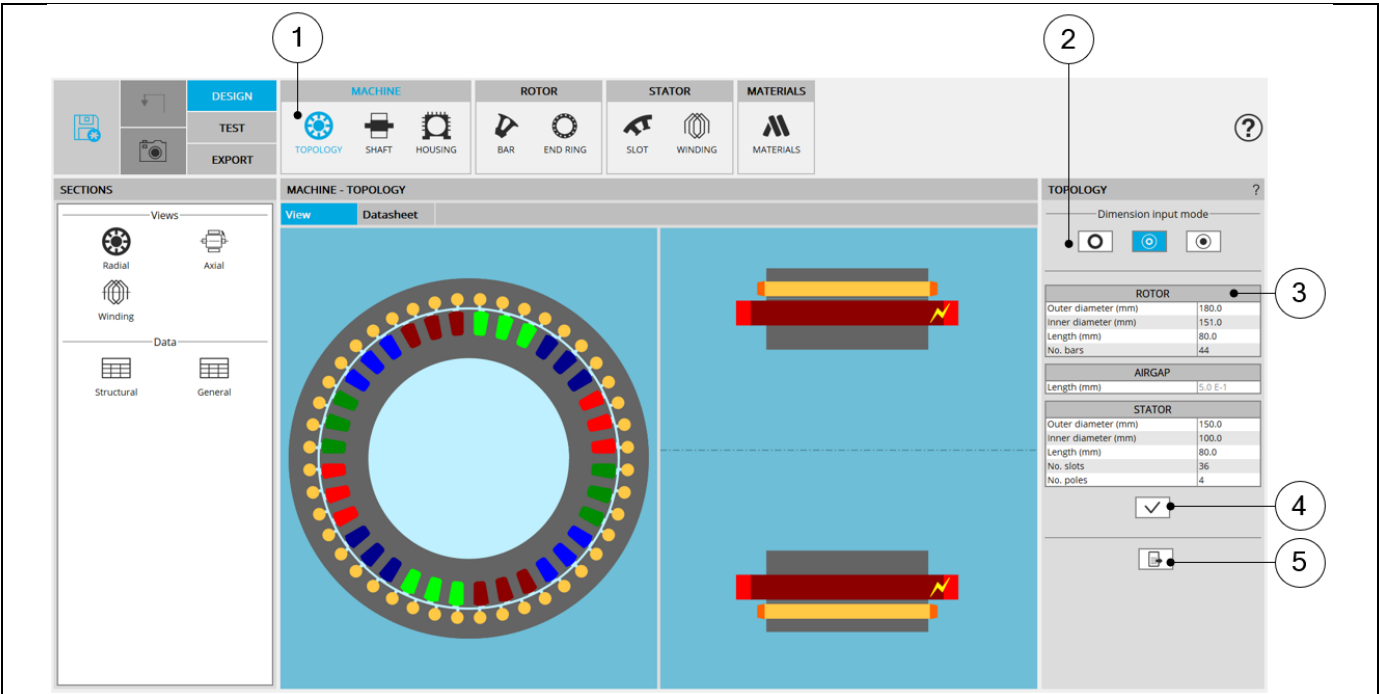

Process to reach and modify the structural data	
1	Open the TOPOLOGY panel (Click on the icon TOPOLOGY)
2	Choose a way to define the diameters of the machine and the airgap See below illustration
3	Modify the values of structural data – When relevant the corresponding arrow is displayed on the view
4	Button to apply inputs
5	Icon to export data into *.txt or *.xlsx files - Please see above illustration

For more details concerning general functions of Motor Factory Design environment, please refer to the document “MotorFactory_2022.1_Introduction”.

2.2.2 Inputs

2.2.2.1 Method to define the airgap

In the topology sub area, three ways are possible to define the structural data of the machine, with the diameters and the airgap. They are illustrated below.

TOPOLOGY ?

Dimension input mode

ROTOR	
Outer diameter (mm)	180.0
Inner diameter (mm)	151.0
Length (mm)	80.0
No. bars	30

AIRGAP	
Length (mm)	5.0 E-1

STATOR	
Outer diameter (mm)	150.0
Inner diameter (mm)	100.0
Length (mm)	80.0
No. slots	36
No. poles	4

1

TOPOLOGY ?

Dimension input mode

ROTOR	
Outer diameter (mm)	180.0
Inner diameter (mm)	151.0
Length (mm)	80.0
No. bars	30

AIRGAP	
Length (mm)	5.0 E-1

STATOR	
Outer diameter (mm)	150.0
Inner diameter (mm)	100.0
Length (mm)	80.0
No. slots	36
No. poles	4

2

TOPOLOGY ?

Dimension input mode

ROTOR	
Outer diameter (mm)	180.0
Inner diameter (mm)	151.0
Length (mm)	80.0
No. bars	30

AIRGAP	
Length (mm)	5.0 E-1

STATOR	
Outer diameter (mm)	150.0
Inner diameter (mm)	100.0
Length (mm)	80.0
No. slots	36
No. poles	4

3

Method to define the diameters of machine and the airgap

Example for a Synchronous Machine with Permanent Magnets and Outer Rotor

1	User defines the inner diameter of the stator and the airgap. The outer diameter of the rotor is automatically deduced (automatically computed value is displayed in grey color).
2	User defines the inner diameter of the stator and the outer diameter of the rotor. The airgap is automatically deduced (automatically computed value is displayed in grey color).
3	User defines the outer diameter of the rotor and the airgap. The inner diameter of the stator is automatically deduced (automatically computed value is displayed in grey color).

2.2.2.2 Structural data

Here are the user input parameters to define then structural data of the machine:

- Rotor outer diameter
- Rotor inner diameter
- Rotor length
- Number of bars
- Airgap length
- Stator outer diameter
- Stator inner diameter
- Stator length
- Number of slots
- Number of poles

The modification of the structural data can lead to the modification of the user input parameters in defining dimensions of parts like slots or bars. When modifications occur, a warning is displayed.
The application range for structural data are defined below.

Proprietary Information of Altair Engineering



2.2.3 Advice for use

The choice of diameters is possible over the range [1, 20000] mm.

The number of slots is possible over the range [3, 2400].

The number of poles is possible over the range [2, 400].

The number of bars is possible over the range [5, 500].

For more information, see the list of allowed combinations between the number of slots and the number of poles, synthesized in the section dedicated to winding.

Note: Our process for building and computations have been qualified over the following data ranges:

Range for diameters [1, 1000] mm.

Range for number of slots [3, 144].


Range for number of poles [2, 20].

Range for number of bars [5, 180].

Working beyond these limits is possible but accurate results are the responsibility of the user.

2.3 Shaft

2.3.1 Overview

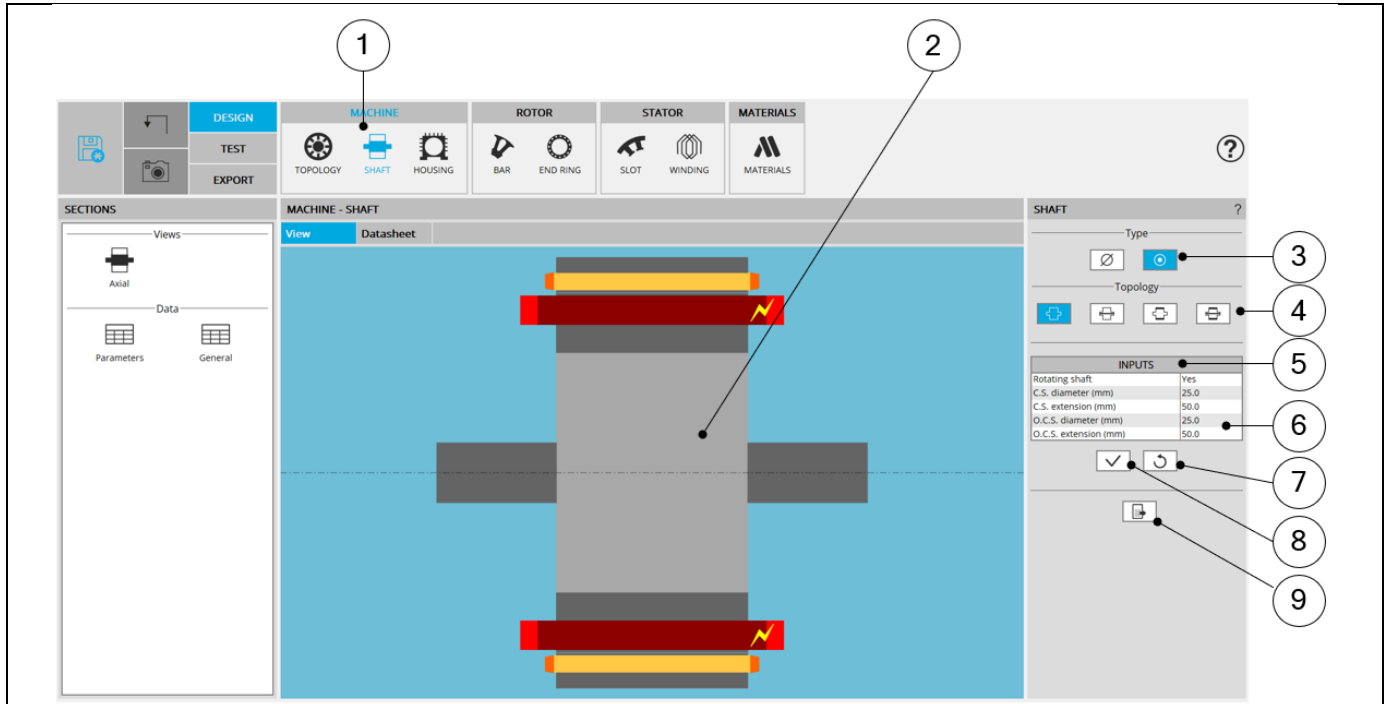


SHAFT design area

1	Selection of the MACHINE subset: SHAFT panel (Click on the icon SHAFT)
2	Visualization of the motor axial view to visualize the shaft topology and dimensions.
3	Choice of the shaft type. Two types are available: - None: No dimension to declare. Shaft is replaced by fluid material. - Solid: End-shaft must be defined. If shaft type is solid, Topology and dimensions of end-shaft must be defined. Note 1: Connection side (C.S.) is identified by yellow lightning. Note 2: Range of definition for dimensions: [0, 20000] mm.
4	Topology of the shaft must be defined: Solid, Solid with hollow, Solid with ring, Solid with hollow and ring
5	Shaft input data to be defined
6	If shaft type is solid, end-shaft must be defined. First indicate if the shaft is rotating or not Note 1: Connection side (C.S.) is identified by yellow lightning. Note 2: Range of definition for dimensions: [0, 20000] mm.
7	Button to restore default input values.
8	Button to Apply inputs. Pressing the enter key twice applies inputs too.
9	Icon to export shaft data into *.txt or *.xlsx files.

2.3.2 Shaft type


It is possible to consider a shaft or not:

- Type = None: No shaft represented in the rotor design. It is replaced by a fluid (like air).
- Type = Solid: 4 different topologies of shaft can be considered in the rotor design. It is built with a solid material or laminations. The four topologies are described below.

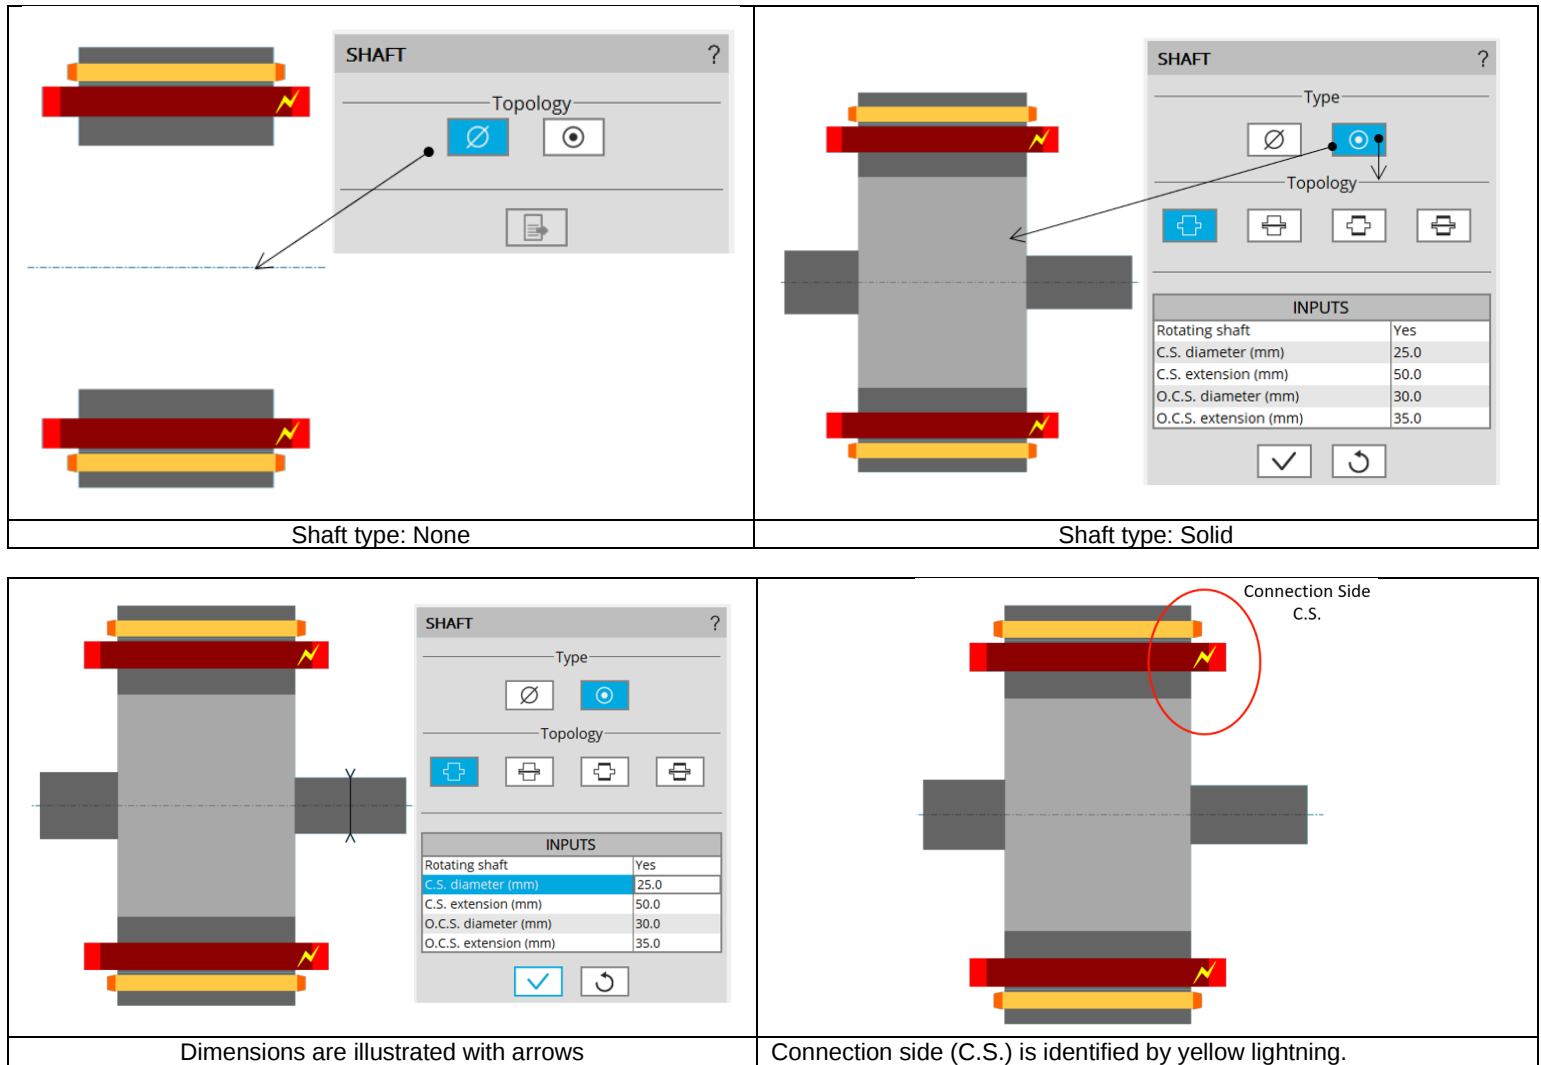

2.3.3 Shaft topology

Four different topologies of shaft can be considered in the rotor design. They are illustrated below.

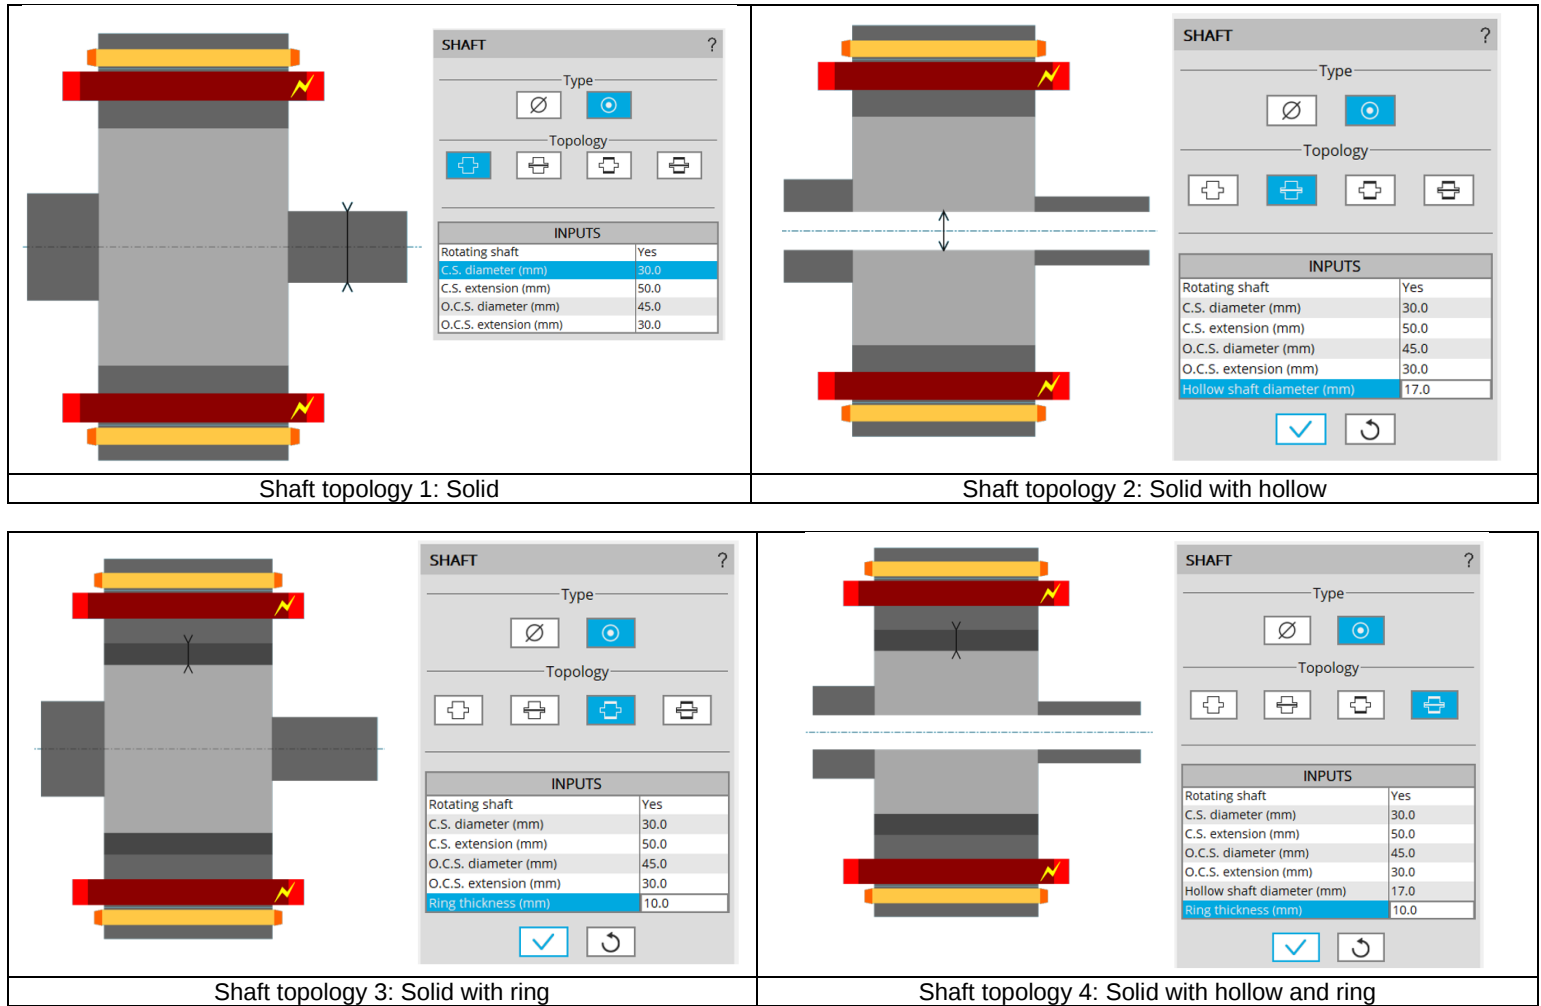

2.3.4 Inputs

Solid shaft inputs:

Label	Symbol	Tooltip, note, formula
Rotating shaft	ROT	Yes / No
C.S. diameter	D1	Connection side end-shaft diameter.
C.S. extension	L1	Connection side end-shaft extension.
O.C.S. diameter	D2	Opposite connection side end-shaft diameter.
O.C.S. extension	L2	Opposite connection side end-shaft extension.

Solid shaft with hollow inputs:

Label	Symbol	Tooltip, note, formula
Rotating shaft	ROT	Yes / No
C.S. diameter	D1	Connection side end-shaft diameter.
C.S. extension	L1	Connection side end-shaft extension.
O.C.S. diameter	D2	Opposite connection side end-shaft diameter.
O.C.S. extension	L2	Opposite connection side end-shaft extension.
Hollow shaft diameter	D0	Inner diameter of hollow shaft

Solid shaft with ring inputs:

Label	Symbol	Tooltip, note, formula
Rotating shaft	ROT	Yes / No
C.S. diameter	D1	Connection side end-shaft diameter.
C.S. extension	L1	Connection side end-shaft extension.
O.C.S. diameter	D2	Opposite connection side end-shaft diameter.
O.C.S. extension	L2	Opposite connection side end-shaft extension.
Ring thickness	THR	Ring thickness

Solid shaft with hollow and ring inputs:

Label	Symbol	Tooltip, note, formula
Rotating shaft	ROT	Yes / No
C.S. diameter	D1	Connection side end-shaft diameter.
C.S. extension	L1	Connection side end-shaft extension.
O.C.S. diameter	D2	Opposite connection side end-shaft diameter.
O.C.S. extension	L2	Opposite connection side end-shaft extension.
Hollow shaft diameter	D0	Inner diameter of hollow shaft
Ring thickness	THR	Ring thickness

2.3.5 Display Fix and rotating parts

SHAFT design area – Displaying of parts of the motor

1	The shaft is rotating or not
2	A right click of the mouse opens a dialog box allowing to display all parts or either Rotating parts or Fixed parts
3	The parts are displayed considering the previous choice

2.4 Housing

2.4.1 Overview

HOUSING design area	
1	Selection of the MACHINE subset: HOUSING panel (Click on the icon HOUSING)
2	Radial view of the motor
3	Axial view of the motor
4	Selected button to set a circular shape frame.
5	Default setting : Housing type is « None » The machine has no frame.
6	Icon to export frame data into *.txt or *.xlsx files.

2.4.2 Frame design area

The screenshot shows the 'MACHINE - FRAME' design area. On the left, there are two views: a radial view (1) and an axial view (2). On the right, there is a 'HOUSING' panel (3) with a 'Type' selector (5) and an 'Apply' button (6). Below the 'HOUSING' panel, there is an 'INPUTS' table (4) with parameters for Thickness (mm), C.S. extension (mm), C.S. thickness (mm), O.C.S. extension (mm), and O.C.S. thickness (mm). At the bottom of the panel, there is an 'Export' icon (7).

Circular shape frame design area	
1	Radial view of the motor, including the housing topology and dimensions.
2	Axial view of the motor, including the housing topology and dimensions.
3	Selected button to consider a frame or not.
4	User input parameters to define the frame dimensions. For more information see below.
5	Button to restore default input values.
6	Button to apply inputs. Pressing the enter key twice applies inputs too.
7	Icon to export frame data into *.txt or *.xlsx files.


The diagram shows the axial view of the motor frame with dimensions labeled 1 through 6. 1 is the frame thickness, 2 is the connection side (C.S.) identified by a yellow lightning bolt, 3 is the connection side extension, 4 is the connection side - End-plate thickness, 5 is the opposite connection side extension, and 6 is the opposite connection side - End-plate thickness.

1	Thickness of the frame. Allowed range of values [0, 50] mm.
2	Connection side (C.S.) is identified by yellow lightning.
3	Connection side extension. Allowed range of values [0, 20000] mm.
4	Connection side – End-plate thickness. Allowed range of values [0, 50] mm.
5	Opposite connection side extension. Allowed range of values [0, 20000] mm.
6	Opposite connection side – End-plate thickness. Allowed range of values [0, 50] mm.

User input parameters to define frame dimensions in the axial view

2.5 Bar

2.5.1 Overview

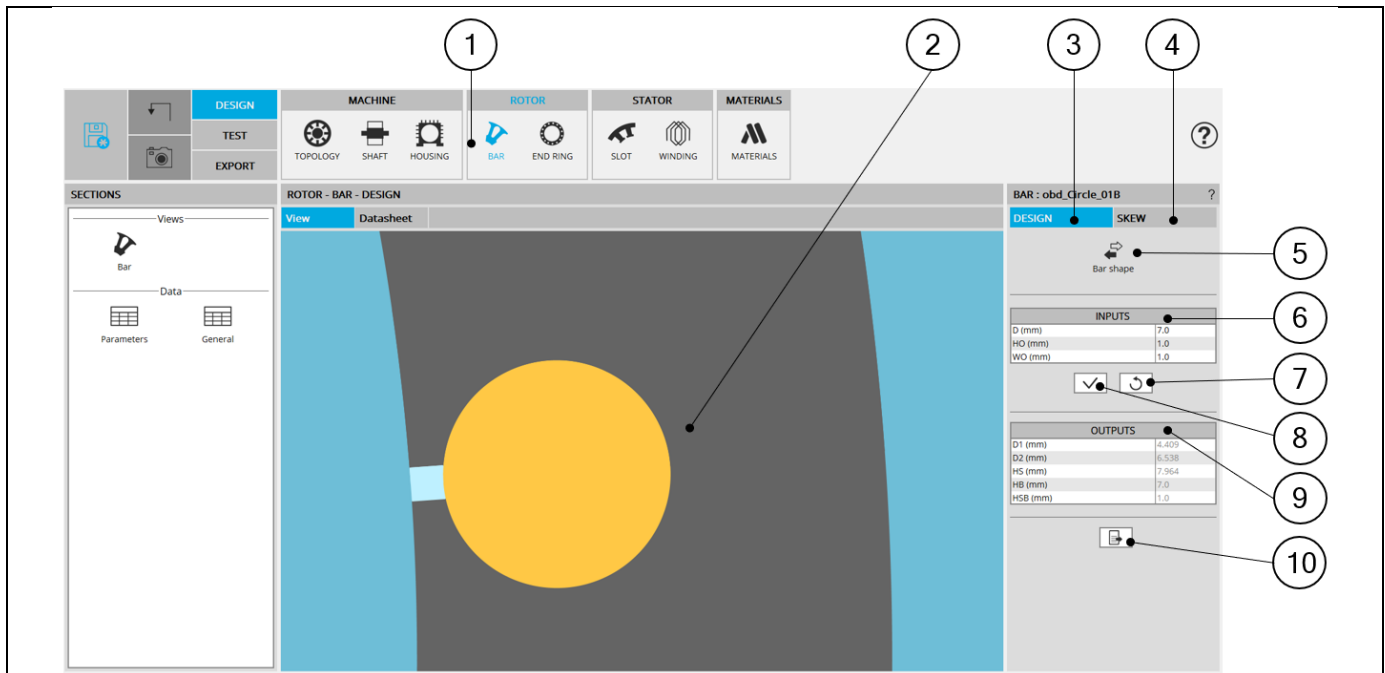


BAR – DESIGN - design area

1	Selection of the ROTOR subset: BAR panel (Click on the icon BAR)
2	Visualization of the motor radial view with the bar topology and dimensions.
3	DESIGN tab indicates the tools to define the bar topology and parameter values Note: By default, DESIGN tab is selected
4	SKEW tab indicates the tools to define the bar skew angle
5	"Bar shape" button allows accessing to the bar libraries to change the bar topology. See additional information below.
6	User input parameter fields to enter the values.
7	Button to restore default input values.
8	Button to apply inputs. Pressing the "enter key" twice applies inputs too.
9	Output parameters (read only data) to complete the description of the topology.
10	Icon to export bar data into *.txt or *.xlsx files.

2.5.2 Bar design

2.5.2.1 Choose a bar topology


Clicking on the "Bar shape" button opens a dialog box, allowing to access to the bar libraries. It allows visualizing, comparing, choosing and importing another bar topology to modify the current rotor design.

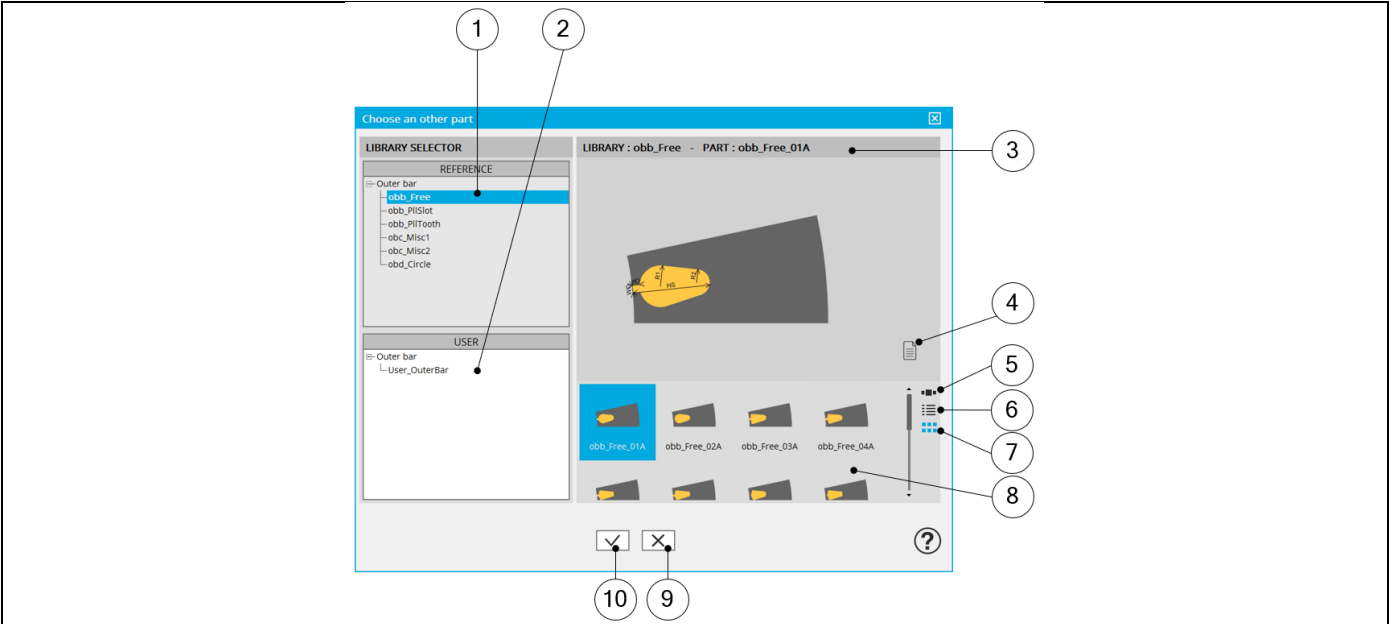

How to choose another bar topology?

1	Visualization of reference libraries i.e. the libraries of bar topologies provided with FluxMotor®. Select them to view their content and choose the bar among their content. See “Part Library” application for more information.
2	Visualization of user libraries. The default user library is “User_OuterBar”. See “Part Library” application for more information.
3	Area where the selected bar is displayed (static picture) – Topology + dimension labels.
4	Button to visualize the list of documents attached to the part. See additional information below.
5	Button to display thumbnails as a slide show.
6	Button to display thumbnails as a list.
7	Button to display thumbnails as a matrix view of pictures.
8	Area to visualize all the topologies of bars from the selected library (ref. 1).
9	Button to close the dialog box and come back to Motor Factory – DESIGN – Bar area.
10	Button to choose and import the selected bar to modify the current rotor design.


2.5.2.2 Attached documents – Additional information

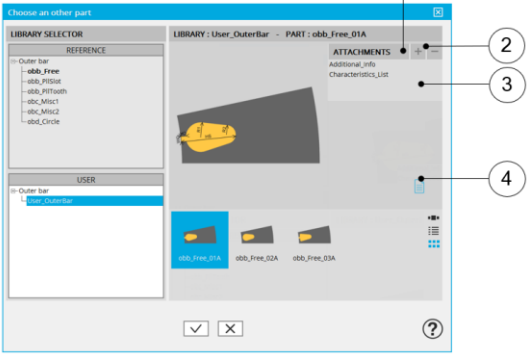	1	List of attached documents after having clicked on button to display it (4).
	2	“+” or “-“ non-active buttons from “Motor Factory” See “Part Library” application for more information.
	3	List of attached documents (if it exists) A double click on the selected document opens it. Documents can be added only from Part Library application. See “Part Library” application for more information.
	4	Button to show or to hide the attached document list.

Visualization of attached documents

2.5.2.3 Inputs / outputs


Specific inputs and outputs are considered for the bar topology.
The relevance of input parameter values can be evaluated by using “Part Factory” application.
See “Part Factory” application for more information.
Outputs are read only data. They complete the description of the topology.

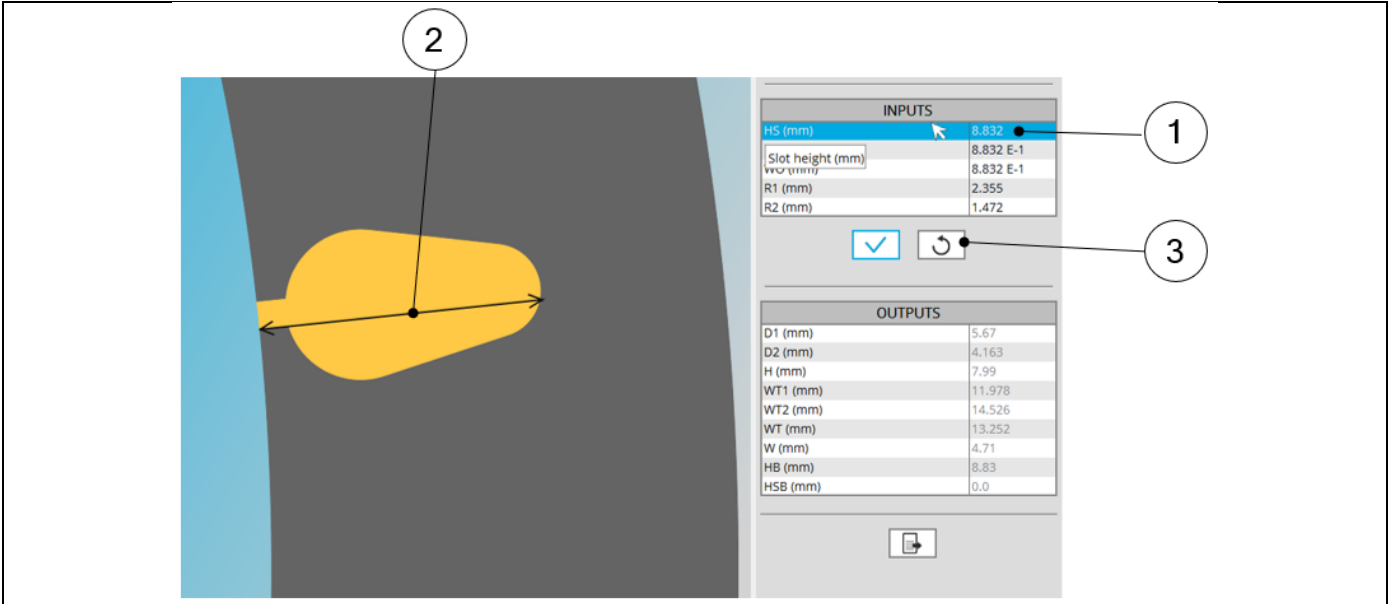

Inputs / Outputs of a bar	
1	Selection of a parameter label highlights it.
2	Selection of a parameter label displays the corresponding arrow on the picture.
3	Selection of a parameter label displays the corresponding tooltip which completes information about the parameter.

2.5.3 Bar – Skew


2.5.3.1 Overview

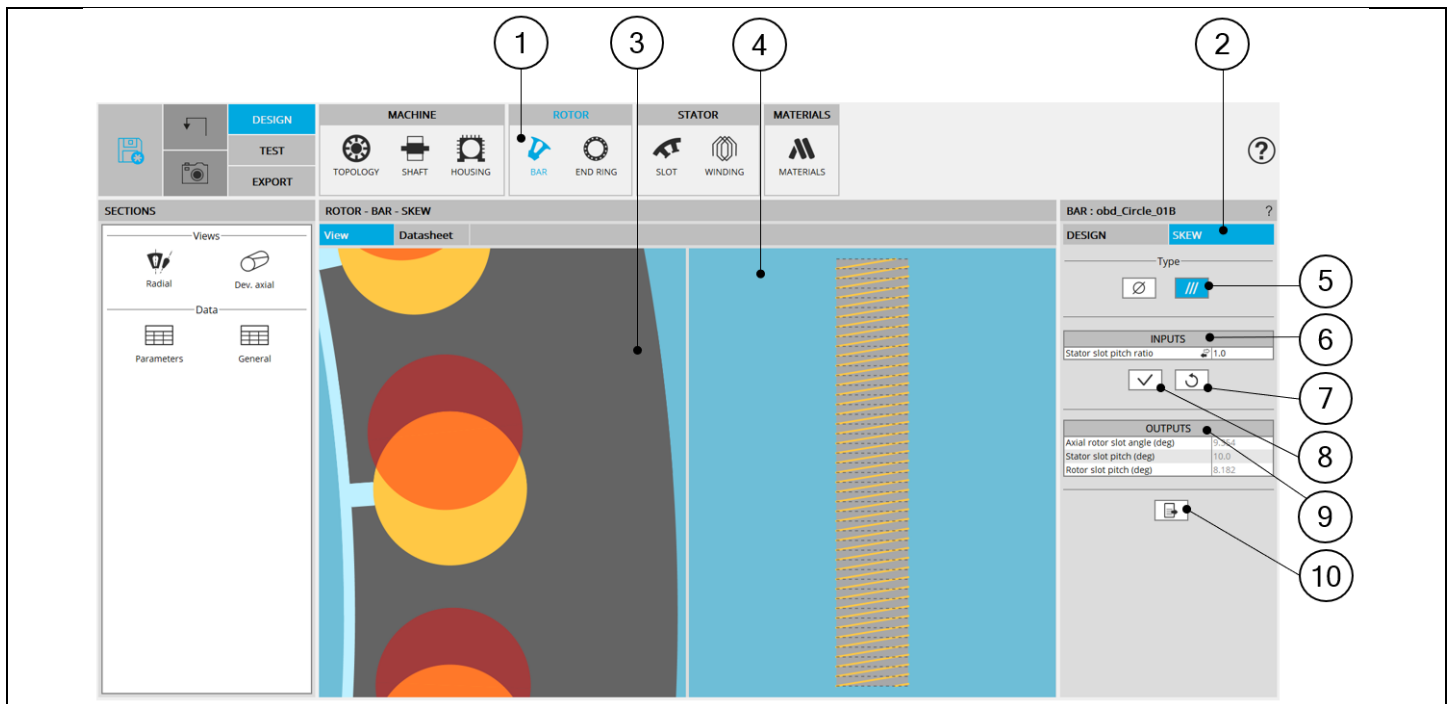

BAR – SKEW design area

1	Selection of the ROTOR subset: BAR panel (Click on the icon BAR)
2	SKEW tab indicates the tools to define the bar skew angle
3	Visualization of the motor radial view with bar topology and dimensions.
4	Visualization of the rotor developed view to visualize the bar skew
5	Choices to define a skew: None – Continuous (Continuous in our example)
6	Skew inputs to be defined
7	Buttons to restore the default input values (Pressing the “enter key” twice applies inputs too).
8	Buttons to validate the inputs (Pressing the “enter key” twice applies inputs too).
9	Skew outputs (read only)
10	Button to export the skew data into a text file

2.5.3.2 Set a skew angle

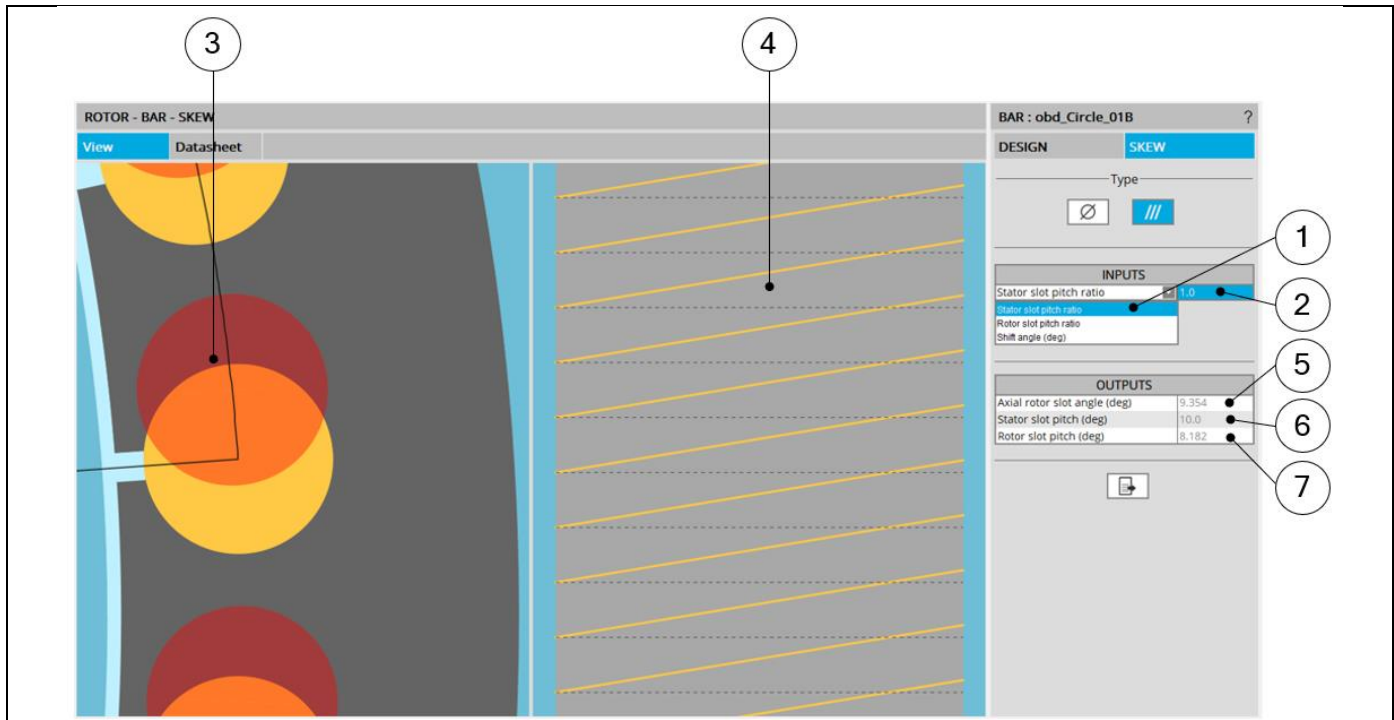


How to set a skew angle?

1	Choose the definition mode of the skew: Stator slot – Rotor slot – Shift angle
2	Definition of the skew angle depending on the definition mode
3	Visualization of the chosen skew angle on the machine radial view
4	Visualization of the equivalent axial slot angle on the rotor developed view
5	Equivalent axial rotor slot angle (read only)
6	Equivalent stator slot pitch (read only)
7	Equivalent rotor slot pitch (read only)

Note: The user can add a skew angle on the rotor or on the stator. If a skew is already defined in the stator when setting a skew on the rotor, the stator skewing will be automatically reset to “None”.


2.6 End ring

2.6.1 Overview

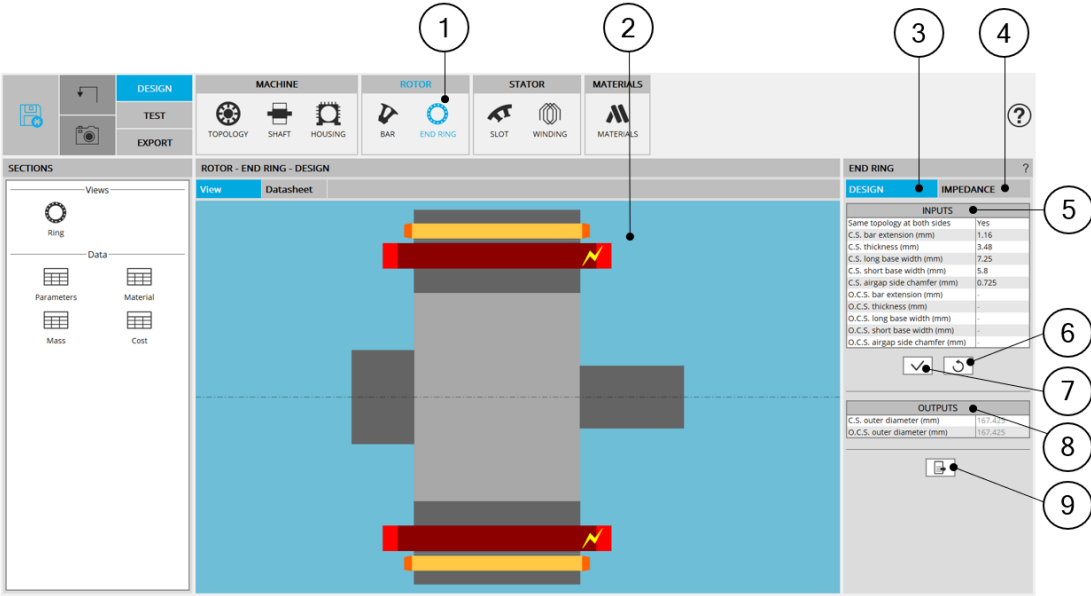

END RING – DESIGN - design area	
1	Selection of the ROTOR subset: END RING panel (Click on the icon END RING)
2	Visualization of the axial view of the machine
3	DESIGN tab indicates the tools to define the end ring topology and parameter values Note: By default, DESIGN tab is selected
4	IMPEDANCE tab indicates the tools to define the end ring impedance and check the impedances obtained for various slips, frequencies and temperatures.
5	End ring inputs to be defined
6	Buttons to restore default input values. See “Part Factory” application for more information.
7	Buttons to apply inputs (Pressing the “enter key” twice applies inputs too).
8	End ring outputs (read only)
9	Icon to export end ring data into *.txt or *.xlsx files.

2.6.1.1 Inputs / Outputs

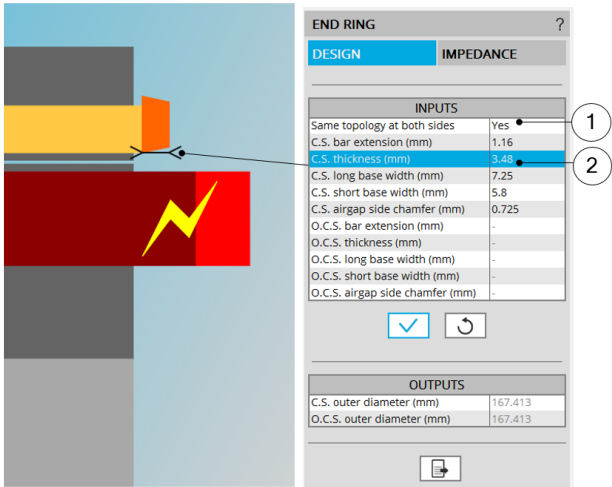

How to set inputs/outputs end ring values?	
1	Selected to choose same end ring topologies on both sides
2	Definition of each end ring geometrical input, with the corresponding arrow on the axial view of the machine

2.6.2 End ring – Inter bar impedance

2.6.2.1 Overview

The aim of this section is to compute the inter bar impedance of the squirrel cage.

The screenshot displays the 'END RING - IMPEDANCE' configuration window. The interface includes a left sidebar with 'SECTIONS' (Configuration, Main results, Curves) and a top navigation bar with 'MACHINE', 'ROTOR', 'STATOR', and 'MATERIALS' tabs. The central 'Datasheet' area contains tables for 'Impedance data', 'Working point data', 'Setting data', and 'Material electrical resistivity data'. The right panel shows 'END RING' settings, including 'X-Factor', 'Computation mode' (Constant, Automatic), 'IMPEDANCE CHARACTERISTICS' table, 'WORKING POINT EVALUATION' table, and 'Validate'/'Reset' buttons. Numbered callouts 1-9 identify key UI elements for navigation and data entry.

END RING - IMPEDANCE area

1	Shortcut panels to navigate in the impedance results
2	Main window for results
3	Button to open calibration factor window
4	Automatic computation mode
5	Constant computation mode
6	Impedance characteristics to be defined
7	Working point evaluation to be defined (optional)
8	Buttons to validate input values or reset default input parameter values (Pressing the "enter key" twice applies inputs too).
9	Icon to export end ring impedance data into *.txt or *.xlsx files.

2.6.2.2 Calibration factors

The calibration factors (X-factors) are user coefficients to tune the inter bar end ring resistances and inductances.

Edit calibration factors

X FACTOR

CALIBRATION FACTORS

End ring resistance factor	1.0
End ring inductance factor	1.0

✓

X

?

1

2

3

END RING - IMPEDANCE area – X-factor window

1	Calibration factors to be defined
2	Button to validate the calibration factor of the table and back to the Motor Factory – BAR – IMPEDANCE context
3	Button to cancel the calibration factor window and back to the Motor Factory – BAR – IMPEDANCE context

Proprietary Information of Altair Engineering

 **ALTAIR**

2.6.2.3 Automatic computation mode

When automatic computation mode is set, inter bar end-ring impedances are computed by internal processes, being a function of the slip (or speed), the temperature at the end ring (at Connection Side and Opposite Connection Side), and the material of the end ring.

END RING

?

DESIGN

IMPEDANCE

X

X-Factor

Computation mode

IMPEDANCE CHARACTERISTICS

C.S. ref. temperature (°C)

20.0

O.C.S. ref. temperature (°C)

20.0

Bar ref. temperature (°C)

20.0

WORKING POINT EVALUATION

Power supply frequency (Hz)

50.0

Definition mode

Slip

Slip (%)

5.0

Speed (rpm)

-

✓

↺

1

2

3

END RING – Automatic computation mode

1	Automatic computation mode selection
2	Impedance characteristic to be defined for which the impedances will be computed (optional)
3	Working point evaluation to be defined for which the impedances will be computed (optional)

2.6.2.4 Constant computation mode

When constant computation mode is set, the inter-bar end-ring resistance and inductance values must be set by the user. The values are given for a reference temperature. In this case the inter bar end ring resistances and inductances are only a function of the temperature (function depending on the material of the end-ring).

END RING

?

DESIGN

IMPEDANCE

X

X-Factor

Computation mode

IMPEDANCE CHARACTERISTICS

C.S. ref. temperature (°C)

20.0

C.S. interbar resistance (Ω)

0.001

C.S. interbar inductance (H)

1.0 E-9

O.C.S. ref. temperature (°C)

20.0

O.C.S. interbar resistance (Ω)

0.001

O.C.S. interbar inductance (H)

1.0 E-9

Bar ref. temperature (°C)

20.0

WORKING POINT EVALUATION

Power supply frequency (Hz)

50.0

Definition mode

Slip

Slip (%)

5.0

Speed (rpm)

-

✓

↺

1

2

3

END RING – Constant computation mode

1	Automatic computation mode selection
2	Impedance characteristic to be defined
3	Working point evaluation for which the impedances will be computed (optional)

Proprietary Information of Altair Engineering



2.6.2.5 Working point evaluation

The inter bar end ring impedances must be defined for a working point.

A table allows the user to describe a working point, defined by a frequency and a slip (or by the machine rotating speed).

Note: For constant computation mode, the inter bar impedance are not depending on the frequency, neither on the slip (or speed). Therefore, the working point evaluation will give the same results in this mode, for any frequency and slip.

2.6.2.6 Main results

The main results given in the central window are the following

Impedance data					
Impedance characteristics					
Computation mode	Automatic	Bar ref. temperature (°C)	20.0		
C.S. ref. temperature (°C)	20.0	O.C.S. ref. temperature (°C)	20.0		

Impedance data: Contains all the inputs defined in the table "IMPEDANCE CHARACTERISTICS"

Working point data					
Working point evaluation					
Power supply frequency (Hz)	50.0	Synchronous speed (rpm)	1 500.0		
Definition mode	Slip	Slip (%)	5.0	Speed (rpm)	1 425.0

Working point data: Contains all the inputs defined in the table "WORKING POINT EVALUATION"

Setting data					
Calibration factors					
End ring resistance factor	1.0	End ring inductance factor	1.0		

Setting data: Contains all the settings defined in the setting table "CALIBRATION FACTORS"

Material electrical resistivity data					
Electrical resistivity at 20°C					
C.S. end ring (Ω.m)	1.724 E-8	O.C.S. end ring (Ω.m)	1.724 E-8		
Bar1 (Ω.m)	1.724 E-8				
Electrical resistivity at ref. temp.					
C.S. ref. temperature (°C)	20.0	O.C.S. ref. temperature (°C)	20.0		
C.S. end ring (Ω.m)	1.724 E-8	O.C.S. end ring (Ω.m)	1.724 E-8		
Bar ref. temperature (°C)	20.0				
Bar1 (Ω.m)	1.724 E-8				
Elec. corrected resistivity at 20°C					
Bar1 (Ω.m)	1.834 E-8				
Elec. corrected resistivity at ref. temp.					
Bar ref. temperature (°C)	20.0				
Bar1 (Ω.m)	1.834 E-8				

Material electrical resistivity data: contains the electrical resistivity of bars and end rings

Note: in the table "Material electrical resistivity data", the "corrected" resistivities are computed to give a bar resistance on the rotor lamination length equal to the bar resistance computed on the total bar length with the bar real resistivity (rotor lamination length + bar extensions). The corrected electrical resistivity values are used in Flux® 2D, for internal computations and exports.

Inter bar resistance data


Inter bar resistance at 20°C					
End ring, avg (Ω)	9.438 E-6	C.S. end ring (Ω)	9.438 E-6	O.C.S. end ring (Ω)	9.438 E-6
Inter bar resistance at ref. temp.					
C.S. ref. temperature (°C)	20.0	O.C.S. ref. temperature (°C)	20.0		
End ring, avg (Ω)	9.438 E-6	C.S. end ring (Ω)	9.438 E-6	O.C.S. end ring (Ω)	9.438 E-6

Inter bar resistance data contains the inter bar resistance of each end ring


Inter bar inductance data

Inter bar inductance at 20°C					
End ring, avg (H)	1.925 E-8	C.S. end ring (H)	1.925 E-8	O.C.S. end ring (H)	1.925 E-8
Inter bar inductance at ref. temp.					
C.S. ref. temperature (°C)	20.0	O.C.S. ref. temperature (°C)	20.0		
End ring, avg (H)	1.925 E-8	C.S. end ring (H)	1.925 E-8	O.C.S. end ring (H)	1.925 E-8

Inter bar inductance data: Contains the inter bar inductance of each end ring

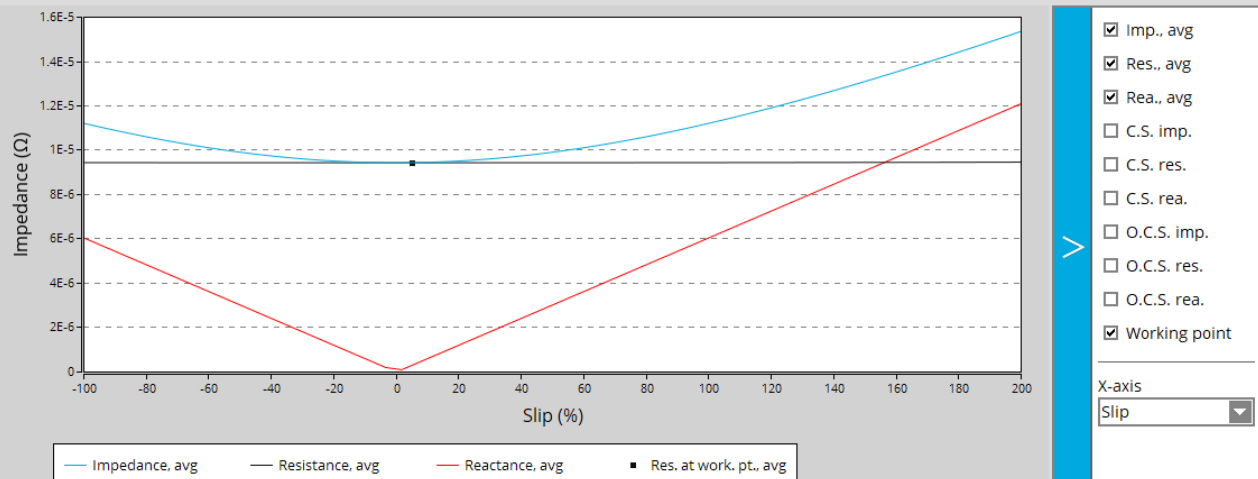Inter bar impedance curve versus slip at reference temperature


Inter bar impedance curve at reference temperature: Plot the end ring impedances in the range of possible slips, and the impedances at the working point defined in the input table "WORKING POINT EVALUATION"

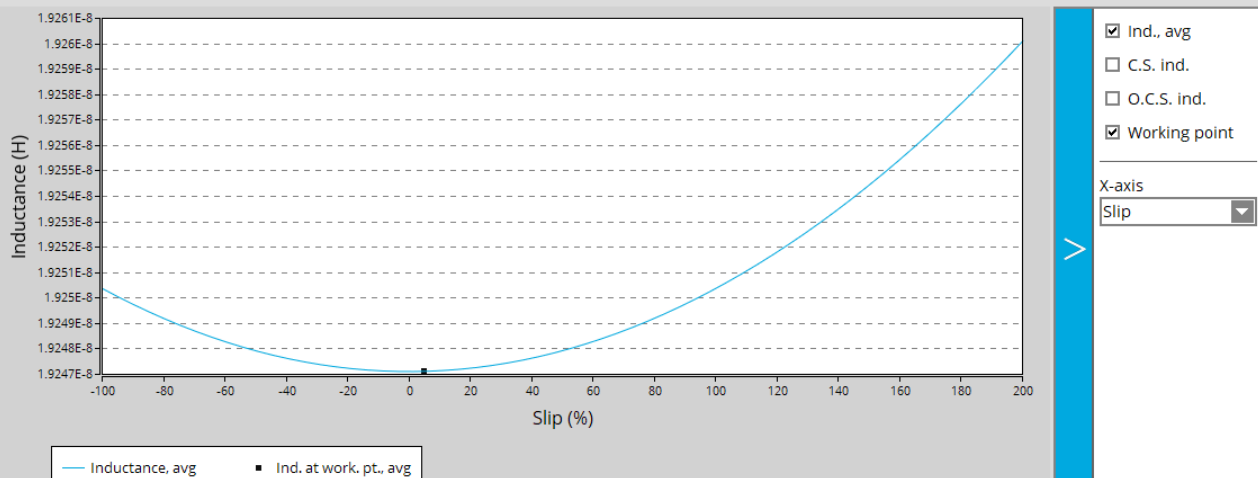Inter bar inductance curve versus slip at reference temperature

Inter bar inductance curve at reference temperature: Plot the end ring inductances in the range of possible slips, and the inductances at the working point defined in the input table "WORKING POINT EVALUATION"

2.7 Slot

2.7.1 Overview

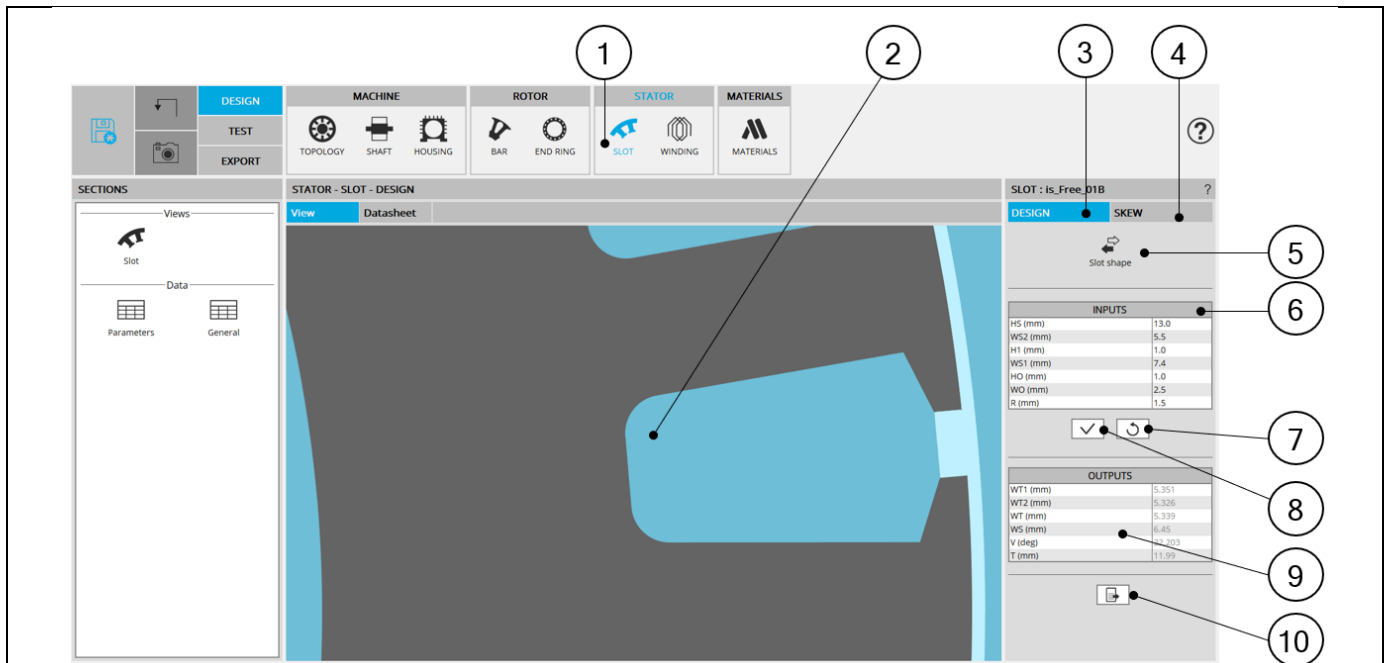


SLOTT – DESIGN - design area

1	Selection of the STATOR subset: SLOTT panel (Click on the icon SLOTT)
2	Visualization of the motor radial view with slot topology and dimensions.
3	DESIGN tab indicates the tools to define the slot topology and parameter values Note: By default, DESIGN tab is selected
4	SKEW tab indicates the tools to define the slot skew angle
5	"Slot shape" button allows access to the slot libraries which changes the slot topology. See additional information below.
6	User input parameter fields to enter the values.
7	Button to restore default input values.
8	Button to apply inputs. Pressing the "enter key" twice applies inputs too.
9	Output parameters (read only data) to complete the description of the topology.
10	Icon to export slot data into *.txt or *.xlsx files.

2.7.2 Slot – Design

2.7.2.1 Choose a slot topology

Clicking on the "Slot shape" button opens a dialog box, allowing access to the slot libraries. It allows visualizing, comparing, choosing and importing another slot topology to modify the current stator design.

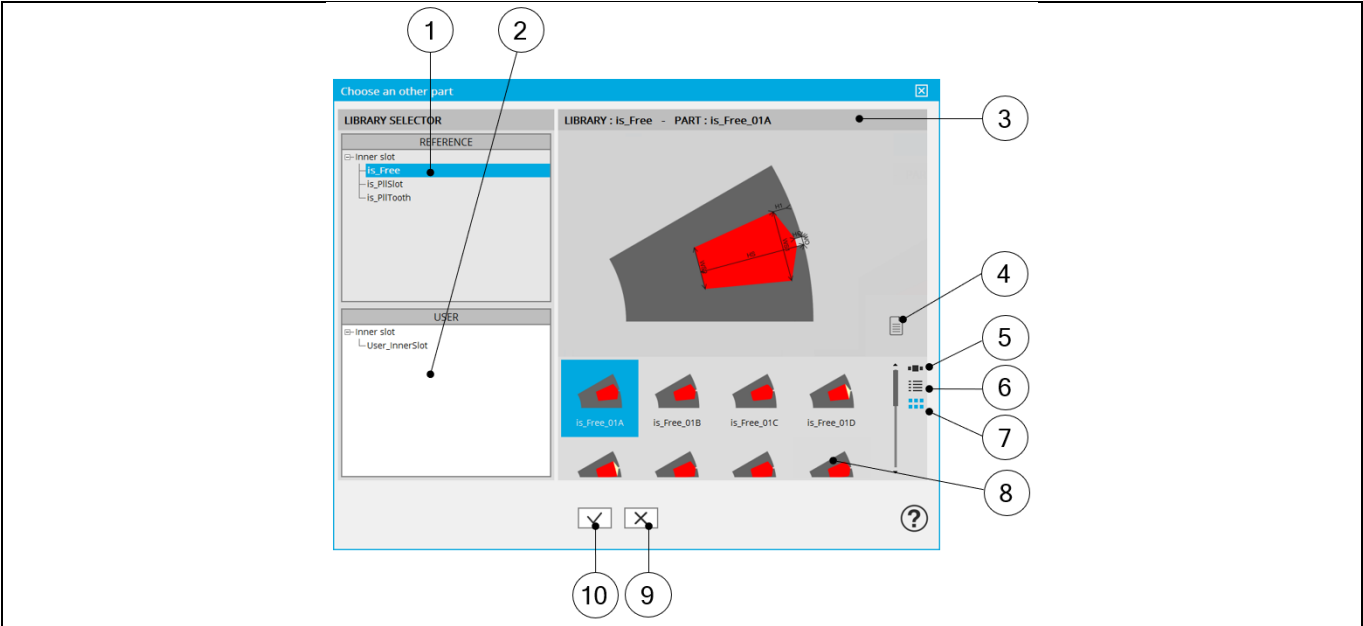

How to choose another slot topology?	
1	Visualization of reference libraries i.e. the libraries of slot topologies provided with FluxMotor®. Select them to view their content and choose the slot among them. See “Part Library” application for more information.
2	Visualization of user libraries. The default user library is “User_InnerSlot” See “Part Library” application for more information.
3	Area where the selected slot is displayed (static picture) – Topology + dimension labels.
4	Button to visualize the list of documents attached to the part. See additional information below.
5	Button to display thumbnails as a slide show.
6	Button to display thumbnails as a list.
7	Button to display thumbnails as a matrix view of pictures.
8	Area to visualize all the topologies of slots from the selected library.
9	Button to close the dialog box and come back to Motor Factory – DESIGN – Slot area.
10	Button to choose and import the selected slot to modify the current stator design.

2.7.2.2 Attached documents – Additional information

1	Attached document list after having clicked on button to display it (4).
2	“+” or “-” non-active buttons from “Motor Factory”. See “Part Library” application for more information.
3	List of attached documents (if present). A double click on the selected document opens it. Documents can be added only from Part Library application. See “Part Library” application for more information.
4	Button to show or hide the attached document list.

Visualization of attached documents

2.7.2.3 Inputs / Outputs

Specific inputs and outputs are considered for each slot topology.
The relevance of input parameters values can be evaluated by using “Part Factory” application.
See “Part Factory” application for more information.

Outputs are read only data. They complete the description of the topology.

SLOT : is_Free_01B ?

DESIGN SKEW

Slot shape

INPUTS	
HS (mm)	13.0
WS2 (mm)	5.5
H1 (mm)	1.0
WS1 (mm)	7.4
HO (mm)	1.0
WO (mm)	2.5
R (mm)	1.5

✓ ↺

OUTPUTS	
WT1 (mm)	5.351
WT2 (mm)	5.326
WT (mm)	5.339
WS (mm)	6.45
V (deg)	22.203
T (mm)	11.99

📄

Inputs / Outputs of parts

2

INPUTS	
HS (mm)	13.0
Slot height (mm)	5.5
H1 (mm)	1.0
WS1 (mm)	7.4
HO (mm)	1.0
WO (mm)	2.5
R (mm)	1.5

✓ ↺

OUTPUTS	
WT1 (mm)	5.351
WT2 (mm)	5.326
WT (mm)	5.339
WS (mm)	6.45
V (deg)	22.203
T (mm)	11.99


1 3

Inputs / Outputs stator slot

1	Selecting a parameter highlights it.
2	Selecting a parameter label displays the corresponding arrow on the picture.
3	Selecting a parameter displays the corresponding tooltip which gives information about the parameter.

2.7.3 Slot – Skew


2.7.3.1 Overview

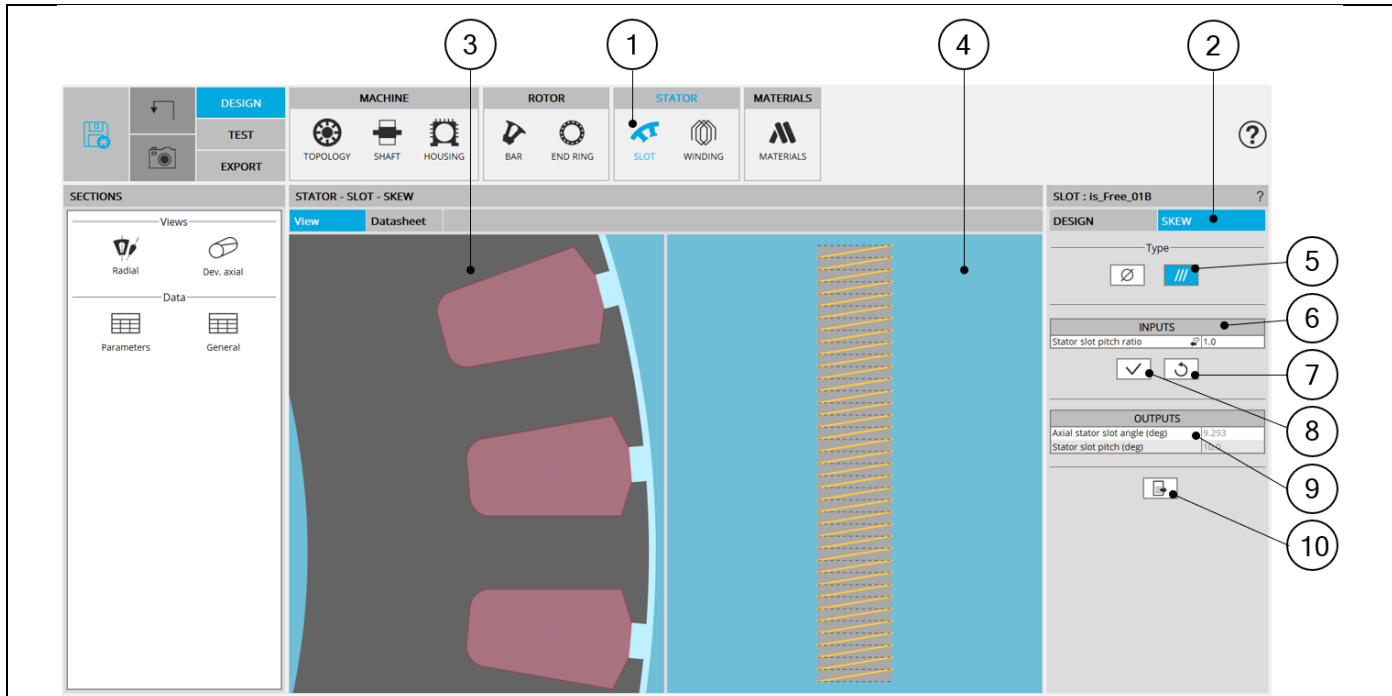

SLOT – SKEW design area

1	Selection of the STATOR subset: SLOT panel (Click on the icon SLOT).
2	Skew tab indicates the tool to define the slot skew angle.
3	Visualization of the machine radial view to visualize the slot skew.
4	Visualization of the stator developed view to visualize the slot skew.
5	Choices to define a skew: None – Continuous (Continuous in our example).
6	Skew inputs to be defined.
7	Buttons to validate the inputs (Pressing the “enter key” twice applies inputs too).
8	Buttons to restore the default input values.
9	Skew outputs (read only).
10	Button to export the skew data into *.txt or *.xlsx files.

2.7.3.2 Set a skew angle

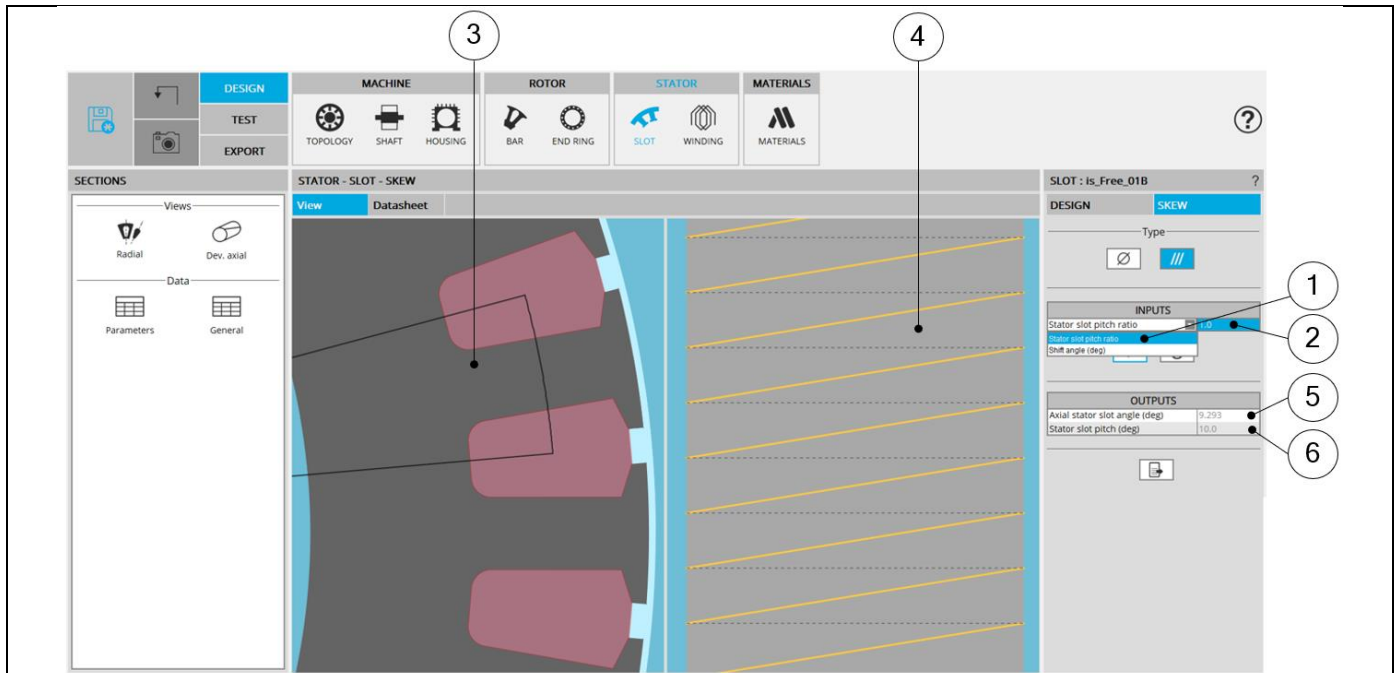

How to set a skew angle?


1	Choose the definition mode of the skew: Stator slot – Shift angle
2	Definition of the skew angle depending on the definition mode
3	Visualization of the chosen skew angle on the machine radial view
4	Visualization of the equivalent axial slot angle on the rotor developed view
5	Equivalent axial stator slot angle (read only)
6	Equivalent stator slot pitch (read only)

Note: The user can add a skew angle on the rotor or on the stator. If a skew is already defined in the rotor when setting a skew on the stator, the rotor skewing will be automatically reset to "None".

2.8 Winding

Please refer to the user help guide:

"MotorFactory_2020_3Phase_Winding" which is dedicated to the 3-Phase winding design General user information.

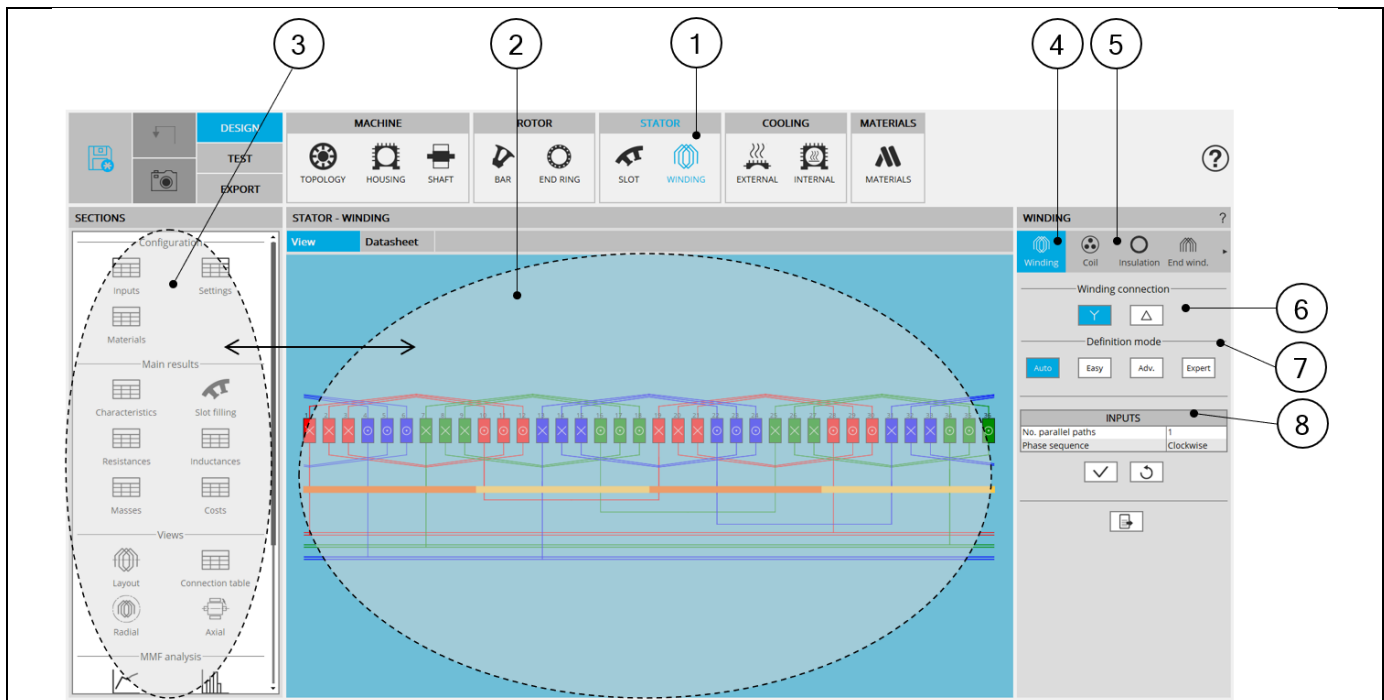

WINDING design area - Overview


1	Selection of the STATOR subset: WINDING panel (Click on the icon WINDING)
2	Once a winding is defined, corresponding results are automatically displayed in form of a winding report. Visualization of the winding characteristics (inputs, settings, materials, etc) is possible. Scrollbars allow browsing the whole document rapidly and having an overview of all the results. Using scrollbars, complete data can be accessed and visualized.
3	Shortcuts for displaying the corresponding chapter of the winding report.
4	Winding settings allow describing the winding architecture.
5	Winding settings allow describing the winding:
6	Choice of the winding connection: Y (Wye) or Δ (Delta).
7	Four modes allow defining and building the winding architecture .
Auto	Automatic mode used by default.
Easy	Easy mode, to choose solution among these FluxMotor® proposes.
Adv.	Advanced mode, to allow the user to define his own input parameters.
Expert	Expert mode to set the connection table.
8	User input parameter field to enter the value according to the considered mode.

Scrolling selection bar – Winding environment

1	Selection bar where Winding, Coil, End-winding and X-Factor sections can be selected
2	Section data can be reached thanks to shortcuts

2.9 Materials


2.9.1 Overview

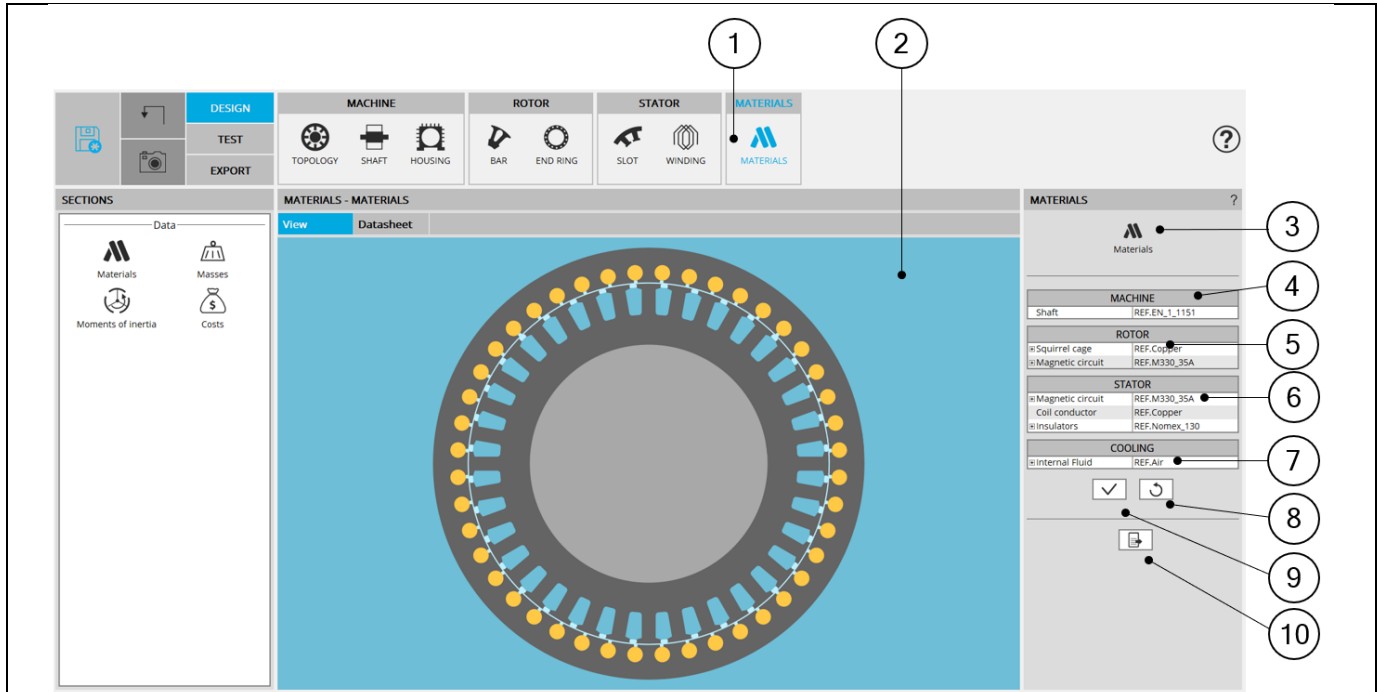

MATERIALS design area

1	Selection of the Material subset: MATERIALS panel (Click on the icon MATERIALS)
2	Visualization of the machine regions.
3	Direct access to open material manager. It allows seeing properties of materials.
4	Area to assign materials to machine regions. See additional information below.
5	Area to assign materials to rotor regions. See additional information below.
6	Area to assign materials to stator regions. See additional information below.
7	Area to assign materials to the airgap.
8	Button to restore default materials. Default materials are those defined as favorite materials in Material manager. See "Materials" application for more information.
9	Button to validate assignment of materials. Pressing the Enter key twice applies inputs too.
10	Icon to export the rotor material data into *.txt or *.xlsx files.


2.9.2 Rotor Inputs / Outputs

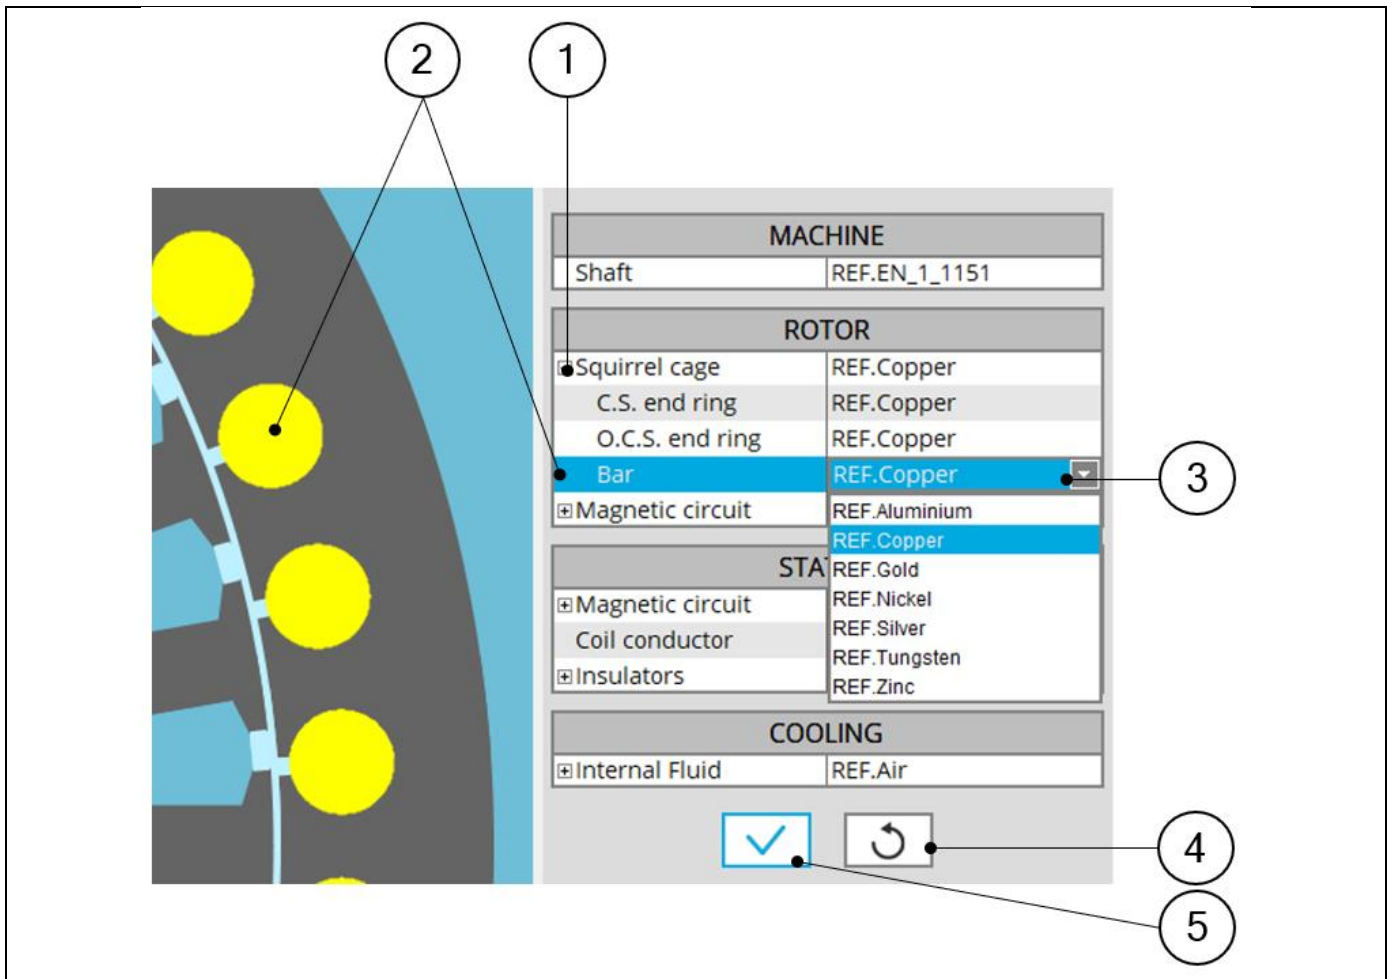

Assign Materials to BARS in the rotor

1	Expand the section dedicated to the squirrel cage. Several bar materials can be assigned to each part of the bar. Different materials can be assigned to each part of squirrel cage Here "Bar1" and "Bar2" can have different materials, as well as each end ring.
2	By selecting a region name (Bar1 for example) the corresponding face region is highlighted.
3	Expand the material list to choose a conductor material which will be assigned to the selected bar region.
4	Button to restore default materials. Default materials are those defined as favorite materials in Material manager. See "Materials" application for more information.
5	Button to validate assignment of materials. Pressing the Enter key twice applies inputs too.

2.9.3 How to assign materials? – Example for rotor lamination

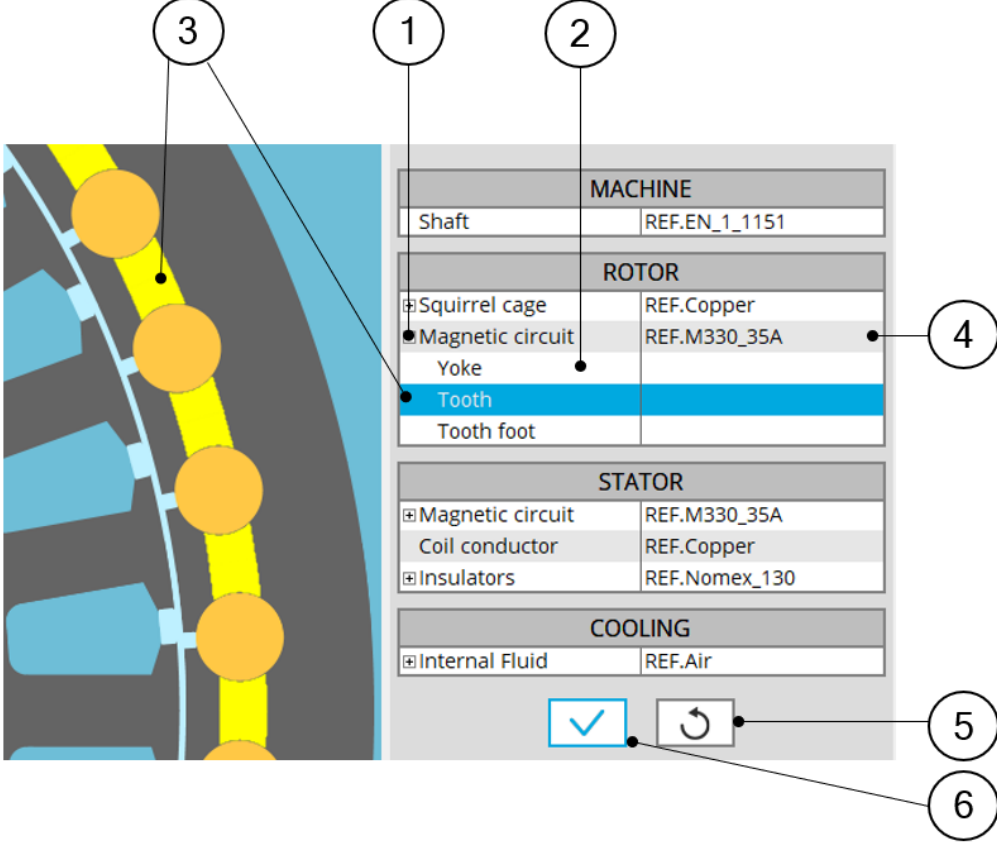

Assign materials to the rotor magnetic circuit

1	Expand the section dedicated to the magnetic circuit. Different materials (LAMINATION type or SOLID type) can be assigned to it.
2	The magnetic circuit can be subdivided into several parts. (Yoke, Tooth, Tooth foot)
3	By selecting a region name (Tooth for example) the corresponding face region is highlighted.
4	Expand the material list to choose a material which gets assigned to the magnetic circuit. Only one material can be assigned to the rotor magnetic circuit. In our example it is not possible to assign different materials to sub regions like Yoke and Tooth.
5	Button to restore default materials. Default materials are those defined as favorite materials in Material manager. See "Materials" application for more information.
6	Button to validate assignment of materials. Pressing the enter key twice applies inputs too.

For more information about the rules leading to the building of parts like magnets, please refer to Part Factory application.

2.9.4 How to assign materials? – Example for stator laminations

MACHINE	
Shaft	REF.EN_1_1151

ROTOR	
⊕ Squirrel cage	REF.Copper
⊕ Magnetic circuit	REF.M330_35A

STATOR	
⊕ Magnetic circuit	REF.M330_35A
Yoke	
Tooth	
Tooth foot	
Coil conductor	REF.Copper
⊕ Insulators	REF.Nomex_130

COOLING	
⊕ Internal Fluid	REF.Air

Assign materials to the stator magnetic circuit

1	Expand the section dedicated to the magnetic circuit. Different materials (LAMINATION type or SOLID type) can be assigned to it.
2	The magnetic circuit of the stator can be subdivided into several parts (Yoke, Tooth, Tooth foot etc.).
3	By selecting a region name (Tooth for example) the corresponding face region is highlighted.
4	Expand the material list to choose a material to assign to the magnetic circuit. Only one material can be assigned to the stator magnetic circuit. In our example, it is not possible to assign different materials to sub regions like Yoke, Tooth and Tooth foot for example.
5	Button to restore default materials. Default materials are those defined as favorite materials in Material database. See "Materials" application for more information.
6	Button to validate assignment of materials. Pressing the enter key twice applies inputs too.

For more information about the rules leading to the building of parts like slots, please refer to Part Factory application.

2.9.5 Materials for the winding

All the materials are selected in the material database.

Conductor materials are selected in the “Electrical Conductor” type material family.
Insulator materials are selected in the “Electrical Insulator” type material family.
Thicknesses of insulations are defined inside the winding settings panel – COIL tab.
Insulation materials are considered only if a corresponding thickness is defined.

MATERIALS ?

Materials

MACHINE

ShaftREF.EN_1_1151

ROTOR

Squirrel cageREF.Copper

Magnetic circuitREF.M330_35A

STATOR

Magnetic circuitREF.M330_35A

Coil conductorREF.Copper

InsulatorsREF.Nomex_130

WireREF.Nomex_130

ConductorREF.Nomex_130

CoilREF.Nomex_130

LinerREF.Nomex_130

Phase separatorREF.Nomex_130

COOLING

Internal FluidREF.Air

☒

1

2

3

4

5

6

7

8

Building the winding architecture – Choice of winding MATERIALS - Conductor and insulation

1	Conductor materials
2	Wire insulation
3	Conductor insulation
4	Coil insulation
5	Liner
6	Phase separator
7	Button to restore default materials. Default materials are those defined as favorite materials in Material database. See “Materials” application for more information.
8	Button to validate assignment of materials. Pressing the enter key twice applies inputs too.
*	Insulators: If all the above choices are same material, then the corresponding material name is written in the insulators field. Otherwise “Diversified” is written in the insulators field which means there are different materials.

2.9.6 Material datasheet

2

DESIGN

TEST

EXPORT

SECTIONS

Materials

Moments of inertia

Costs

MACHINE

SHAFT

HOUSING

BAR

END RING

SLOT

WINDING

MATERIALS

1

MATERIALS - MATERIALS

View

Datasheet

Materials					
Machine					
Shaft	REF.EN_1_1151				
Rotor					
Squirrel cage	REF.Copper	Magnetic circuit	REF.M330_35A		
Rotor - Squirrel cage					
C.S. end ring	REF.Copper	O.C.S. end ring	REF.Copper	Bar	REF.Copper
Stator					
Magnetic circuit	REF.M330_35A	Coil conductor	REF.Copper	Insulators	REF.Nomex_130
Stator - Insulators					
Wire	REF.Nomex_130	Conductor	REF.Nomex_130	Coil	REF.Nomex_130
Liner	REF.Nomex_130	Phase separator	REF.Nomex_130		
Cooling					
Internal Fluid	REF.Air				

Masses					
Total					
Total (kg)	17.472	Rotor (kg)	10.415	Stator (kg)	7.058
Rotor					
Shaft (kg)	5.599	Squirrel cage (kg)	1.442	Magnetic circuit (kg)	3.374
Rotor - Squirrel cage					
C.S. end ring (kg)	1.016 E-1	O.C.S. end ring (kg)	1.016 E-1	Bar (kg)	1.239
Stator					
Magnetic circuit (kg)	4.083	Winding (kg)	2.975		
Stator - Winding					
Electrical conductor (kg)	2.911	Total insulation (kg)	6.36 E-2		

Moments of inertia					
Rotor					

3

MATERIALS

Materials

MACHINE

Shaft

REF.EN_1_1151

ROTOR

Squirrel cage

REF.Copper

Magnetic circuit

REF.M330_35A

STATOR

Magnetic circuit

REF.M330_35A

Coil conductor

REF.Copper

Insulators

REF.Nomex_130

COOLING

Internal Fluid

REF.Air

4

EXPORT

MATERIALS design area

1	Selection of the Materials subset: MATERIALS panel (Click on the icon MATERIALS)
2	Shortcuts to reach material datasheet sections
3	Material datasheet where materials, masses, moment of inertia and costs are displayed
4	Icon to export rotor material data into *.txt or *.xlsx files.